

FÖRST
Rely on it



TR6D42

**OPERATOR AND
MAINTENANCE MANUAL**

CE
UK
CA

Redwood
Global Ltd

The English language is used for the original instructions.
Other languages are a translation of the original instructions.
(Directive 2006/42/EC)

Published on: 12/1/2022
Document ID: 13-00-002
Document version: v1.0

DISCLAIMER

This manual has been written by Redwood Global Ltd, to detail the safe operation and maintenance of the Först machine.

This document provides information on the design of the product, procedures for routine maintenance, servicing, operating instructions and offers a troubleshooting guide to follow in the event of an unexpected occurrence.

It is always the responsibility of the customer to train and advise not only his or her personnel, but also any contractors' personnel who are servicing, repairing, or operating the equipment, in all safety aspects.

Whilst great care and attention has been taken to ensure all information provided in this manual is safe and correct, Redwood Global Ltd accepts no responsibility whatsoever for any damage to equipment or injury or death to any person(s) which may occur while carrying out any of the instructions or procedures described within this manual.

All customer personnel must always satisfy themselves with the safety of any procedures described herein, being mindful of the circumstances in which any work is being carried out.

Please take the time to study all of the owner/operator literature supplied with your machine as soon as possible.

COPYRIGHT

Copyright © 2022 Operator and Maintenance Manual Redwood Global Ltd. All Rights Reserved.

Contains information owned by Redwood Global Ltd and / or its affiliates. Do not copy, store, transmit or disclose to any third party without prior written permission from Redwood Global Ltd.

TRADEMARKS

Other product and company names may be trademarks or registered trademarks of other companies, and are the property of their owners. They are used only for explanation, without intent to infringe.

CONTENTS

| | |
|---|--------|
| Preface | 13 |
| Description of the user | 13 |
| Left-hand and right-hand side | 14 |
| Purpose of these instructions | 15 |
| Conventions in this document | 16 |
| Obtaining documentation and information | 16 |
| Chapter 1: Machine overview | 17 |
| 1.1 Intended use | 18 |
| 1.2 Technical data | 19 |
| 1.3 Exterior components | 21 |
| 1.4 Engine compartment overview | 23 |
| 1.5 Chipping chamber overview | 25 |
| 1.6 Autointelligence system | 26 |
| 1.7 Feed roller controls | 27 |
| 1.8 Control panel | 28 |
| 1.9 Emergency stop buttons | 29 |
| 1.10 Control Screen | 30 |
| 1.10.1 Button Functions | 31 |
| 1.10.2 Navigation | 32 |
| 1.10.3 Home screen | 33 |
| 1.10.4 Sensors and DPF | 34 |
| 1.10.5 Machine Information | 35 |
| 1.10.6 Active Engine Codes (DM1) | 36 |
| 1.10.7 Historic engine codes (DM2) | 37 |
| 1.10.8 Settings | 38 |
| 1.10.9 Alarm Splash Screen | 39 |
| 1.11 Ignition switch | 40 |
| 1.12 Manufacturer's statutory plate | 41 |
| Chapter 2: Safety instructions | 43 |
| 2.1 Safe working | 44 |
| 2.2 General safety | 48 |
| 2.3 Noise test information | 49 |
| 2.4 Decals | 50 |

| | |
|---|----|
| Chapter 3: Transportation and storage | 53 |
| 3.1 Loading machine onto a trailer | 54 |
| 3.2 Unloading machine from a trailer | 54 |
| 3.3 Machine lifting | 55 |
| 3.4 Removing the discharge chute | 56 |
| 3.5 Storage | 59 |
| 3.5.1 Preparing the machine for storage | 59 |
| 3.5.2 Put into storage | 59 |
| 3.5.3 During storage | 59 |
| 3.5.4 Take out of storage | 60 |
| Chapter 4: Operation | 61 |
| 4.1 Preparation For Use | 62 |
| 4.2 Positioning the machine for use | 63 |
| 4.3 Safety & function test | 66 |
| Green and orange hopper buttons | 66 |
| 4.4 Feed roller speed adjustment | 69 |
| 4.5 Starting the Machine | 70 |
| 4.6 Operating the machine | 72 |
| 4.7 Shutting down the machine | 74 |
| 4.8 Removing blockages | 75 |
| 4.9 Removing the hopper | 78 |
| 4.10 Installing the hopper | 80 |
| 4.11 Safe slope operation | 82 |
| Chapter 5: Maintenance | 83 |
| 5.1 Routine maintenance | 85 |
| 5.2 Daily checks | 87 |
| 5.3 Weekly maintenance checks | 89 |
| 5.4 Aftertreatment System | 91 |
| 5.4.1 Diesel particulate filter (DPF) | 91 |
| 5.4.2 DPF regeneration | 91 |
| 5.4.3 DPF regeneration methods | 92 |
| 5.4.4 DPF regeneration lamp and switch | 92 |
| 5.4.5 Regeneration mode during operation (passive and active regeneration) | 93 |
| 5.4.6 Manual regeneration mode (forced regeneration) | 93 |
| 5.4.7 Conditions for forced regeneration | 93 |
| 5.4.8 Removal | 93 |
| 5.4.9 Removing ash and cleaning the DPF | 94 |

| | |
|--|------------|
| 5.5 Routine cleaning | 95 |
| 5.5.1 Pressure washing | 95 |
| 5.6 Opening the bonnet | 96 |
| 5.7 Opening the chipping chamber cover | 97 |
| 5.8 Removing the side panel | 99 |
| 5.9 Changing the blades | 101 |
| 5.10 About blade sharpening | 105 |
| 5.11 Turning or replacing the main anvil | 107 |
| 5.12 Adjusting the main belt tension | 110 |
| 5.13 Hydraulic oil filter | 113 |
| 5.14 Changing the hydraulic filter | 114 |
| 5.15 Draining the hydraulic oil | 115 |
| 5.16 Battery | 116 |
| 5.16.1 First aid | 116 |
| 5.16.2 Going into long term storage | 116 |
| 5.16.3 Replacing the battery | 117 |
| 5.16.4 Charging the battery | 118 |
| 5.16.5 Jump starting the battery | 119 |
| 5.17 Oils, fluids and lubricants | 120 |
| 5.18 Fastener tightening torques | 121 |
| 5.19 Tools and accessories | 122 |
| 5.20 Service schedule | 123 |
| Chapter 6: Troubleshooting | 125 |
| 6.1 The engine doesn't crank | 126 |
| 6.2 The engine cranks but doesn't fire | 126 |
| 6.3 The screen is blank | 127 |
| 6.4 The feed rollers are not turning | 127 |
| 6.5 The woodchipper suddenly stops running | 129 |
| 6.6 The woodchipper is struggling to chip wood | 129 |
| 6.7 Hydraulic oil is leaking | 130 |
| Hydraulics schematic | 131 |
| FörstAssist | 132 |
| Warranty | 133 |
| Warranty statement | 133 |
| Warranty Claims | 133 |

Certification134

Service record135

Index137

FIGURES

| | |
|--|----|
| Figure 1 - Left hand and right hand side | 14 |
| Figure 2 - Dimensions | 19 |
| Figure 3 - Exterior components left-hand side | 21 |
| Figure 4 - Exterior components right-hand side | 22 |
| Figure 5 - Engine compartment left-hand side | 23 |
| Figure 6 - Engine compartment right-hand side | 24 |
| Figure 7 - Chipping chamber overview | 25 |
| Figure 8 - Feed roller controls | 27 |
| Figure 9 - Control panel | 28 |
| Figure 10 - Emergency stop button | 29 |
| Figure 11 - Button functions | 31 |
| Figure 12 - Screen navigation | 32 |
| Figure 13 - Home screen | 33 |
| Figure 14 - Sensors and DPF screen | 34 |
| Figure 15 - Machine information screen | 35 |
| Figure 16 - Fault screen DM1 | 36 |
| Figure 17 - Fault screen DM2 | 37 |
| Figure 18 - Settings screen | 38 |
| Figure 19 - Alarm screen | 39 |
| Figure 20 - Ignition switch | 40 |
| Figure 21 - Manufacturer's statutory plate | 41 |
| Figure 22 - Noise test information | 49 |
| Figure 23 - Lifting eye | 55 |
| Figure 24 - Front rotation clamp | 56 |
| Figure 25 - Remove clamp and nut | 57 |
| Figure 26 - Rear rotation clamp | 57 |
| Figure 27 - Positioning the machine | 63 |
| Figure 28 - Hopper tray locking latch | 64 |
| Figure 29 - Hopper tray locked down | 65 |
| Figure 30 - Feed roller controls | 68 |
| Figure 31 - Feed roller speed adjustment | 69 |
| Figure 32 - Key in the ON position | 70 |
| Figure 33 - Key in the engine crank position | 70 |
| Figure 34 - Maximum throttle position | 71 |

| | |
|--|-----|
| Figure 35 - Controls | 72 |
| Figure 36 - Throttle idle position | 74 |
| Figure 37 - Key in the OFF position | 74 |
| Figure 38 - Pushing the flywheel away from you | 75 |
| Figure 39 - Pulling the flywheel towards you | 75 |
| Figure 40 - Spring hanger | 76 |
| Figure 41 - Feed roller spring tension | 76 |
| Figure 42 - Raising the top feed roller housing | 77 |
| Figure 43 - Disconnect plug | 78 |
| Figure 44 - Hopper bolts left side | 79 |
| Figure 45 - Hopper bolts right side | 79 |
| Figure 46 - Lifting hopper | 79 |
| Figure 47 - Install hopper | 80 |
| Figure 48 - Connect plug | 81 |
| Figure 49 - Hopper bolts left side | 81 |
| Figure 50 - Hopper bolts right side | 81 |
| Figure 51 - DPF (Diesel particulate filter) | 91 |
| Figure 52 - HEST lamp | 92 |
| Figure 53 - DPF regeneration lamp | 92 |
| Figure 54 - Bonnet | 96 |
| Figure 55 - Rotate the discharge chute | 97 |
| Figure 56 - Chipping chamber cover bolts | 97 |
| Figure 57 - Open chipping chamber cover | 98 |
| Figure 58 - Remove bolts | 99 |
| Figure 59 - Remove side panel | 100 |
| Figure 60 - Pushing the flywheel away from you | 101 |
| Figure 61 - Pulling the flywheel towards you | 101 |
| Figure 62 - Flywheel locking tool | 102 |
| Figure 63 - Installing the flywheel locking tool | 102 |
| Figure 64 - Blade removal | 103 |
| Figure 65 - Correct position of the back edge of the blade | 104 |
| Figure 66 - Blade sharpening wear limit: 80mm to 60mm | 105 |
| Figure 67 - Blade gaps | 106 |
| Figure 68 - Anvil clamp position | 107 |
| Figure 69 - Slide hammer | 107 |
| Figure 70 - Anvil removed | 108 |

| | |
|---|-----|
| Figure 71 - Anvil seat | 108 |
| Figure 72 - Anvil tight to the bedplate | 109 |
| Figure 73 - Anvil in vertical seat | 109 |
| Figure 74 - Main belt tensioner | 110 |
| Figure 75 - Correct main belt tension | 111 |
| Figure 76 - Adjust tension | 112 |
| Figure 77 - Hydraulic oil filter | 113 |
| Figure 78 - Lifting tab | 114 |
| Figure 79 - Battery terminals | 117 |
| Figure 80 - Jump start | 119 |

TABLES

Table 1 - Technical data19

Table 2 - Safety and function test 66

Table 3 - Daily checks87

Table 4 - Weekly checks 89

Table 5 - Shim part numbers105

Table 6 - Oils, fluids and lubricants120

Table 7 - Torque settings121

Table 8 - Tools and accessories122

Table 9 - Service schedule123

This page intentionally left blank

PREFACE

DESCRIPTION OF THE USER

These instructions are intended for the end-user of the TR6D42.

The end-user can be described as each person who interacts directly with the machine. The end-user typically includes, but is not limited to:

- Operator/Owner
- Hirer
- Maintenance personnel or technician

All use of this machinery shall only be carried out by an authorised and properly qualified person of 18 years or older, who:

- Has read and understood this manual
- Is familiar with operating similar equipment
- Knows how to control this machinery
- Is aware of all possible dangers and acts accordingly
- Obeys advice on safe working practices

LEFT-HAND AND RIGHT-HAND SIDE

In this manual "left-hand" and "right-hand" mean your left and right when you are standing facing forward, while standing on the footplate.

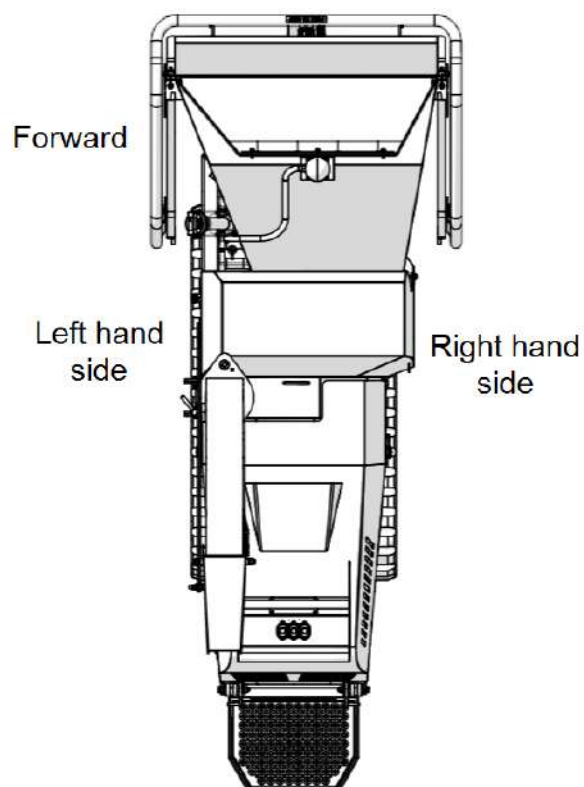


Figure 1 - Left hand and right hand side

PURPOSE OF THESE INSTRUCTIONS

Thank you for purchasing/hiring this Först wood chipping machine.

The purpose of this document is to make you familiar with the operation and maintenance of the machine, so that you can safely operate it as an end-user. This documentation should therefore be regarded as an integral part of the machine.

By observing the contents of this manual, we hope the machine gives safe and productive service. This user manual is intended for the owner/operator to safely and effectively operate this machine and carry out routine maintenance between services.

This is not a comprehensive service manual. Refer to the Service Schedule for routine maintenance and when to take the machine to a service specialist. For engine maintenance, please refer to the engine manual supplied with this machine.

This machine has been through a pre-delivery inspection before leaving the factory and is ready to use.



CAUTION

Before use and as a minimum, the safety and machine operation sections covered in Chapters 3 and 4 must be read and understood. Failure to do so could result in serious injury or loss of life to the operator and others nearby.

Also, damage to property and this machine may occur. Please observe and obey all warning signs (decals) located on the machine. Their meaning is covered in Refer to "Decals" on page 50

Redwood Global Ltd endeavour to continuously develop and improve its products. They reserve the right to make changes at any time, without notice or incurring any obligation.

Continuous improvement will affect machine design and production so there may be minor discrepancies between the actual product and this manual.

CONVENTIONS IN THIS DOCUMENT

This document uses the following safety notices and tips:



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in moderate injury or damage the product.

NOTICE

Indicates an important situation which, if not avoided, may seriously impair operations.



Additional information relating to the current section.

Cross references:

- Refer to... A cross-reference to a related or more detailed topic.

Image references

- (3, Figure 2) A reference to item 3 in Figure 2.

OBTAINING DOCUMENTATION AND INFORMATION

The latest version of the documentation is available at the following address:

<https://forstglobal.com/my-forst/manuals>

CHAPTER 1: MACHINE OVERVIEW

In this chapter:

| | |
|---|----|
| 1.1 Intended use | 18 |
| 1.2 Technical data | 19 |
| 1.3 Exterior components | 21 |
| 1.4 Engine compartment overview | 23 |
| 1.5 Chipping chamber overview | 25 |
| 1.6 Autointelligence system | 26 |
| 1.7 Feed roller controls | 27 |
| 1.8 Control panel | 28 |
| 1.9 Emergency stop buttons | 29 |
| 1.10 Control Screen | 30 |
| 1.10.1 Button Functions | 31 |
| 1.10.2 Navigation | 32 |
| 1.10.3 Home screen | 33 |
| 1.10.4 Sensors and DPF | 34 |
| 1.10.5 Machine Information | 35 |
| 1.10.6 Active Engine Codes (DM1) | 36 |
| 1.10.7 Historic engine codes (DM2) | 37 |
| 1.10.8 Settings | 38 |
| 1.10.9 Alarm Splash Screen | 39 |
| 1.11 Ignition switch | 40 |
| 1.12 Manufacturer's statutory plate | 41 |

1.1 INTENDED USE

The Först TR6D42 is designed to be hand fed and reduce wood material up to 150mm (6 inch) in diameter to woodchip. This machine is capable of processing up to 5 tonnes of wood per hour.

1.2 TECHNICAL DATA

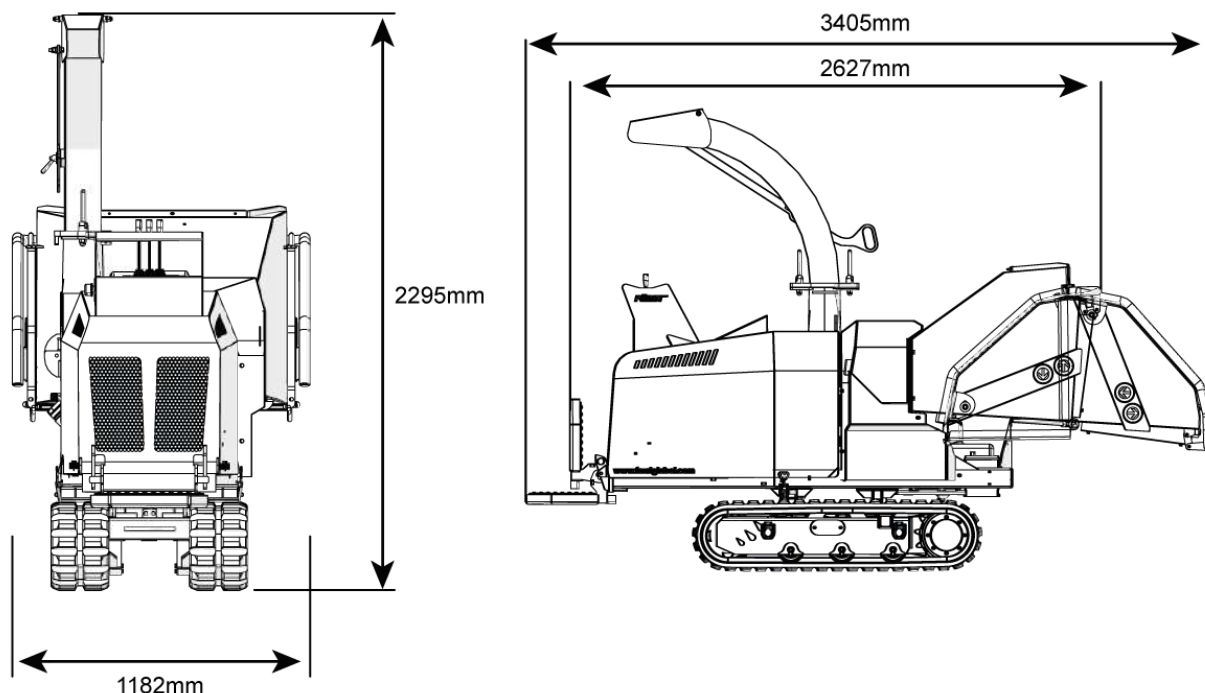


Figure 2 - Dimensions


Table 1 - Technical data

| Technical Data | TR6D42 |
|--------------------------|----------------|
| Part number | 13-A-033 |
| Weight | |
| Overall weight | 1450kg |
| Engine | |
| Engine Type | Doosan D18 |
| Maximum Power | 42hp (31kW) |
| Engine Oil | 15W-40 E9 |
| Cooling Method | Water cooled |
| Starting Method | Electric |
| Fuel Type | Diesel (EN590) |
| Fuel Capacity | 30 litres |
| Hydraulics | |
| Hydraulic Oil Capacity | 17 litres |
| Hydraulic Oil Type | ISO 46 (VG 46) |
| Electrical System | |

| Technical Data | TR6D42 |
|------------------------------|------------------------------|
| Voltage | 12V DC Negative Earth |
| Battery | 068 75 Ah |
| Rollers | |
| Roller Feed | Twin series hydraulic motors |
| Material Processing | |
| Maximum Material Diameter | 150 mm (6 inch) |
| Material Processing Capacity | 5 Tons/Hour |

1.3 EXTERIOR COMPONENTS


Below are the components located on the left side of the machine.

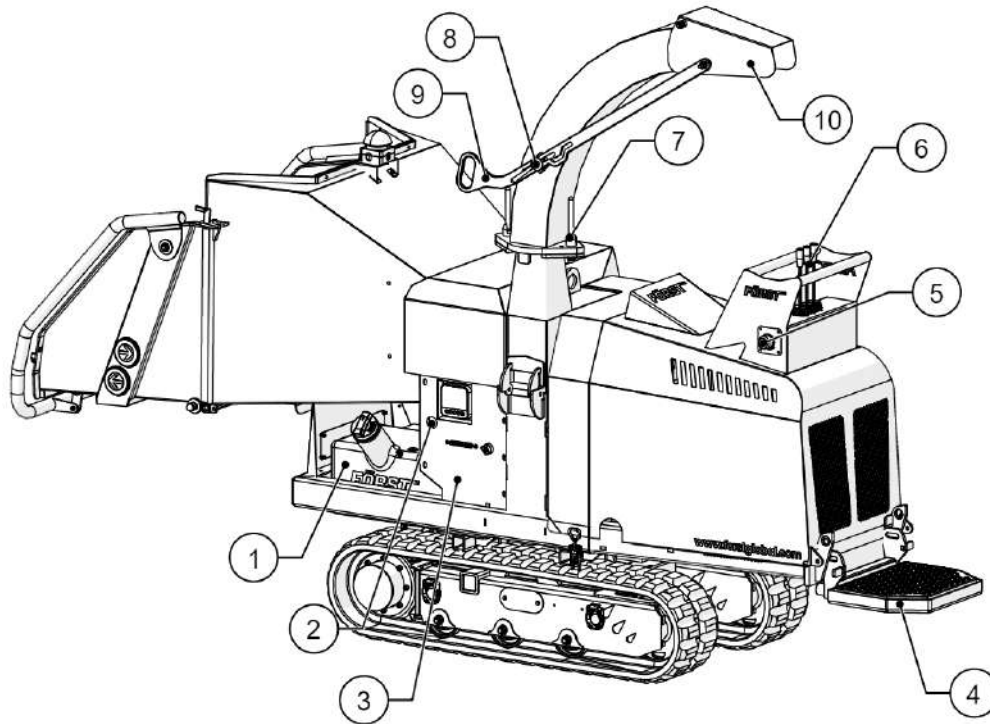

- | | |
|-----------------------------|------------------------|
| 1 Fuel tank | 6 Control levers |
| 2 Feed roller speed control | 7 Chute rotation clamp |
| 3 Control panel | 8 Chute handle clamp |
| 4 Foot plate | 9 Chute handle |
| 5 Throttle | 10 Chute hood |

Figure 3 - Exterior components left-hand side

Below are the components located on the right side of the machine.

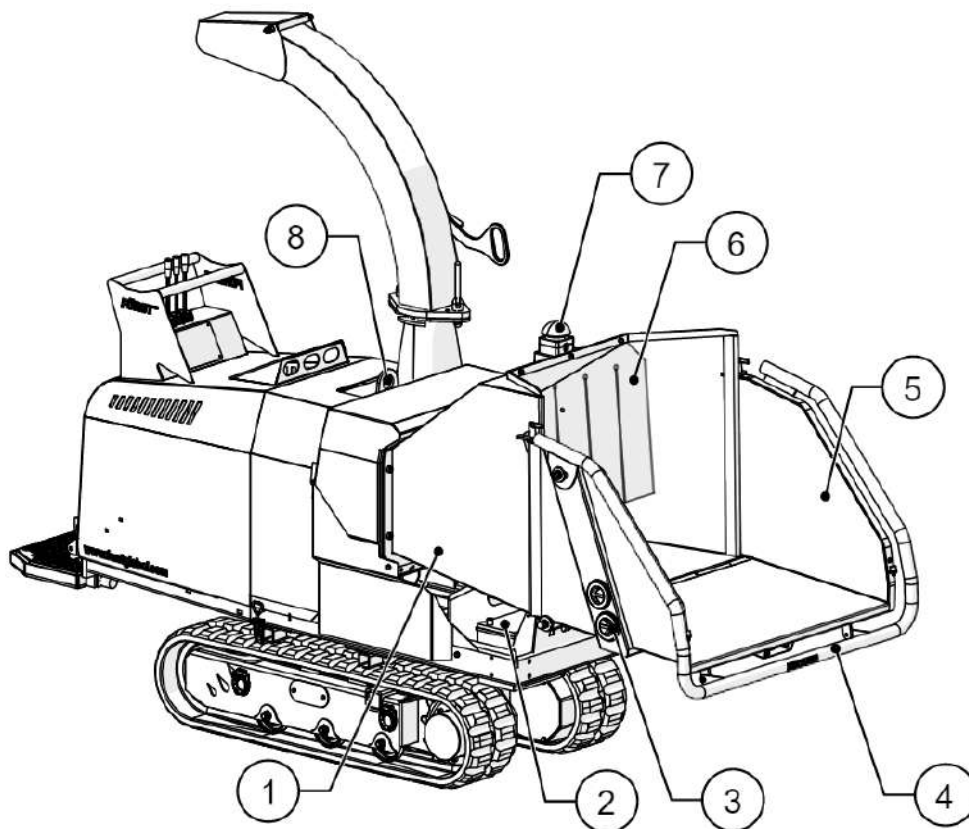


- | | |
|-----------------------|-------------------|
| 1 Hopper | 5 Hopper tray |
| 2 Battery | 6 Safety curtains |
| 3 Hopper tray buttons | 7 Emergency stop |
| 4 Stop bar | 8 Lifting eye |

Figure 4 - Exterior components right-hand side

1.4 ENGINE COMPARTMENT OVERVIEW


Below are the components of the engine located on the left side of the engine.

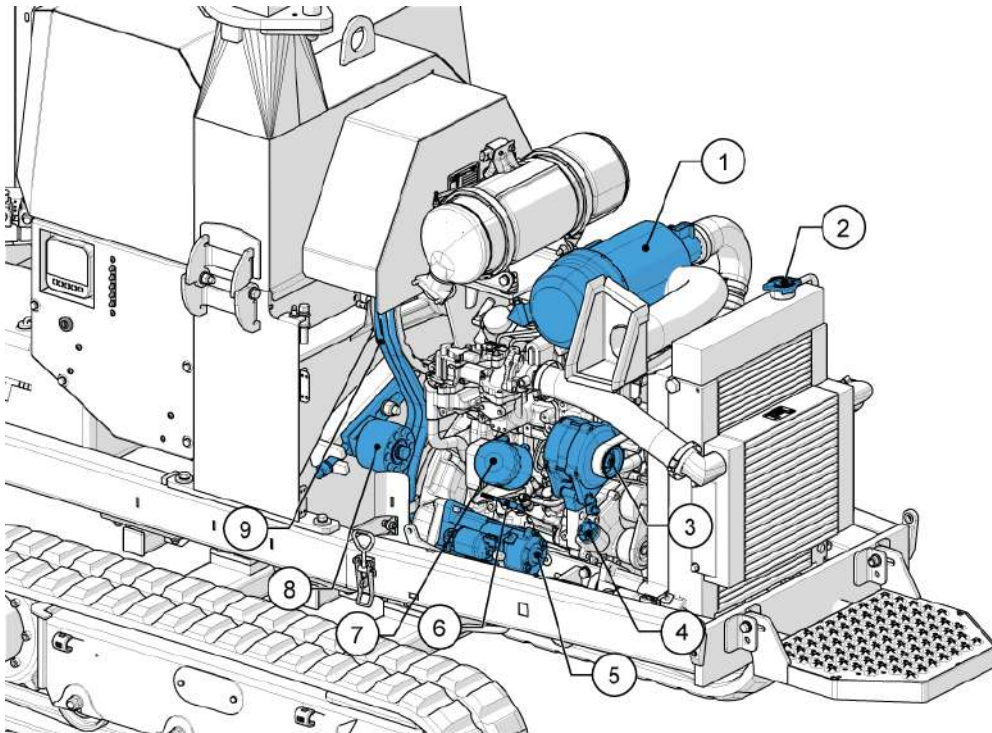

- | | |
|-------------------------|------------------------|
| 1 Air filter assembly | 6 Engine oil dip stick |
| 2 Radiator filler cap | 7 Engine oil filter |
| 3 Alternator | 8 Belt tensioner |
| 4 Engine oil filler cap | 9 V-belt |
| 5 Starter motor | |

Figure 5 - Engine compartment left-hand side

Below are the components located on the right side of the engine.

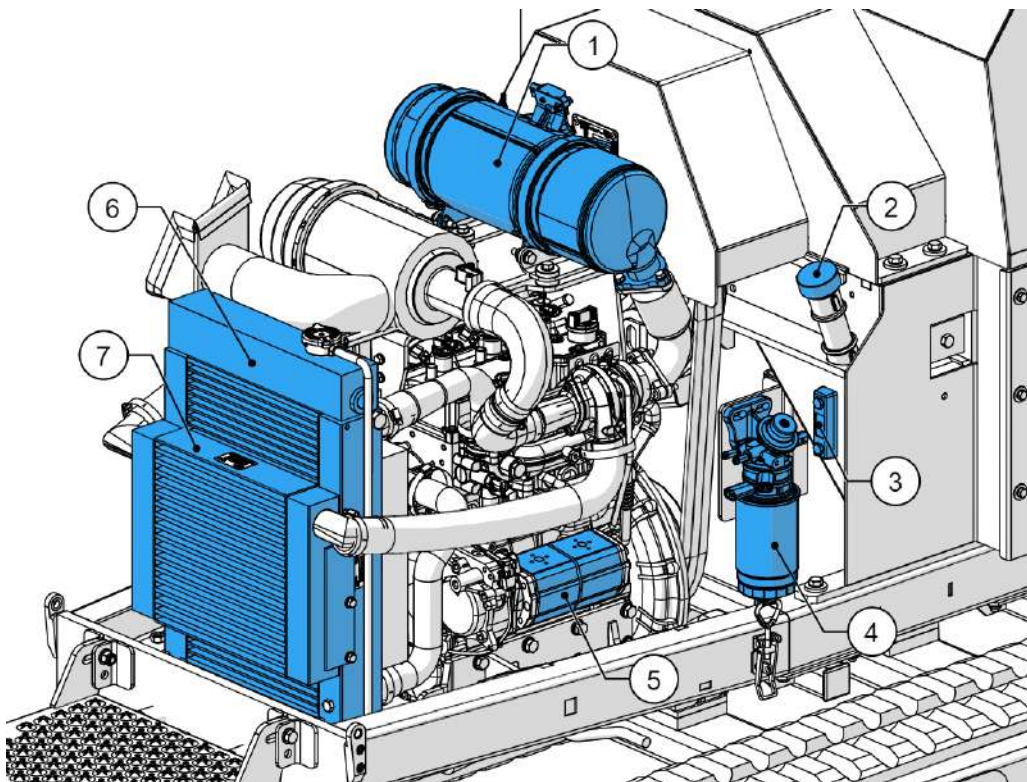


- | | |
|-----------------------------------|----------------------|
| 1 Diesel particulate filter (DPF) | 5 Hydraulic oil pump |
| 2 Hydraulic oil filler cap | 6 Radiator |
| 3 Sight glass | 7 Intercooler |
| 4 Fuel filter | |

Figure 6 - Engine compartment right-hand side

1.5 CHIPPING CHAMBER OVERVIEW

Chipping chamber overview:

- Refer to "Opening the chipping chamber cover" on page 97

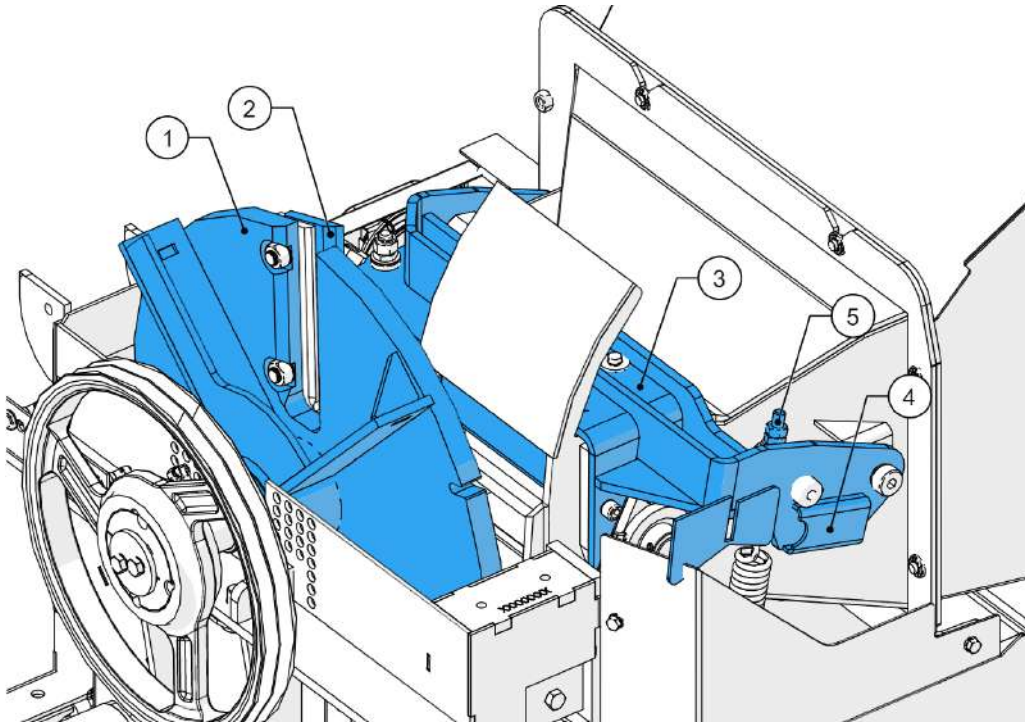

- | | |
|----------------------------------|-------------------------|
| 1 Flywheel | 4 TFR lifting tool slot |
| 2 Flywheel blade | 5 Spring hanger nut |
| 3 Top feed roller (TFR) assembly | |

Figure 7 - Chipping chamber overview

1.6 AUTOINTELLIGENCE SYSTEM

The woodchipper incorporates the Först Autointelligence system. This system monitors and manages the machine's electrical system.

For example, the Autointelligence system:

- Will stop and start the feed rollers, making sure that the cutting conditions remain within the optimum limits. This maximises throughput while minimising jams and blockages.
- When the flywheel speed drops below the lower threshold, the Autointelligence system stops the feed rollers. The flywheel speed will increase past the middle threshold, and the feed rollers will restart and feed wood into the machine again.
- Will inform you when the machine requires routine maintenance or service.



WARNING

There will be times when the material is being cut, and the feed will momentarily stop until engine speed increases. At this point, the feed rollers will start without warning.

1.7 FEED ROLLER CONTROLS

Red stop bar

The stop bar (1, Figure 8) located on the hopper tray is used to stop the feed rollers during normal operation. When pushed, the spring-loaded bar interrupts power to the feed rollers, and they stop instantly.

The stop bar must be pushed through its full travel to activate the proximity switch.




CAUTION

When the stop bar or E-stop is pushed, the engine will continue to run and the flywheel will still be turning.

Forward and backwards buttons

The green and orange buttons are used to control the feed roller direction.

- The **green** button (3, Figure 8) turns the feed rollers forward.
- The **orange** button (2, Figure 8) turns the feed rollers backward.

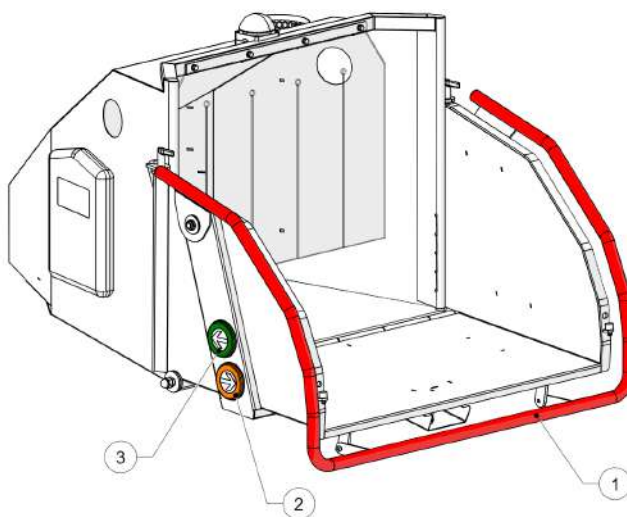


- | | |
|-------------------------|------------------------|
| 1 Stop bar | 3 Green forward button |
| 2 Orange reverse button | |

Figure 8 - Feed roller controls

1.8 CONTROL PANEL

The control panel is located on the side panel. On the control panel you will find the following:

- Display screen
 - ▶ Refer to "Control panel" on page 28
- Ignition switch
 - ▶ Refer to "Ignition switch" on page 40
- Grease bank
- Control valve speed adjust

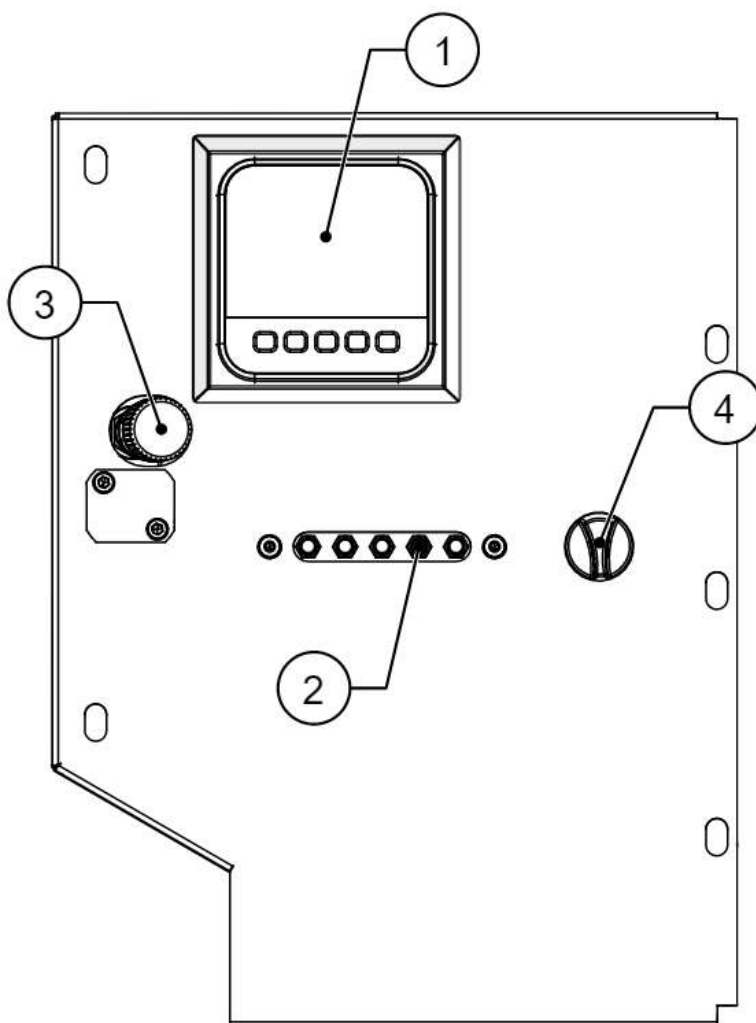

- | | |
|------------------|------------------------------|
| 1 Display screen | 3 Control valve speed adjust |
| 2 Grease bank | 4 Ignition switch |

Figure 9 - Control panel


1.9 EMERGENCY STOP BUTTONS



WARNING

Pushing an emergency stop button does not stop the engine.

There is one emergency stop button located on the top of the hopper.
Push the emergency stop to stop the feed rollers instantly.

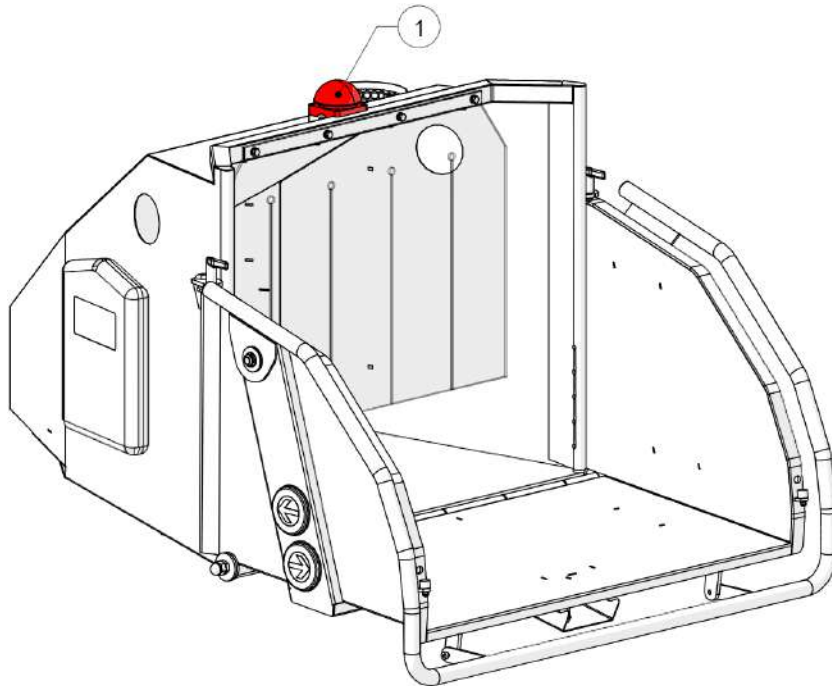

1 Emergency stop button

Figure 10 - Emergency stop button

NOTICE

Pull the emergency stop button up to reset.

1.10 CONTROL SCREEN

The control screen houses the Först Autointelligence software. The software maintains and controls all functionality of the machine.

The control screen also displays information for all aspects of the machine, such as:

- Flywheel speed
- Engine speed
- Machine sensor status
- Throttle type
- Engine type

The control screen also shows all current and archived errors that the machine may have experienced. Först service personnel will need this information if a fault occurs in the machine.

1.10.1 BUTTON FUNCTIONS

Each button performs multiple functions depending on which screen is displayed.

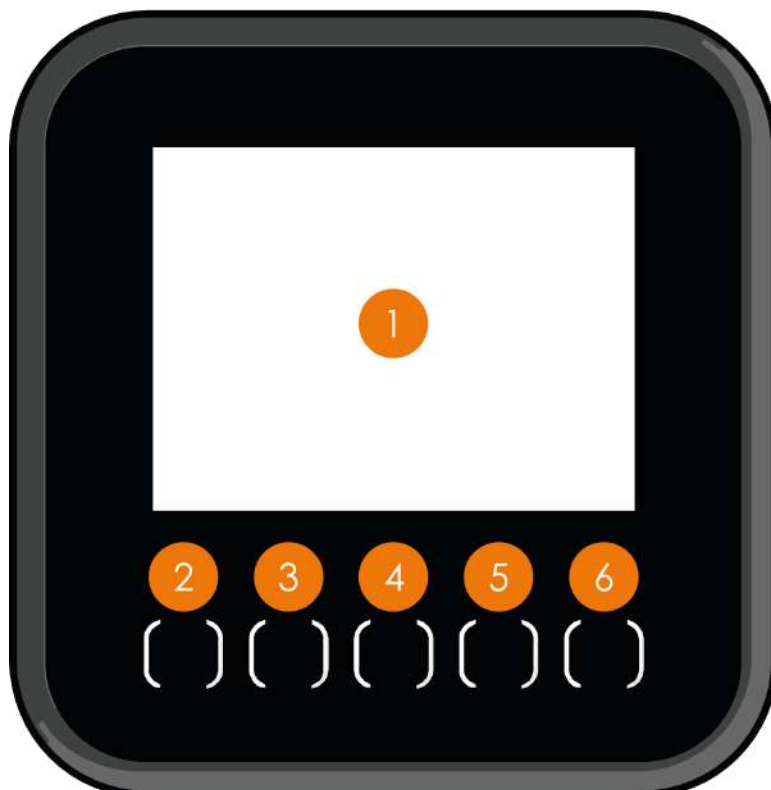


Figure 11 - Button functions

| No. | Description |
|-----|---|
| 1 | Screen - displays information |
| 2 | Minus button - press to switch between options of highlighted icon, this button also activates the DPF (Diesel Particulate Filter) forced regeneration sequence, or reduces engine speed |
| 3 | Left button - press to navigate left through the on-screen icons and reset the fuel counter to zero |
| 4 | Menu button - press to cycle through screens, press and hold to return to the home screen |
| 5 | Right button - press to navigate right through the on-screen icons and reset the timer to zero |
| 6 | Plus button - press to switch between options of highlighted the highlighted icon, this button also inhibits the DPF regeneration sequence. When in TR mode pressing the button increases the engine speed. |

1.10.2 NAVIGATION

This section describes how to navigate within the software.



Figure 12 - Screen navigation

| No. | Description |
|-----|--|
| 1 | Minus button - when an icon is highlighted, press this button to navigate left through the icons options |
| 2 | Left arrow - use this button to navigate left through the icons on the screen |
| 3 | Menu - use this button to cycle through all screens on the control screen |
| 4 | Right arrow - use this button to navigate right through the icons on screen |
| 5 | Plus button - with an icon highlighted, press this button to cycle right through the icons options |

1.10.3 HOME SCREEN

The home screen displays by default once the machine is powered on. On the home screen you can see the actual engine speed, the target speed of the flywheel, the amount of fuel used and the engine running time since the last manual reset.

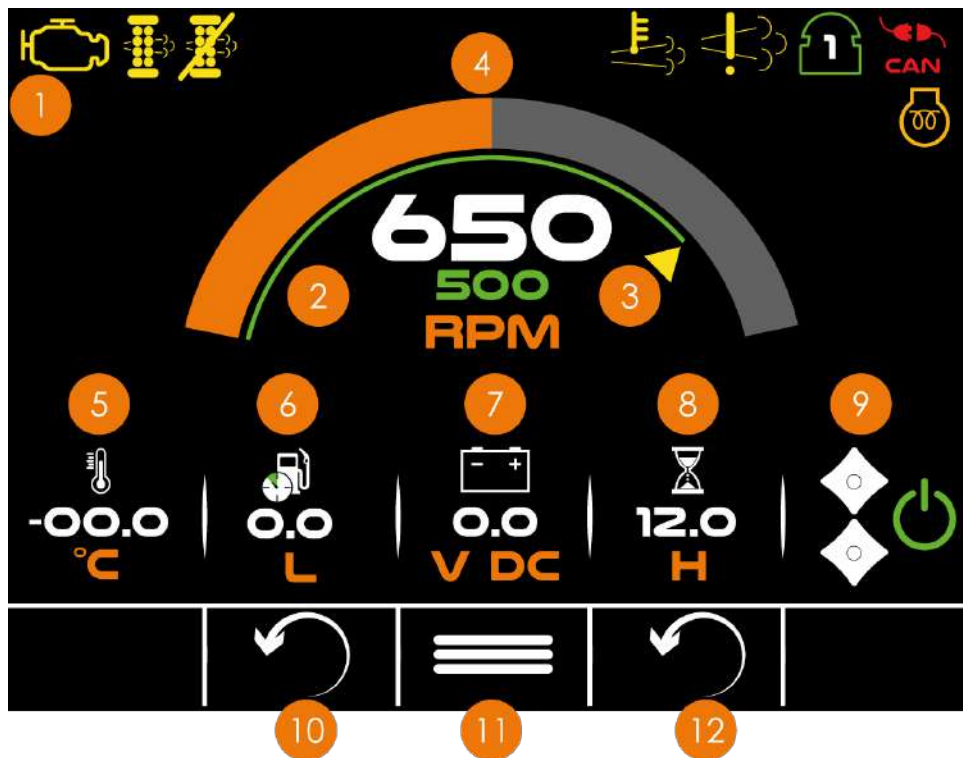


Figure 13 - Home screen

| No. | Description |
|-----|---|
| 1 | Warning icons - these display if the machine has a fault |
| 2 | Actual speed - displays the actual engine speed |
| 3 | Target speed - displays the engine target speed |
| 4 | Flywheel speed - displays the actual flywheel speed |
| 5 | Thermometer - displays the air temperature |
| 6 | Fuel - displays the fuel consumed since the last manual reset |
| 7 | Battery - displays the battery voltage |
| 8 | Hours - displays the hours since last manual reset |
| 9 | Feed rollers - displays if feed rollers are active |
| 10 | Fuel reset button |
| 11 | Menu button |
| 12 | Hour reset button |

1.10.4 SENSORS AND DPF

The sensors and DPF page displays the sensor and DPF status. If a sensor is tripped the corresponding icon will illuminate or extinguish.

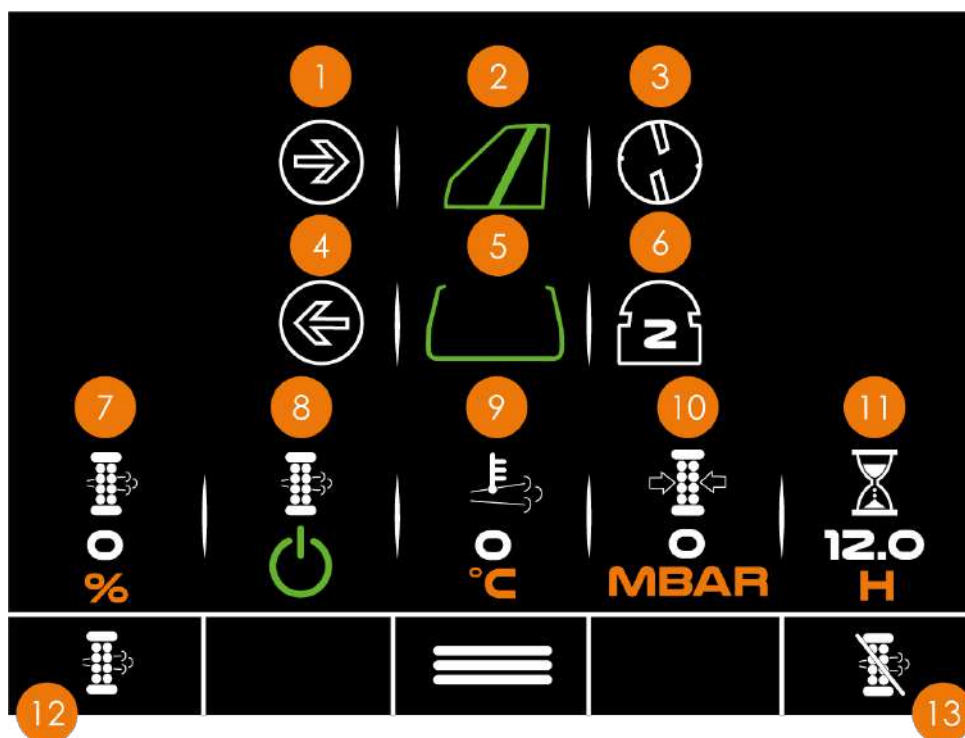


Figure 14 - Sensors and DPF screen

| No. | Description |
|-----|---|
| 1 | Forward button sensor - while this is active the icon illuminates green |
| 2 | Tray sensor - if the tray is down the icon illuminates green |
| 3 | Flywheel sensor - every time a spoke passes the sensor, the icon flashes green |
| 4 | Reverse button sensor - while this is active, the button illuminates green |
| 5 | Stop bar sensor - if the stop bar is pressed the icon illuminates white |
| 6 | E-Stop sensor - the E-Stop illuminates green when pressed, red if there is a fault and the number indicates which E-Stop has been pressed |
| 7 | Soot percentage - displays how much soot is in the system |
| 8 | Regen active - the power icon illuminates green when the system regeneration is active |
| 9 | Exhaust gas temperature- shows the temperature of the exhaust gas |
| 10 | DPF pressure differential - displays the pressure in the DPF system |
| 11 | Engine hours - displays the total amount of engine hours |
| 12 | Forced regeneration - press the button below this icon to force the machines DPF system to regenerate |
| 13 | Inhibit regeneration - press the button below this icon to prevent the DPF system to regenerate |

1.10.5 MACHINE INFORMATION

This screen displays all of the machines information such as its engine and how many spokes it has. By default all features in this screen are locked and any changes to these settings are password protected. Only qualified Först service personnel should change any settings in this screen.

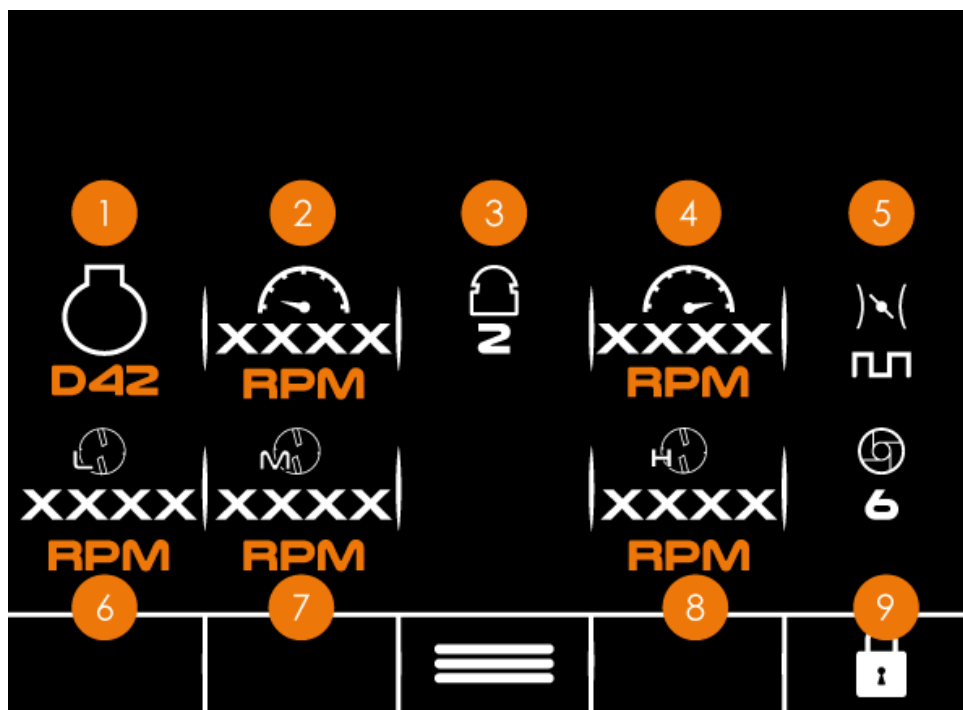


Figure 15 - Machine information screen

| No. | Description |
|-----|--|
| 1 | Engine type - displays the engine in this machine |
| 2 | Min RPM (revolutions per minute) - displays the idle speed of the engine with the throttle on its lowest setting |
| 3 | E-Stop count - shows how many E-Stops are on this machine |
| 4 | Max RPM - displays the maximum speed of the engine with the throttle in its highest setting |
| 5 | Throttle type - displays the throttle type on this machine |
| 6 | Flywheel low threshold - displays the lowest chipping threshold |
| 7 | Medium threshold - displays the medium chipping threshold |
| 8 | High threshold - displays the highest chipping threshold |
| 9 | Spokes - displays the number of spokes the machines flywheel has |

1.10.6 ACTIVE ENGINE CODES (DM1)

This screen displays any active fault codes. If your machine has a problem, the corresponding fault code displays on this screen. If this happens, contact Först service personnel and quote the error code shown on this screen when asked.

You can navigate to this screen by pressing the menu button until the screen appears.

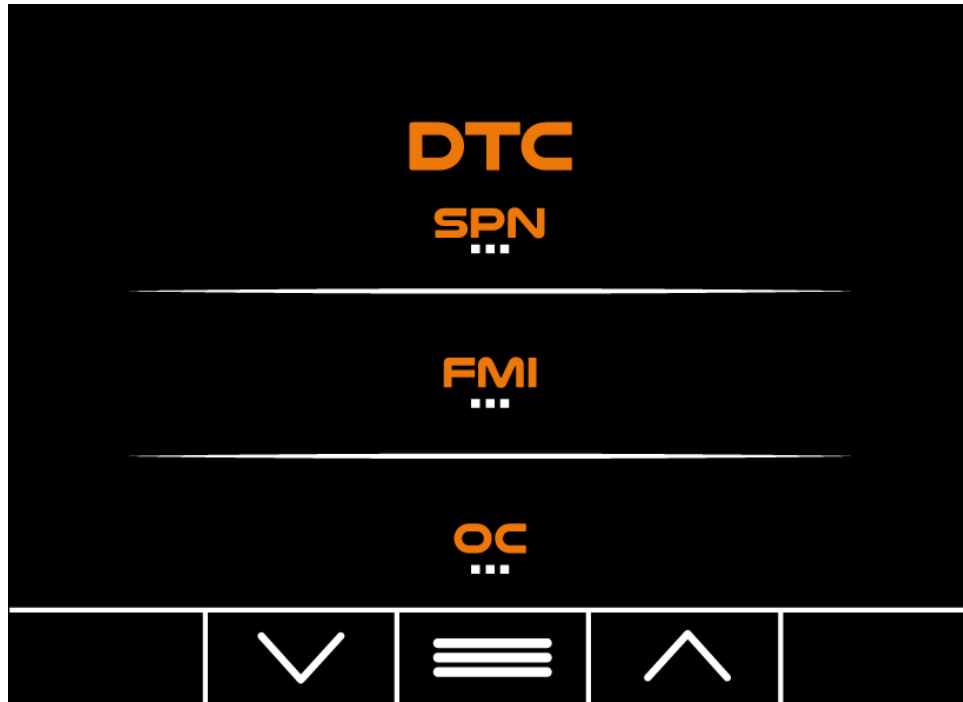


Figure 16 - Fault screen DM1

1.10.7 HISTORIC ENGINE CODES (DM2)

This screen displays archived fault codes. Först service personnel may need to access this information to see a full history of your machine.

You can navigate to this screen by pressing the menu button until the screen appears.

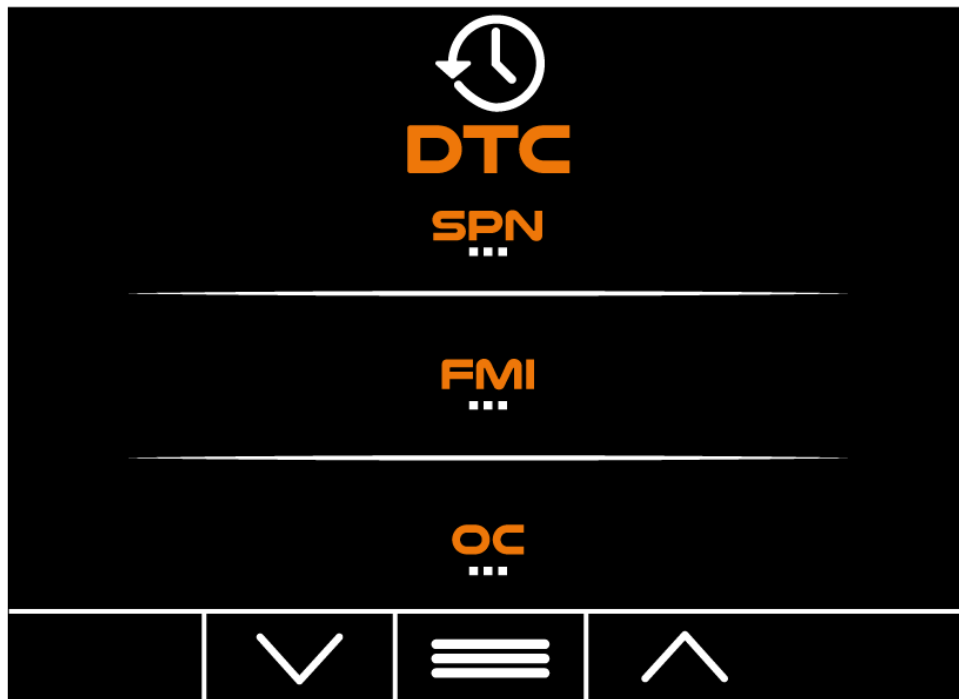


Figure 17 - Fault screen DM2

1.10.8 SETTINGS

In this screen you can adjust the pressure unit type, fuel unit type and the screen brightness.

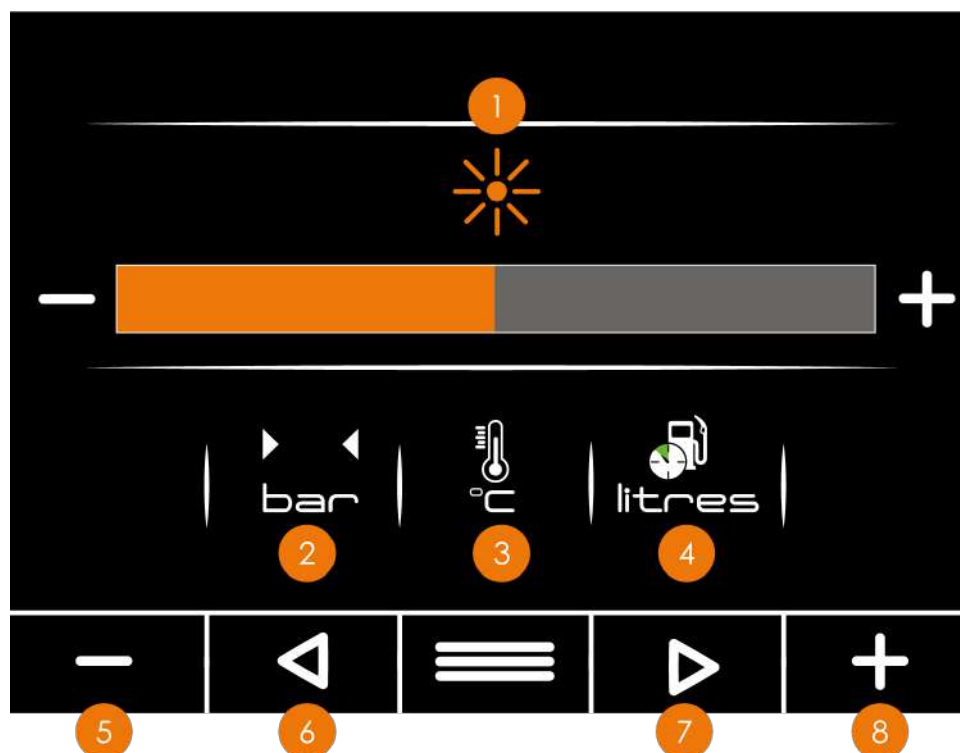


Figure 18 - Settings screen

| No. | Description |
|-----|---|
| 1 | Brightness - displays the current screen brightness level |
| 2 | Pressure unit - displays the unit of pressure you have selected |
| 3 | Temperature unit - displays the unit of temperature you have selected |
| 4 | Fuel unit - displays the unit of fuel you have selected |
| 5 | Minus button - with an icon highlighted, press the button to cycle through unit types |
| 6 | Left arrow - use this button to navigate left through the icons on screen |
| 7 | Right arrow - use this button to navigate right through the icons on screen |
| 8 | Plus button - with an icon highlighted, press this button to cycle through the unit types |

1.10.9 ALARM SPLASH SCREEN

If there is an alarm, the alarm splash screen appears. The screen shows details about the alarm. Contact Först service personnel immediately and describe the alarm message displayed on screen.

To exit this screen, press the menu button, this will take you back to the home page.

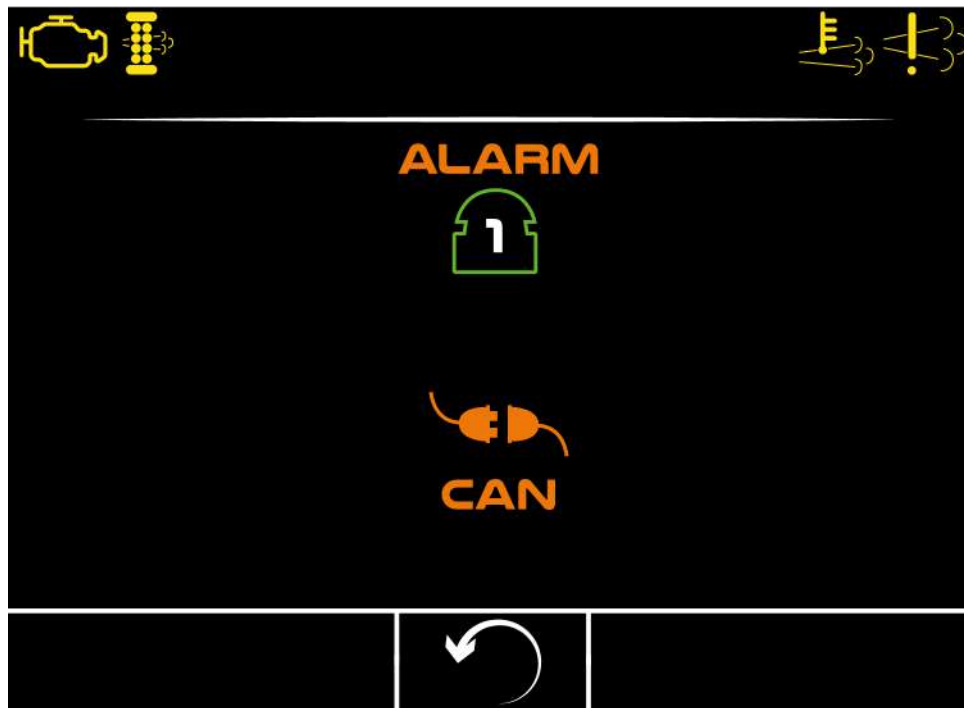


Figure 19 - Alarm screen

1.11 IGNITION SWITCH

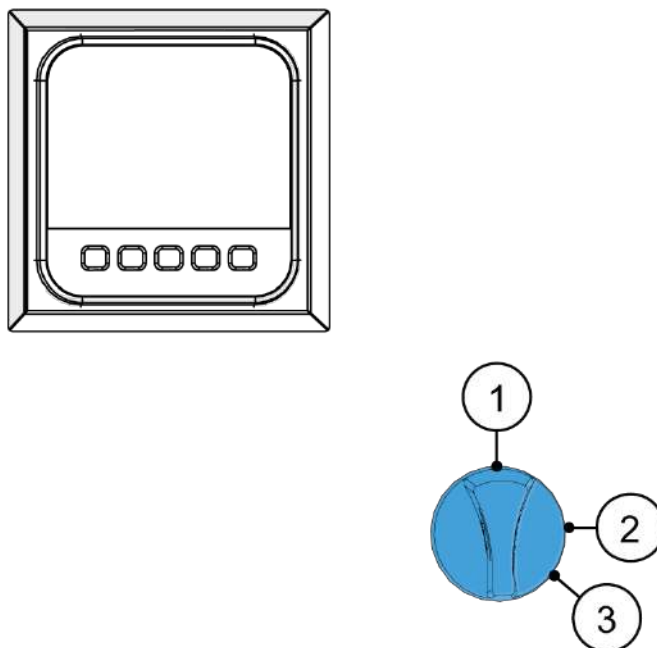


Figure 20 - Ignition switch

Off position (1, Figure 20)

This is the normal position when the machine is not in use.

On position (2, Figure 20)

This is the normal operating position. All electrical systems are on.

Start position (3, Figure 20)

This is the position for starting the engine. The key should be released from this position as soon as the engine starts.

1.12 MANUFACTURER'S STATUTORY PLATE

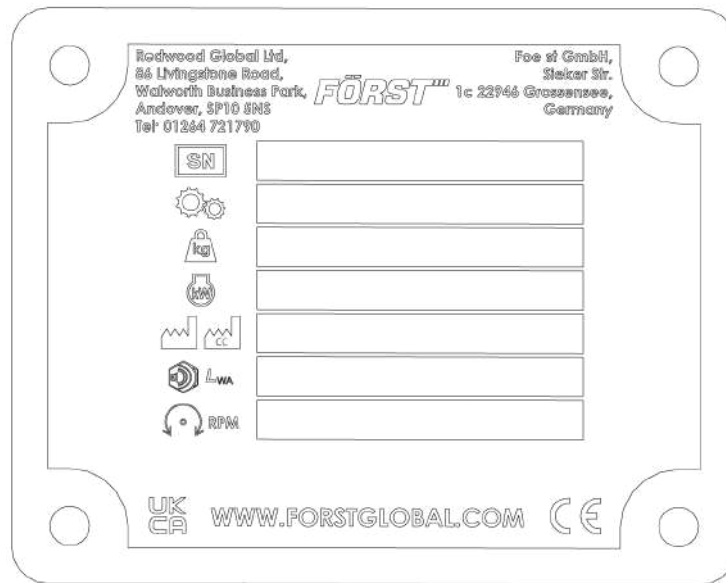


Figure 21 - Manufacturer's statutory plate

Information on the Manufacturer's Statutory Plate in line order from top to bottom is as follows:

- Manufacturing company and address
- Serial Number
- Machine designation
- Mass
- Power of prime mover
- Year of manufacture
- Sound power level
- Drive rotation and speed
- Website and CE Mark

This page intentionally left blank

CHAPTER 2: SAFETY INSTRUCTIONS

In this chapter:

| | |
|----------------------------------|----|
| 2.1 Safe working | 44 |
| 2.2 General safety | 48 |
| 2.3 Noise test information | 49 |
| 2.4 Decals | 50 |

2.1 SAFE WORKING

Before using this machine, make sure that you are trained and competent in its operation.

- Know the location of and how to use all the safety features.
- Know how to control the feed and stop the machine in an emergency.
- Be familiar with the hazards and safe working practices to prevent injury, damage to property, and machine.
- Also, be aware of the legal restrictions for personnel and towing with vehicles.



DANGER

NEVER operate the machine without the discharge chute attached. Doing so could result in serious injury.



DANGER

ALWAYS load wood from the sides of the hopper and never directly behind it.



WARNING

Prolonged exposure to vibration could lead to damage to joints, muscles, circulation and sensory nerves. It is recommended that the user operates within the safe exposure level. It is advised that the HSE Hand-Arm Vibration Exposer Calculator is utilised to calculate limits within your risk assessment.



WARNING

Only suitability trained or qualified personnel must operate this machine.

- Operators and service personnel must be above the minimum school leaving age (MSLA).
- Do not let anyone operate or service the machine who has not been fully trained.



WARNING

Always wear suitable personnel protective equipment (PPE) when operating the woodchipper machine.

Recommended PPE:

- Chainsaw safety helmet (EN 397) with mesh visor (EN 1731)
- Correctly rated ear defenders (EN 352)
- Work gloves with elasticated wrist bands
- Steel toe cap boots (EN 345-1)
- Close fitting heavy duty non-snag clothing. High visibility clothing (EN 471), if needed

Avoid:

- Wearing rings, bracelets, watches or jewellery



WARNING

When the machine is In use, woodchip and debris are ejected with considerable force from the chute.

- Make sure the discharge chute directs woodchip in a safe direction to avoid injury or property damaged



WARNING

Keep children and animals away from the working area.



WARNING

Protect breathing with a face mask if appropriate. Some plant material can give off harmful dust and poisonous vapours. This may cause respiratory problems or serious poisoning. Check the material to be processed before starting.



WARNING

All personnel operating or feeding material into the machine must wear heavy duty non-snag clothing to help prevent being caught on material and drawn into the machine. The feed mechanism of this machine uses high powered hydraulic motors to drive sharp toothed rollers that feed material into the cutting blades. **DO NOT** take risks with it.



WARNING

Never climb onto the hopper area while the engine is running. If access is required for maintenance or to clear blockages:

- Stop the engine
- Remove the ignition key



WARNING

Keep hands and feet outside the hopper at all times. Never assist any material into the feed rollers with hands or feet. Use the wooden paddle.



WARNING

Material can be forcibly ejected from the hopper towards the operator. Make sure full head and face protection is worn.



WARNING

Very twisted material should be trimmed into manageable pieces. Failure to do this can result in material extending outside the hopper, moving aggressively side-to-side creating a hazard to the operator.



WARNING

Keep all guards and shields around any moving parts in place while the machine is operational.



WARNING

Do not remove, jam, disable or otherwise impede the effectiveness of any stop and reset controls.



WARNING

Do not position the machine in such a way that the hopper tray is lower to the ground than the rest of the machine.



WARNING

Do not operate the machine inside a building or structure.



WARNING

Stay clear of chipping area while machine is operational.




WARNING

The exhaust can get extremely hot and may cause serious burns. DO NOT make contact with the exhaust while the machine is operational or within 30 minutes of the machine being turned off.



WARNING

DO NOT stand directly in front of the in-feed hopper when using the machine. Loading should only be conducted from the side, please refer to the safe zoning area decal.

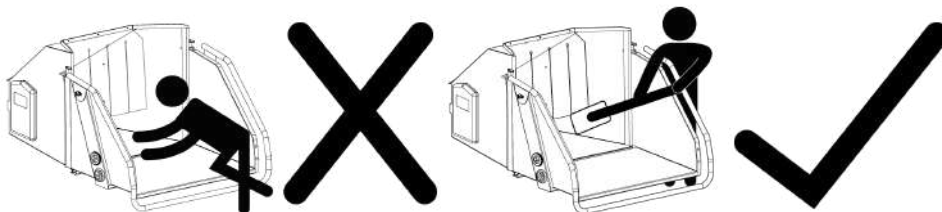

**CAUTION**

When operating the machine, be aware of your surroundings and work in a safe location.

- Position the machine:
 - On as firm a surface as possible and stabilise the machine.
 - So that operators do not have to stand on embankments/slopes when feeding material into the machine.
 - Furthest from any local danger. For example, when working next to a road, position the machine on the road verge.
 - Away from drains and manhole covers.
- Make sure the machine cannot move or topple when in use.
- Do not use the machine in poor visibility or insufficient light.
- Make sure ventilation is adequate and any exhaust fumes are vented into open air if working in an enclosed space.
- Create a 10m exclusion zone around the woodchipper machine while machine is in operation.
- On all reasonably foreseeable approaches to the work-site, erect warning and prohibition signs conforming to the Health and Safety (Safety Signs and Signals) Regulations 1996, indicating a hazardous work site and that unauthorised access is prohibited. In areas of very high public access, additional controls (e.g. barrier tape, barriers, extra manning) may be required.
- Make sure all operations near to highways are adequately signed with the appropriate notices as specified in the Department of Transport's Safety at street works and road works: A Code of Practice.
- Make sure the discharge chute is positioned to prevent chips being blown onto the highway during roadside operations or in any direction where they can affect colleagues or members of the public.
- Keep the work area free of material build up.

NOTICE

If you are operating the machine outside the United Kingdom please refer to in-country safety standards.

**CAUTION**

Do not try to force material over 150mm (6 inches) in diameter into the machine.

2.2 GENERAL SAFETY



DO stop the machine before making any adjustments, refuelling or cleaning.

DO make sure all moving parts in the machine have stopped. Remove the ignition key before starting any maintenance or when the machine is left unattended.

DO make sure that the machine is level, well supported and cannot move during use.

DO run the machine at maximum throttle.

DO conduct regular machine checks for visual fluid leaks.

DO take regular breaks. Wearing protective equipment can be hot and tiring leading to a lack of concentration, increasing the risk of having an accident.

DO keep hands, feet and clothing out of the feed area, discharge chute and moving parts.

DO remove any debris attached to the wood, such as nails, wire or mesh before commencing work.



DO NOT use machine in poor visibility or insufficient light to see clearly.

DO NOT use or attempt to start the machine without the discharge chute or guards correctly and securely fitted.

DO NOT stand directly in front of the hopper when using the machine. Stand to one side.

DO NOT allow the following to enter the machine as damage is likely:

| | |
|---------|----------------|
| BRICKS | METAL |
| STRING | GLASS |
| CLOTH | RUBBER |
| PLASTIC | ROOTS |
| STONES | BEDDING PLANTS |

DO NOT stand in front of the discharge chute.

DO NOT smoke when refuelling. Fuel is highly flammable and explosive in certain conditions.

DO NOT let anyone who has not received instruction, operate the machine.

DO NOT climb on the machine at any time except for the foot plate fitted to tracked machines.

DO NOT handle material partially engaged in the machine while in operation.

DO NOT touch any exposed wiring while the machine is running.

2.3 NOISE TEST INFORMATION

Machine TR6D42

Notes Tested chipping 50 x 50mm pine or an equivalent type of timber 4m in length.

Noise levels above 103dB will be experienced at the working position and within a metre radius. Operators and personnel must wear appropriate ear protection at all times while machine is in operation to reduce the risk of hearing damage.





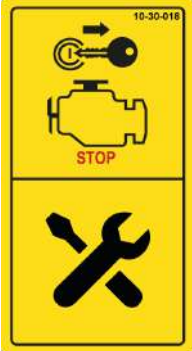




Figure 22 - Noise test information



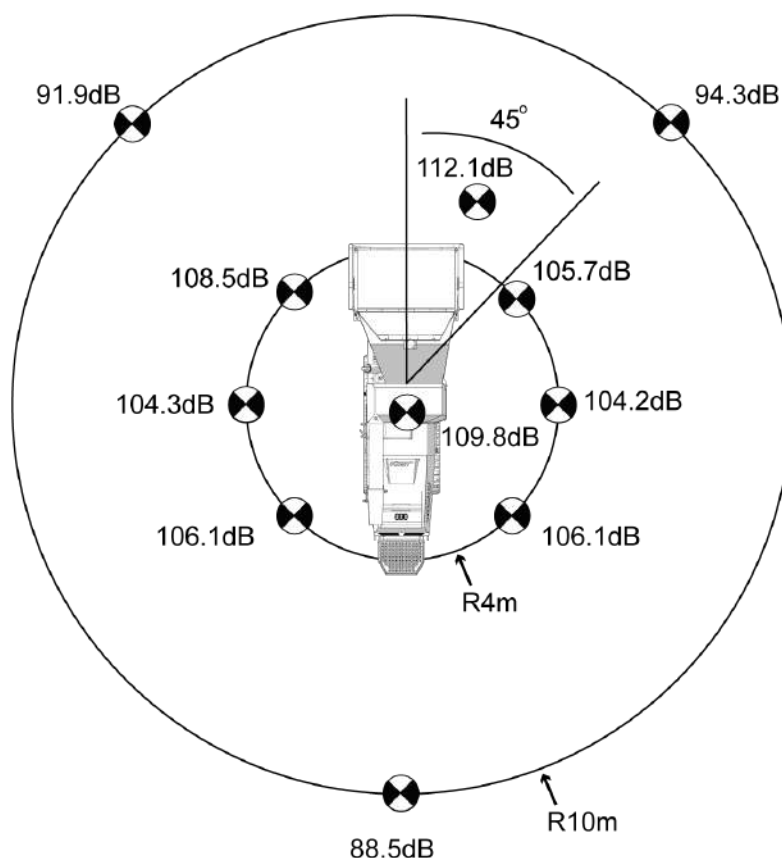



A-weighted emission sound pressure (beside operator's ear) $L_{pA} = 105.7 \text{ dB(A)}$. Peak C-weighted instantaneous sound pressure (beside operator's ear) $LC_{peak} = 123.5 \text{ dB(C)}$. Results at 10 metre radius are calculated.

Guaranteed sound power: 118 dB(A)

As required by Forestry machinery - Wood chippers - Safety BS EN 13525 and in line with Machinery Directive 2006/42/EC.

2.4 DECALS

| Decal | Description | Decal | Description |
|---|---|--|--|
|  | CE (Conformité Européenne or European Conformity) mark. Manufacturer's declaration that the product complies with the essential requirements of the relevant European health, safety and environment protection legislation. UK Conformity Assessed marking is a certification mark that indicates conformity with the applicable requirements for products sold within Great Britain. |  | Ensure that all rotating parts have stopped before maintenance |
|  | Warning: Risk on access to the in feed and/or chipping components (cutting, crushing and entanglement) |  | Warning: Risk of being pulled into the in feed mechanism. Warning: Stay within the designated manual loading area when feeding the chipper. Warning: Do not climb into the in feed chute |
|  | Warning: Read the operators manuals before working on the machine |  | Turn the feed roller controls to 4.5 for optimal results when chipping leafy material. |

| Decal | Description | Decal | Description |
|--|--|---|--|
|  | Use only close fitting gloves, suitable hearing protection and eye protection to protect against the risk of ejected material. |  | Apply 2x parts of grease to each grease nipple after 8 hours of operation. |
|  | <p>Tighten the flywheel nuts to 310Nm.</p> <p>Warning: danger of cutting</p> |  | Warning: Do not run the engine with the discharge chute removed. |
|  | Use only Diesel EN590 fuel for this machine |  | Pull the E-Stop up to engage the feed rollers if feed rollers are stopped. |

This page intentionally left blank

CHAPTER 3: TRANSPORTATION AND STORAGE

In this chapter:

- 3.1 Loading machine onto a trailer54
- 3.2 Unloading machine from a trailer54
- 3.3 Machine lifting55
- 3.4 Removing the discharge chute56
- 3.5 Storage59
 - 3.5.1 Preparing the machine for storage59
 - 3.5.2 Put into storage59
 - 3.5.3 During storage59
 - 3.5.4 Take out of storage60

3.1 LOADING MACHINE ONTO A TRAILER

NOTICE

The machine should only be transported on a trailer, it does not have a tow bar or wheels. The machine should not be towed under any circumstances.

1. Drive the machine onto your trailer, then make sure the following is carried out before departing:
 - a. The engine is off.
 - b. The hopper tray and footplate are in the raised position.
 - c. Tie down the machine using the tie down points located on both tracks.

Refer to your trailer manual for information on how to properly tie down.

2. When hauling the machine, obey the legal towing requirements/limits for your country.
3. On very rough and uneven road surfaces, reduce the speed to protect the machine from undue vibration.
4. When off road:
 - a. Avoid objects that may collide with the trailer underside.
 - b. Avoid steep gradients.
5. Avoid excessively pot holed ground.
6. Exercise extreme caution when reversing the trailer, as the short wheelbase will react quickly to steering.

3.2 UNLOADING MACHINE FROM A TRAILER

Follow the procedure below to unload the machine from the trailer safely.

1. Make sure the trailer is on level and stable ground, and lower any stabilisers.
2. Unfasten the straps used to tie the machine down.
3. Start the engine.
4. Slowly drive down the ramp by moving the levers in the required direction.

3.3 MACHINE LIFTING



DANGER

The lifting eye should not be used as the single point for lifting.



WARNING

When lifting the woodchipper, be aware that the lifting eye can securely hold the machines weight only.

- Use a correctly rated safety shackle.
- Inspect the lifting eye before each use.
- Do not use the lifting eye if damaged.
- Do not use a hoist hook directly on the lifting eye.

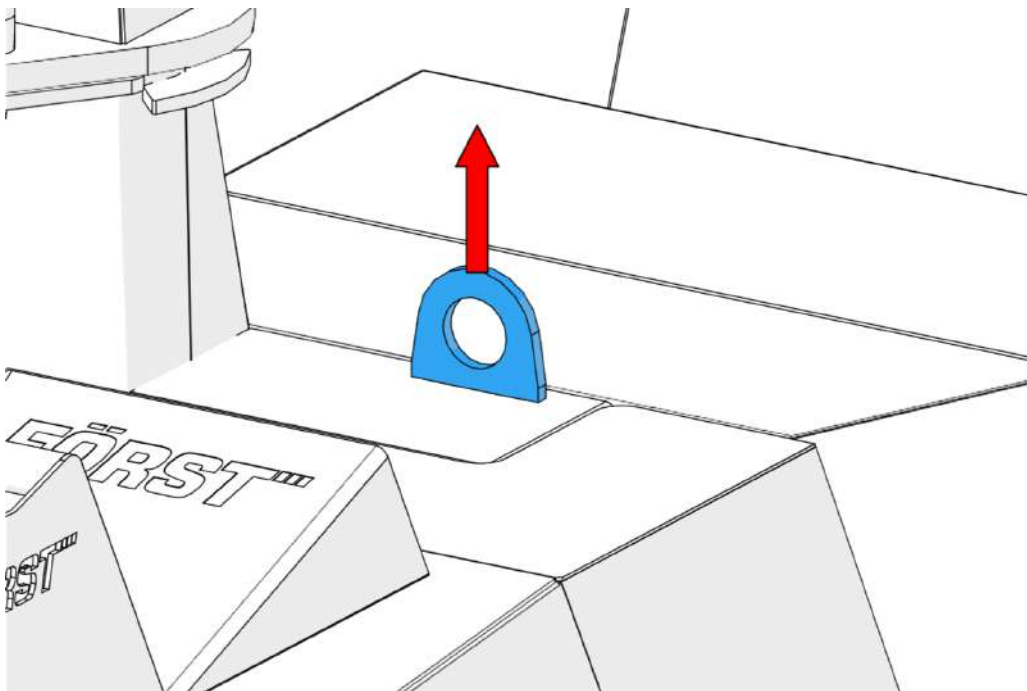


Figure 23 - Lifting eye

3.4 REMOVING THE DISCHARGE CHUTE



DANGER

DO NOT remove the rear chute clamp when removing the chute. Doing so will result in the chute falling.

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Rotate the discharge chute so that it is not hanging over the machine.
 - ▶ Refer to "Removing the discharge chute" on page 56
4. Loosen the front chute rotation clamp by rotating the clamp lever.

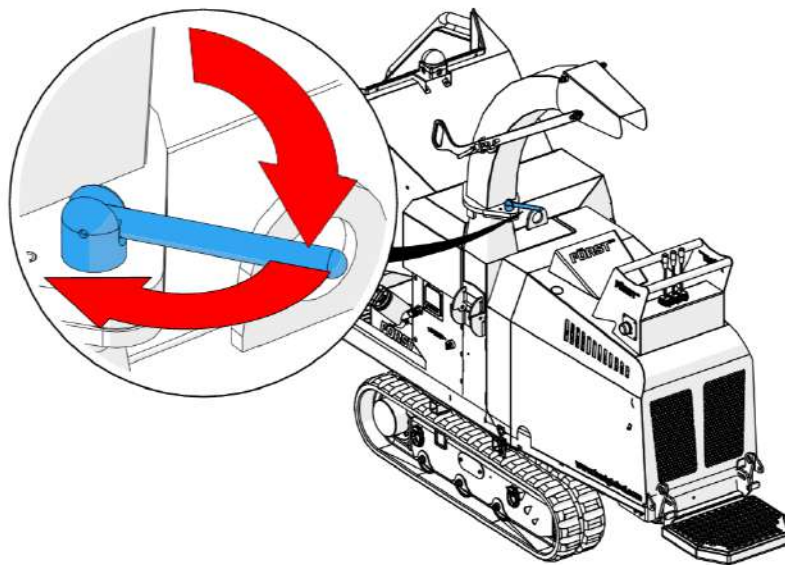


Figure 24 - Front rotation clamp

5. Remove both the clamp and the clamp nut and put them somewhere safe. Hold the clamp and nut while removing so they do not fall.

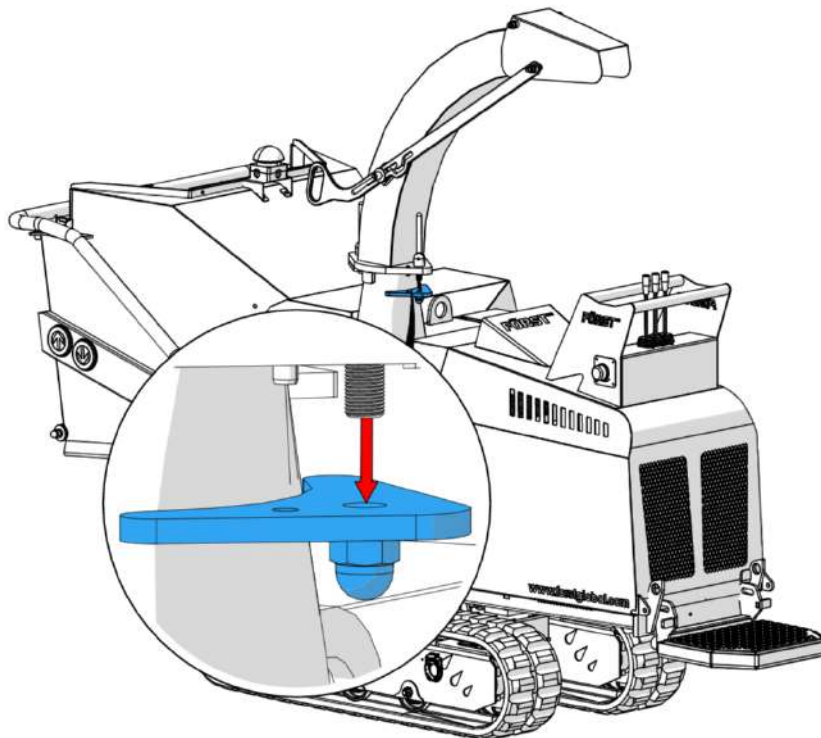


Figure 25 - Remove clamp and nut

6. Loosen the rear clamp by rotating the clamp lever.

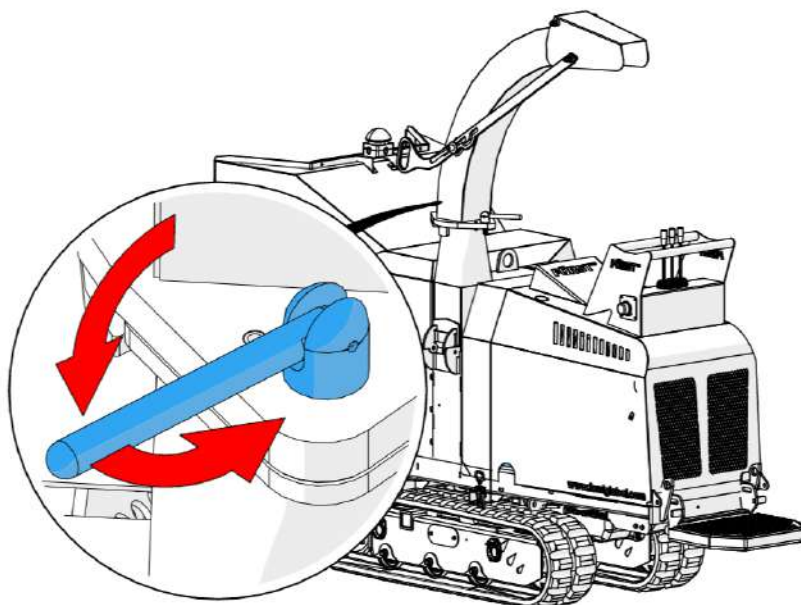


Figure 26 - Rear rotation clamp

7. Using 2x hands, carefully slide the chute backwards removing it from the machine.

3.5 STORAGE

If the machine will not be used for an extended period, you must store the machine correctly. If you prepare the machine carefully and apply on-going care you can prevent deterioration and damage to the machine while it is in storage.

3.5.1 PREPARING THE MACHINE FOR STORAGE

1. Clean the machine to remove all unwanted material and corrosive products.
2. Dry the machine to remove solvents and moisture.
3. Apply grease to the moving parts.
4. Examine the machine for worn or damaged parts. Replace if necessary.
5. Fill the fuel tank to prevent a build up of condensation in the tank.
6. Examine all fluid levels. Top up if necessary.
7. Disconnect and remove battery (place in suitable storage).
8. Rotate the discharge chute so that it is positioned over the centre of the machine or remove the discharge chute.

3.5.2 PUT INTO STORAGE

1. Park the machine on solid, level ground.
 - a. Park the machine in an area where it is easy to access. (In case the machine does not start at the end of the storage period).
 - b. Put suitable timbers under the machine to eliminate direct contact with the ground.
2. Remove the ignition key.
3. Remove the battery.
 - a. Keep the battery in warm, dry conditions.
 - b. Charge the battery periodically.
4. If you keep the machine outdoors, cover the machine with tarpaulins or plastic sheets.

3.5.3 DURING STORAGE

Operate the machine functions each week to prevent a build up of rust in the engine and hydraulic circuits and to minimise the deterioration of the hydraulic seals.

1. Remove any covers.
2. Examine all fluid levels. If necessary, add more fuel.
3. Install a charged battery.
4. Start the engine.
5. Operate the feed roller controls. Make sure that the feed roller functions operate correctly.
6. Prepare the machine for storage.

3.5.4 TAKE OUT OF STORAGE

1. Remove any covers.
2. Examine all fluid levels. If necessary replace the fluid or add more fluid.
3. Check the condition of the tracks, remove any debris that may impede the functionality of the tracks.
4. Clean the machine to remove all unwanted material and corrosive products. Dry the machine to remove solvents and moisture.
5. Install a charged battery.
6. Start the engine.
7. Operate the feed roller controls. Make sure that the feed roller functions operate correctly.

CHAPTER 4: OPERATION

In this chapter:

| | |
|---|----|
| 4.1 Preparation For Use | 62 |
| 4.2 Positioning the machine for use | 63 |
| 4.3 Safety & function test | 66 |
| Green and orange hopper buttons | 66 |
| 4.4 Feed roller speed adjustment | 69 |
| 4.5 Starting the Machine | 70 |
| 4.6 Operating the machine | 72 |
| 4.7 Shutting down the machine | 74 |
| 4.8 Removing blockages | 75 |
| 4.9 Removing the hopper | 78 |
| 4.10 Installing the hopper | 80 |
| 4.11 Safe slope operation | 82 |

4.1 PREPARATION FOR USE

Do not attempt to operate a newly delivered machine before complying with the preparation for use instructions. The operator must be thoroughly familiar with the operating and safety instructions before using the machine.

General

The machine has been lubricated, adjusted and tested by the manufacturer prior to delivery; however a new unit must be properly prepared for service by carrying out the daily checks.

► Refer to "Daily checks" on page 87



CAUTION

Only operate the machine while standing on the foot plate facing towards the front of the machine.



CAUTION

The machine is not road legal, do not operate on and public roads.



CAUTION

The machine is designed to carry one operator at a time, under no circumstance must there be any passengers on the machine.

NOTICE

When the machine is new, the hydraulic oil level may drop during initial use. Regularly check the level and top-up until the level settles. If a top-up is required, thoroughly clean around the filler cap before removing to help prevent debris falling into the oil tank, top up as required and replace the filler cap.

All the checks concern the serviceability of the machine. Some concern your safety. Get your service engineer to check and correct any defects.

4.2 POSITIONING THE MACHINE FOR USE



WARNING

Take care when lowering and lifting the hopper. Improperly handling the hopper can result in injury.



CAUTION

Obey all relevant safety warnings when positioning the machine for operation.

To set up the machine for operation follow the procedure below.

1. Make sure the machine is on even, level, and stable ground.

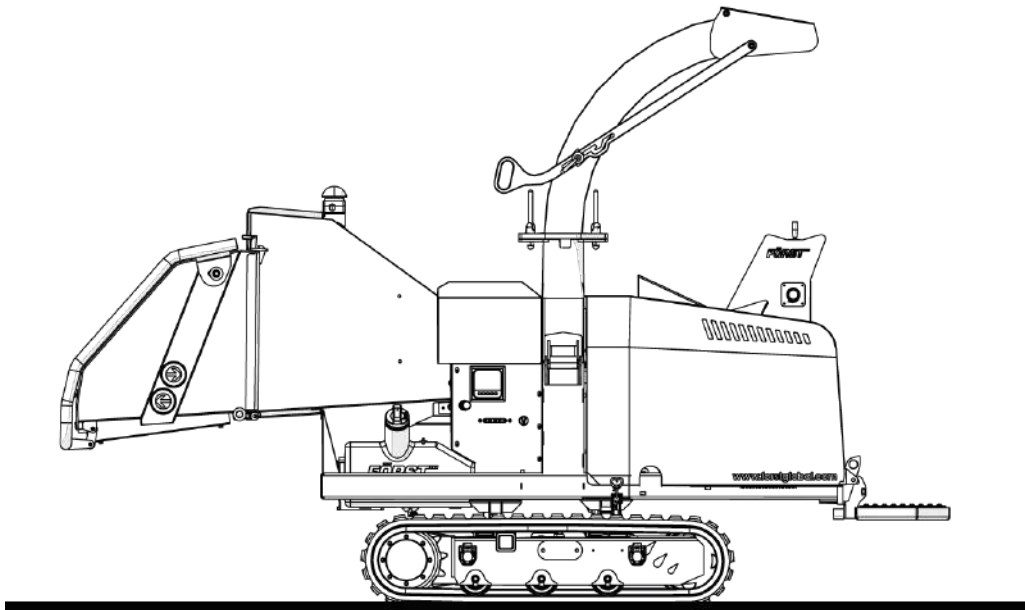


Figure 27 - Positioning the machine

2. Disengage both hopper tray locking latches.

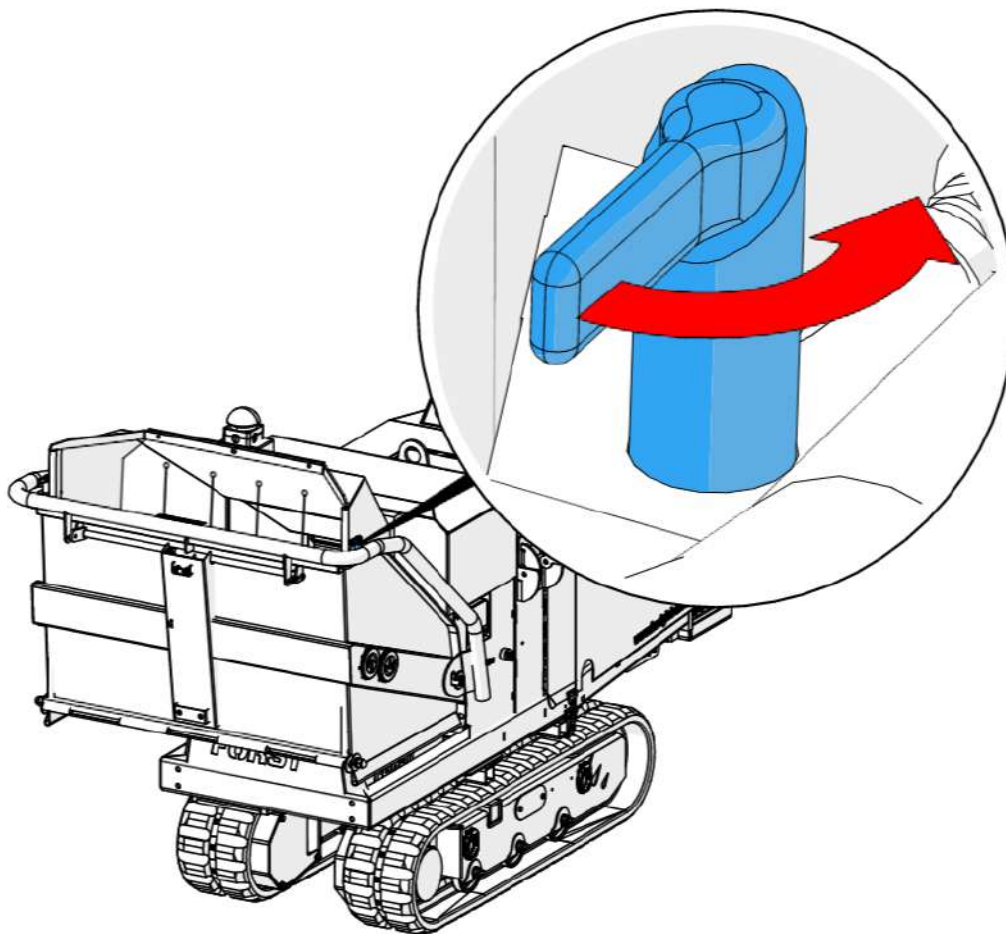


Figure 28 - Hopper tray locking latch

3. Lower the hopper tray in a controlled manner (do not drop the hopper tray).
4. Engage the locking latches, locking the hopper tray in the down position.

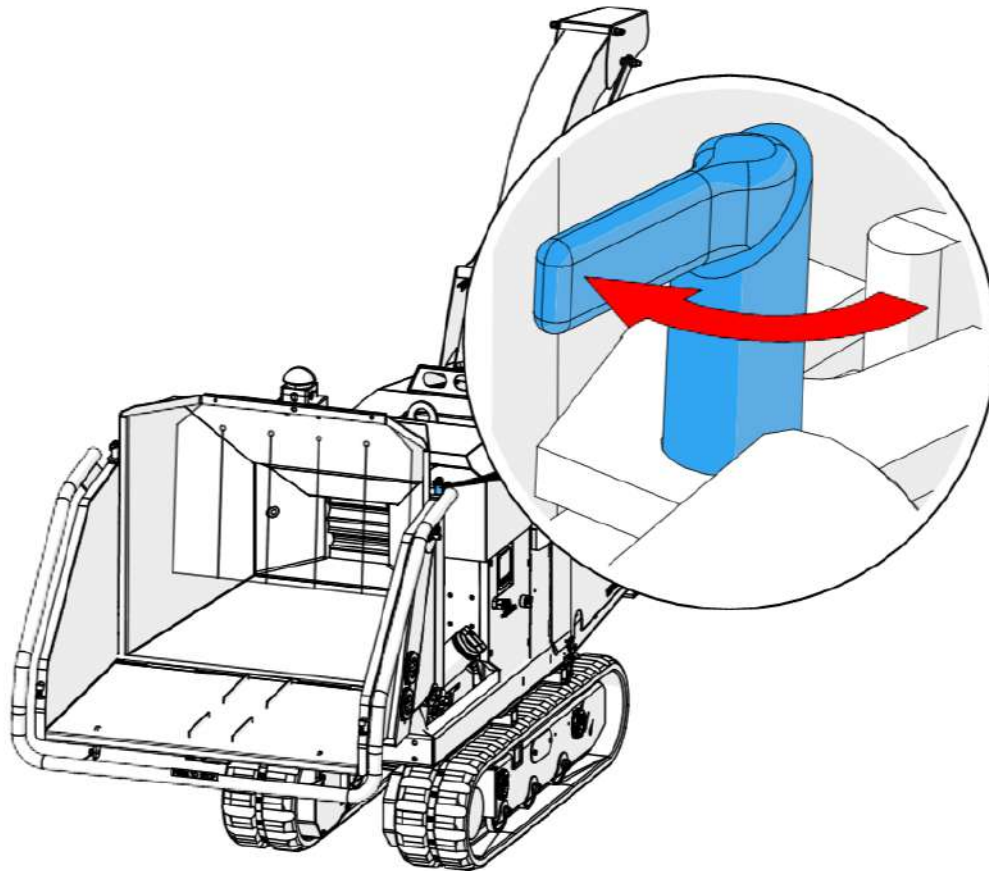


Figure 29 - Hopper tray locked down

5. Rotate the discharge chute to direct woodchip in a safe direction to avoid injury or property damaged.
6. You are now ready to start the engine.

4.3 SAFETY & FUNCTION TEST

The safety & function test makes sure that the safety devices and controls on the machine are working correctly.



WARNING

If any of these checks fail, turn off the machine, remove the key from the ignition switch, and contact FörstAssist.



CAUTION


Faulty or malfunctioning safety devices and controls can put users at risk of injury. If the machine fails any of the safety and function checks, do not use it.

GREEN AND ORANGE HOPPER BUTTONS

Table 2 - Safety and function test

| | Action | Expected outcome | |
|----|--|--|--------------------------|
| 1 | Visually inspect the stop bar, stop bar damper, stop bar sensor, hopper tray sensor and hopper tray buttons. | No signs of damage. | <input type="checkbox"/> |
| 2 | Visually inspect the E-stops. | No signs of damage and in reset position. | <input type="checkbox"/> |
| 3 | Start the engine. | | <input type="checkbox"/> |
| 4 | Push the green hopper tray button on either side of the hopper tray. | The rollers do not turn. | <input type="checkbox"/> |
| 5 | Lower the hopper tray. | | <input type="checkbox"/> |
| 6 | On the right-hand side of the hopper tray, do the following: | | <input type="checkbox"/> |
| | a. Push the green hopper tray button. | The feed rollers do not turn. | <input type="checkbox"/> |
| | b. Push and hold the orange hopper tray button. | The feed rollers turn backwards continuously while held. | <input type="checkbox"/> |
| 7 | On the left-hand side of the hopper tray, repeat step 6. | | <input type="checkbox"/> |
| 8 | Increase the engine speed to maximum RPM. | | <input type="checkbox"/> |
| 9 | On the right-hand side of the hopper tray, do the following: | | <input type="checkbox"/> |
| | a. Press and hold the orange hopper tray button. | The feed rollers turn backwards continuously while held. | <input type="checkbox"/> |
| | b. Push the green hopper tray button. | The feed rollers turn backwards. | <input type="checkbox"/> |
| | c. Push the stop bar. | The feed rollers stop | <input type="checkbox"/> |
| 10 | On the left-hand side of the hopper tray, repeat step 9. | | <input type="checkbox"/> |
| 11 | Push any green hopper tray button. | The feed rollers turn forwards. | <input type="checkbox"/> |
| 12 | Reduce the engine speed to idle. | The feed rollers stop. | <input type="checkbox"/> |
| 13 | Increase the engine speed to maximum RPM | The feed rollers turn forwards. | <input type="checkbox"/> |

| | Action | Expected outcome | |
|----|---|--|--------------------------|
| 14 | Turn the feed roller flow control valve between 1 and 10. | The speed of the feed rollers decreases and increases. | <input type="checkbox"/> |
| 15 | Close the hopper tray. | The feed rollers stop. | <input type="checkbox"/> |
| 16 | Reduce the engine speed to idle. | Allow the machine to run for 30s. | <input type="checkbox"/> |
| 17 | Open the bonnet. | The engine shuts down. | <input type="checkbox"/> |
| 18 | Close the bonnet. | | <input type="checkbox"/> |
| 19 | Do the following for each E-Stop button. | | <input type="checkbox"/> |
| | a. Restart the woodchipper. | | <input type="checkbox"/> |
| | b. Lower the hopper tray. | | <input type="checkbox"/> |
| | c. Increase the engine speed to maximum RPM. | | <input type="checkbox"/> |
| | d. Push any green hopper tray button. | The feed rollers turn forwards. | <input type="checkbox"/> |
| | e. Push the E-Stop button. | The feed rollers stop. | <input type="checkbox"/> |
| | f. Reduce the engine speed to idle. | | <input type="checkbox"/> |
| | g. Reset the E-Stop button. | | <input type="checkbox"/> |
| 20 | Turn the key to the off position and remove it from the ignition. | | <input type="checkbox"/> |

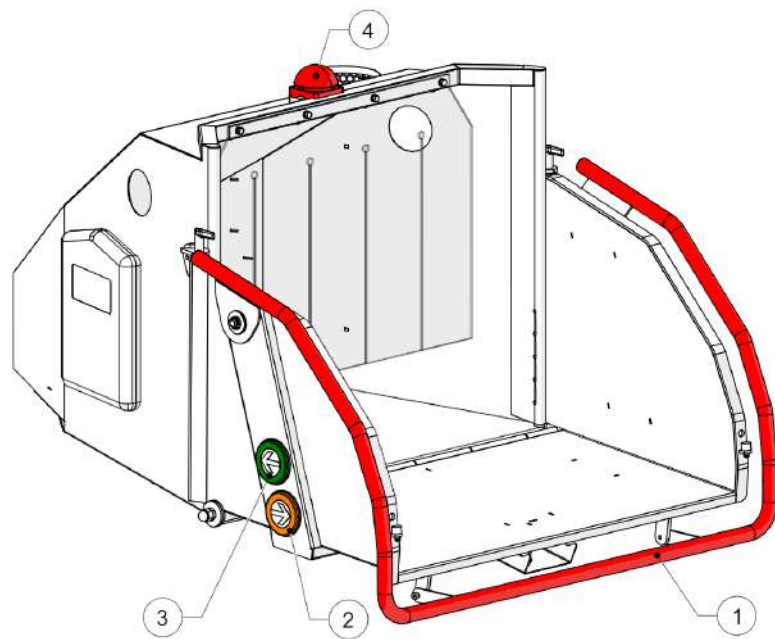

- | | |
|-------------------------|------------------------|
| 1 Stop bar | 3 Green forward button |
| 2 Orange reverse button | 4 E-stop |

Figure 30 - Feed roller controls

4.4 FEED ROLLER SPEED ADJUSTMENT

The feed roller speed can be adjusted to suit the material being chipped, refer to Figure 31.

1. Turn dial to align number with paint spot (1, Figure 31).
2. Set the feed roller speed so that the No-Stress operates as little as possible, this will give the highest throughput.
3. When feeding Leylandii or leafy material, set the feed roller speed to **4.5**.
4. Control valve speed adjustment.

Position indicated by paint spot. (1, Figure 31):

- 0 = Minimum
- 10 = Maximum

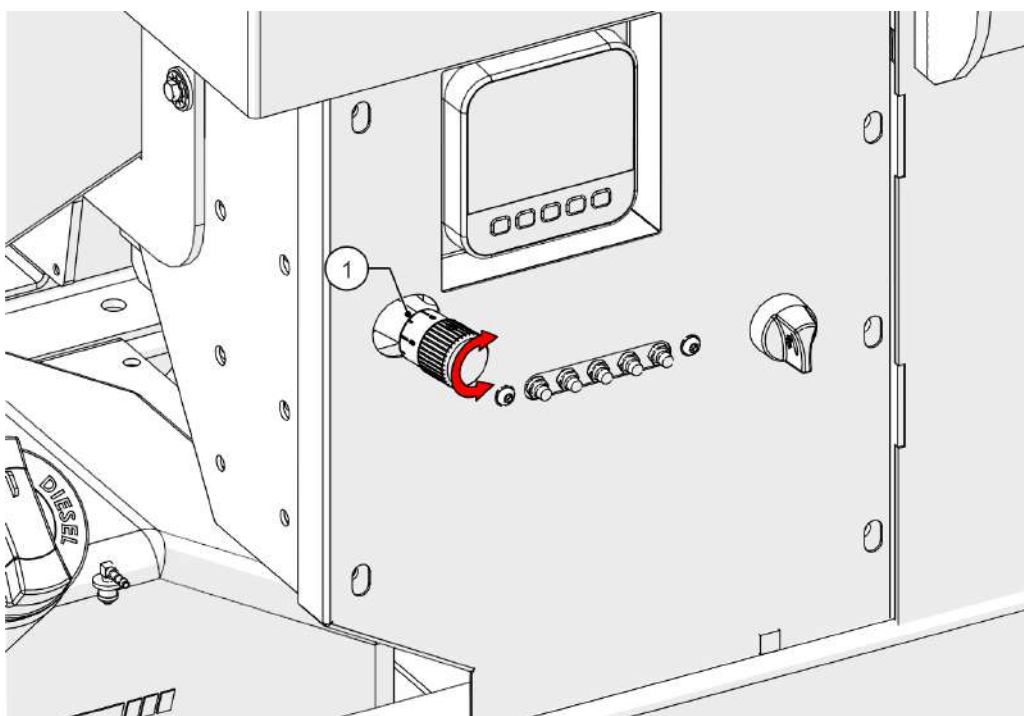


Figure 31 - Feed roller speed adjustment

4.5 STARTING THE MACHINE

Carry out daily checks before first use of machine everyday.

To start safely, follow the start up procedure below.

1. Insert the key into the ignition.
2. Make sure that the discharge chute is pointing in a safe direction.
3. Turn the key 90° clockwise.
The screen switches on.

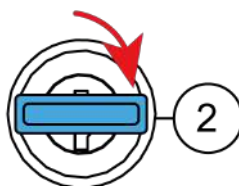


Figure 32 - Key in the ON position

4. After the screen has switched on, turn the key 45° clockwise. Hold the key in this position until the engine starts or the crank cycle finishes.



CAUTION

Do not operate the starter motor for more than 10 seconds. If the engine does not start turn the ignition key to off, wait 30 seconds, and then start the engine.

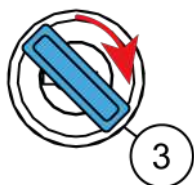


Figure 33 - Key in the engine crank position

- If the engine doesn't fire, turn the key to the OFF position and return to step 3.
 - If the engine doesn't fire after trying three times, check for faults.
► Refer to "Troubleshooting" on page 125.
5. Once engine has started, allow the engine to idle for 30 seconds for the oil to flow around the engine before slowly increasing the speed to maximum.

NOTICE

Increase and decrease the engine speed slowly, especially during the first 50 hours of operation.

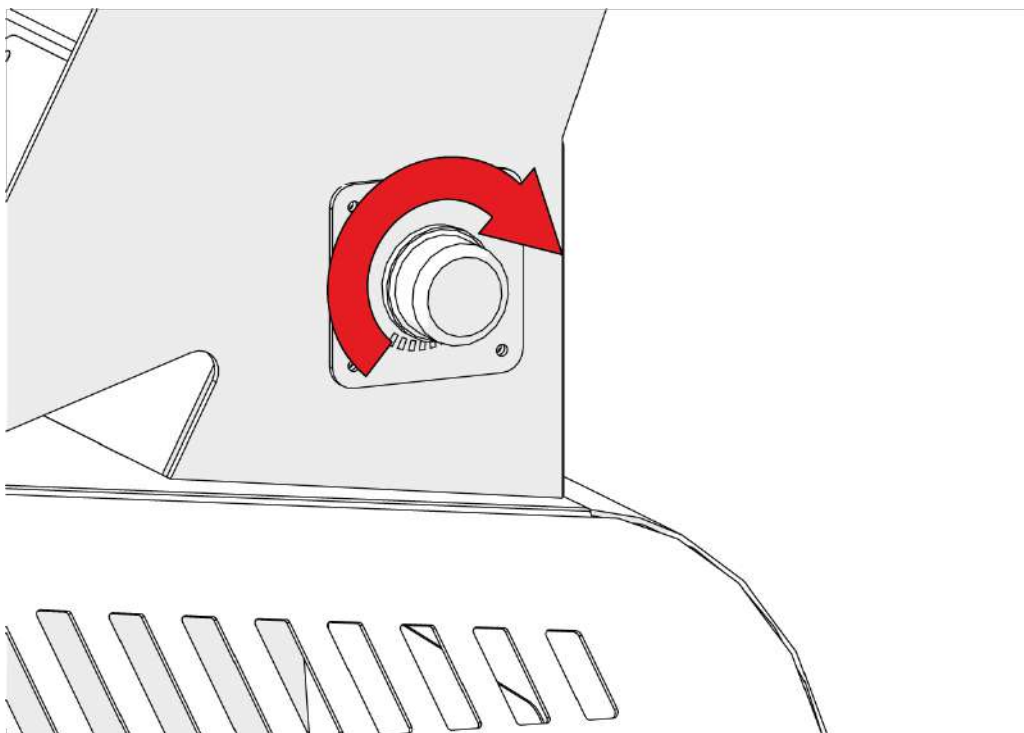


Figure 34 - Maximum throttle position

6. Check the safety system is functioning correctly.
 - *For more information, refer to "Safety & function test" on page 66*
7. The machine is now ready for use. Wait until the engine is warm before heavy use.

4.6 OPERATING THE MACHINE



WARNING

Do not operate the left and right levers in opposition to one another with high engine speed, doing this causes the machine to spin on its axis. This could lead to serious injury or death.



WARNING

Take great care when driving on inclined ground as there is a risk of the machine toppling. Do not drive on ground with an incline in excess of 15°.




WARNING

Make sure the engine and hydraulic oil are warm before working on inclined ground. If the machine has to be stopped on an incline, make sure that the machine is pointing either up or down the slope and chock both tracks at the downhill end.

NOTICE

Avoid driving on ground too soft to support the machine's weight.

Driving controls are all situated on the engine cover and operated while standing on the fold down foot plate.

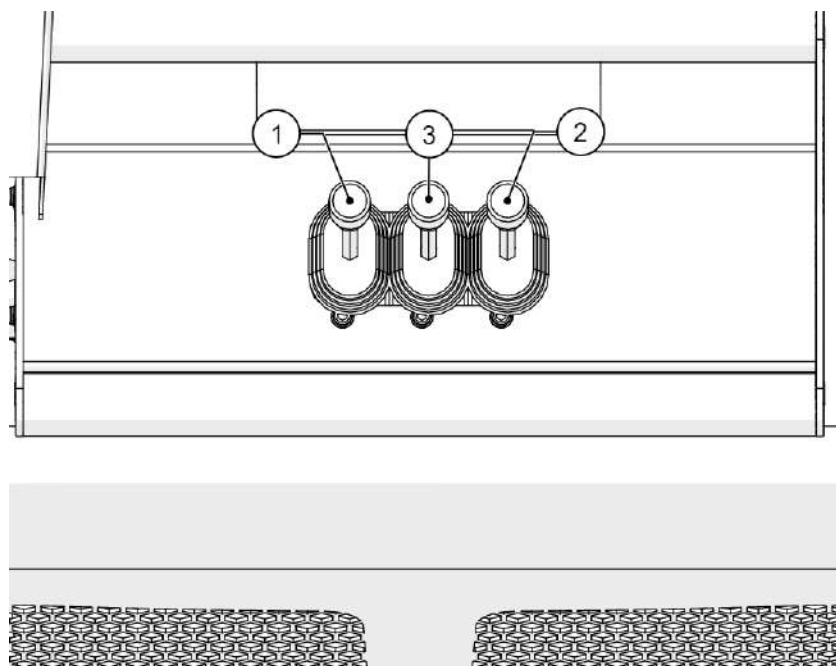

| Item | Description |
|------|-------------------|
| 1 | Left track lever |
| 2 | Right track lever |
| 3 | Vari track lever |

Figure 35 - Controls

Lever 1 operates the left track, pushing the lever forward causes the machine to turn right and pulling the lever causes the machine to reverse left.

Lever 2 operates the right track, pushing the lever forward causes the machine to turn left and pulling the lever causes the machine to reverse right.

Pushing the levers together drives the machine forward while pulling the levers together will cause the machine to reverse.

Lever 3 operates the machines vari track. Pushing the lever forwards widens the track base. Pulling the lever shortens the track base.

4.7 SHUTTING DOWN THE MACHINE

To shut down safely, follow the procedure below.

1. Turn the throttle anticlockwise to reduce engine speed to idle.

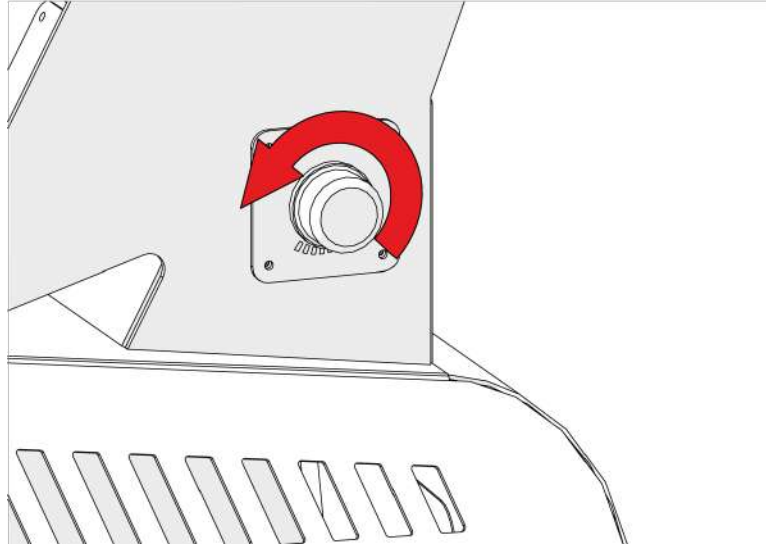


Figure 36 - Throttle idle position

2. Allow the engine to run unloaded and idle for 30 seconds.
3. Turn the key 90° anticlockwise.

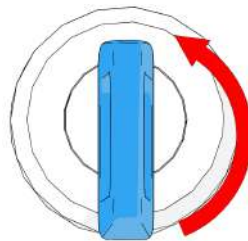


Figure 37 - Key in the OFF position

4. Wait until the engine comes to a complete stop.
5. Remove the key from the ignition and keep it in a safe place.

4.8 REMOVING BLOCKAGES

Be careful, whatever is fed into the machine has to come out of the discharge chute.



DANGER

Stop the engine before attempting to remove any blockages in the machine. Failure to do so may result in serious injury and loss of life.



CAUTION

Take care when clearing any blockages, potential energy in the machine can cause sudden movements between the teeth and in feed components.



CAUTION

Always monitor the woodchip flow out of the discharge chute. If the flow stops, **stop feeding material immediately**. Continuing to feed material will further compact a blockage and make it more difficult to clear.

1. Stop the engine
2. Remove the ignition key and keep in a safe place.

Check the discharge chute:

3. Remove the discharge chute.
4. Make sure that there is no blockage in the discharge chute.
If the discharge chute is blocked, remove the unwanted material.

Check the flywheel and chipping chamber:



WARNING

When moving the flywheel in either direction, position your hands correctly to avoid injury. Position your hands as shown in Figure 38 and Figure 39.

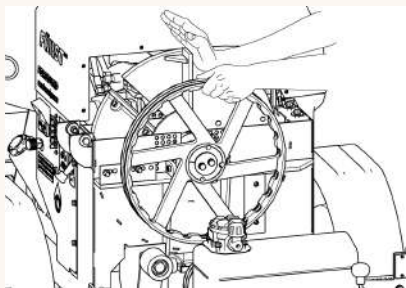


Figure 38 - Pushing the flywheel away from you

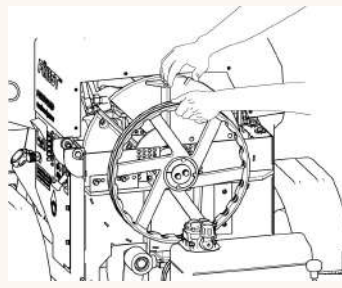


Figure 39 - Pulling the flywheel towards you

5. Check if the flywheel is free to rotate.
6. If the flywheel does not rotate freely do the following:
7. Wearing protective gloves and using a **piece of wood**, carefully clean out the chipping chamber.

Check the feed rollers:

8. Open the bonnet.
9. Open the chipping chamber cover.
 - ▶ Refer to "Opening the chipping chamber cover" on page 97.
10. Using a suitable tool, loosen the nuts located on top of the spring hangers.

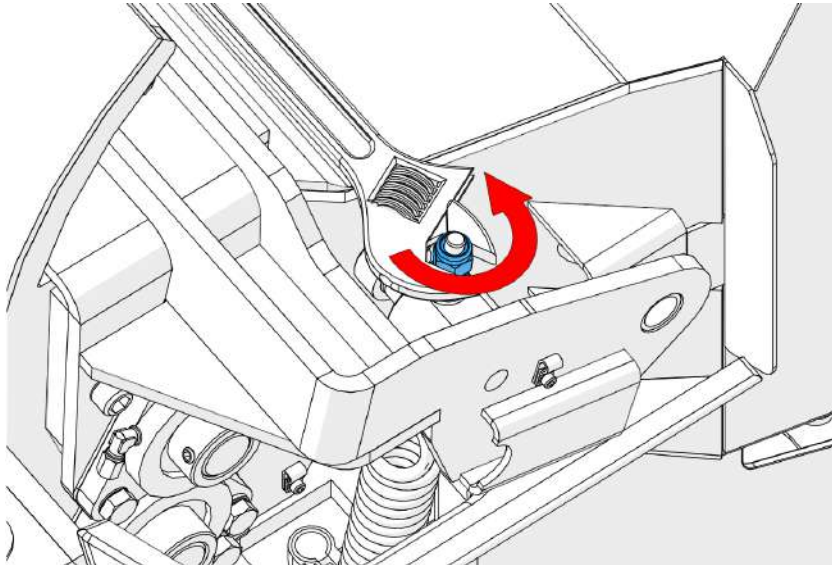


Figure 40 - Spring hanger

11. Put the top feed roller lifting tool (1, Figure 41) into the slot (2, Figure 41).

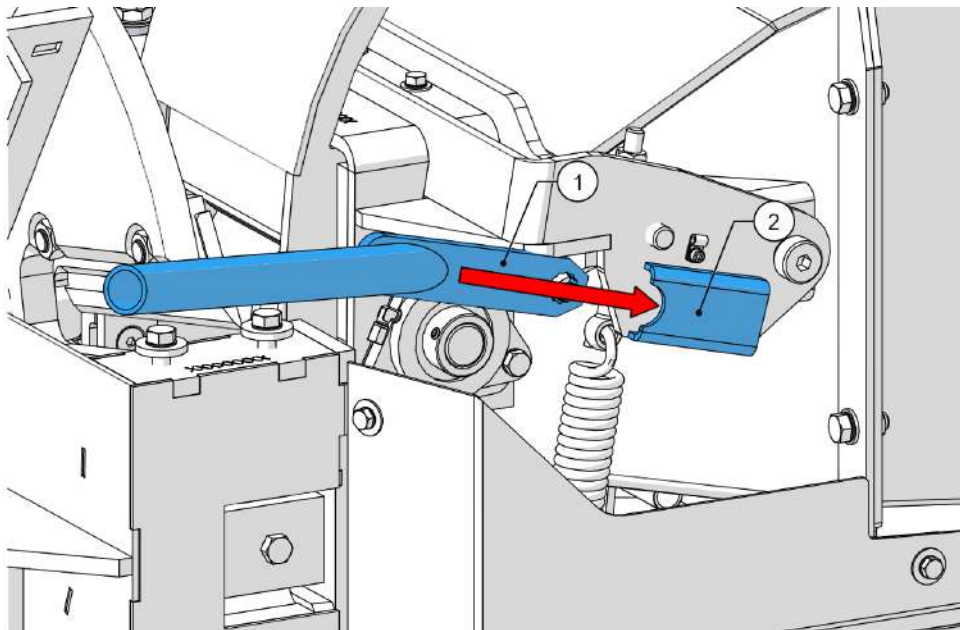


Figure 41 - Feed roller spring tension

12. 2x people are needed for this step. One person lifts the top feed roller (2, Figure 42) to the fully open position while the other person, wearing protective gloves and using a piece of wood, carefully clears the blockage from inside the feed chamber.

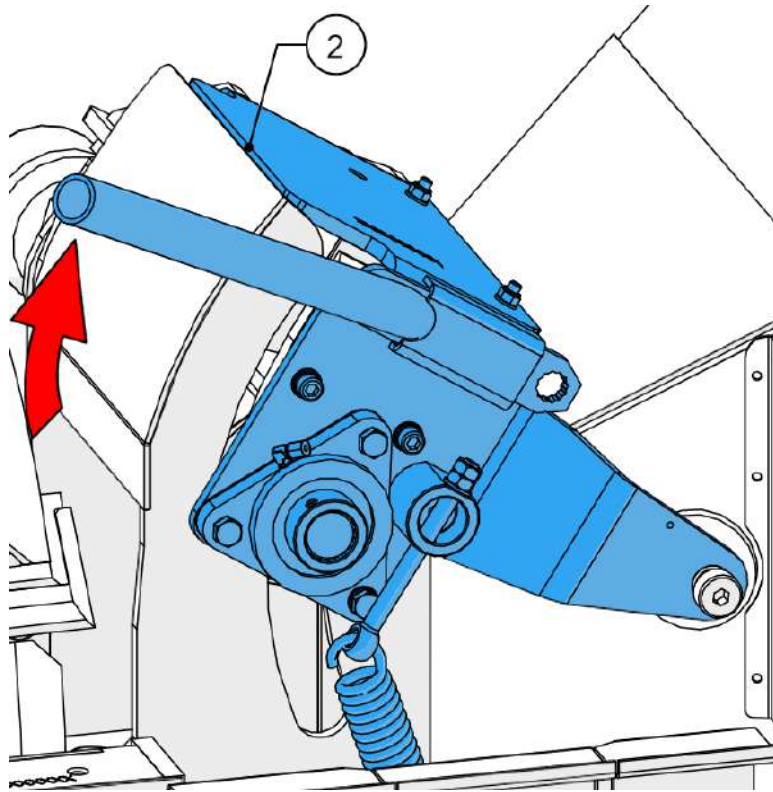


Figure 42 - Raising the top feed roller housing



WARNING

Be careful: this is the machines cutting zone. The top and bottom feed rollers have sharp teeth and, the flywheel cutting blades are not far from them. **Do not put your hands into this area.**

4.9 REMOVING THE HOPPER



DANGER

The hopper weight is approximately 130kgs, **DO NOT** attempt to remove the hopper alone. Refer to your risk assessment.



DANGER

DO NOT attempt to remove the hopper while on uneven or soft ground. Doing so may lead to falling or tripping while handling the hopper.

To remove the hopper, follow the procedure below:

1. Turn off the engine.
- ▶ Refer to "Shutting down the machine" on page 74
2. Remove the key from the ignition and store it in a safe place.
3. Disconnect the plug from its socket.

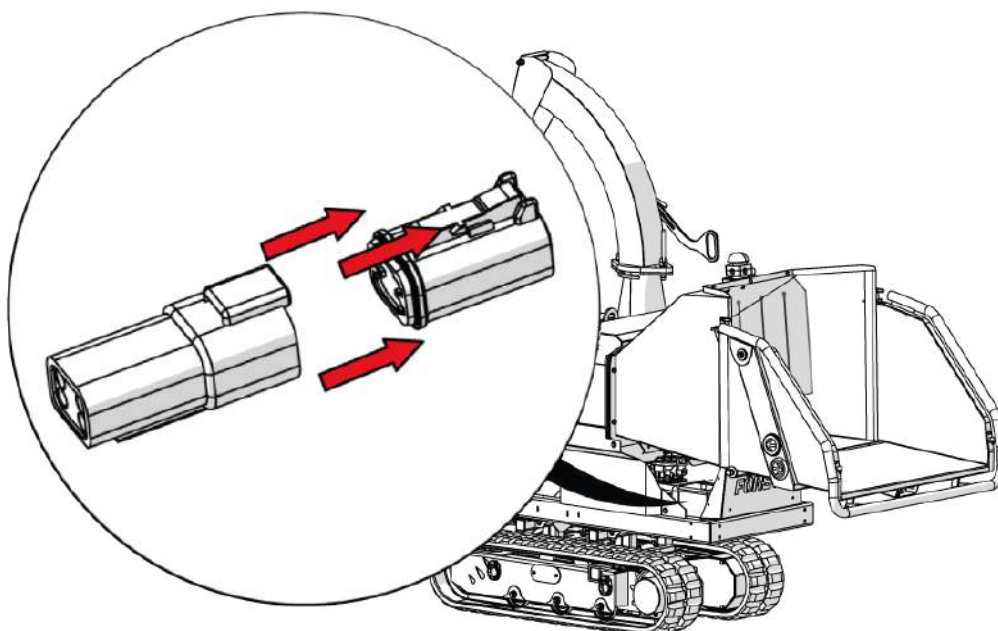


Figure 43 - Disconnect plug

4. Using a suitable tool, **ONLY** remove the nuts and bolts located underneath, either side and between the hopper and hopper support.

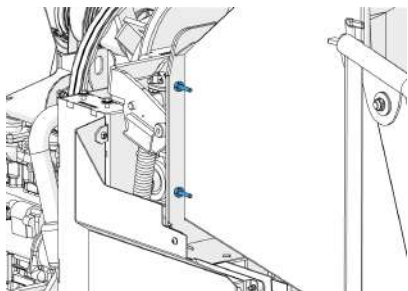


Figure 44 - Hopper bolts left side

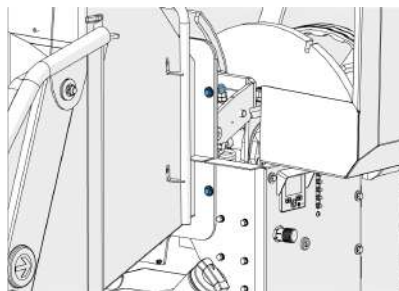


Figure 45 - Hopper bolts right side

5. Using a suitable tool loosen the bolts located along the top edge of the hopper.



WARNING

Removing these bolts will result in the hopper falling.

6. Close and lock the hopper tray.
 - ▶ Refer to "Positioning the machine for use" on page 63.
7. Slowly and carefully lift the hopper upwards until the top bolts are clear of their corresponding slots.

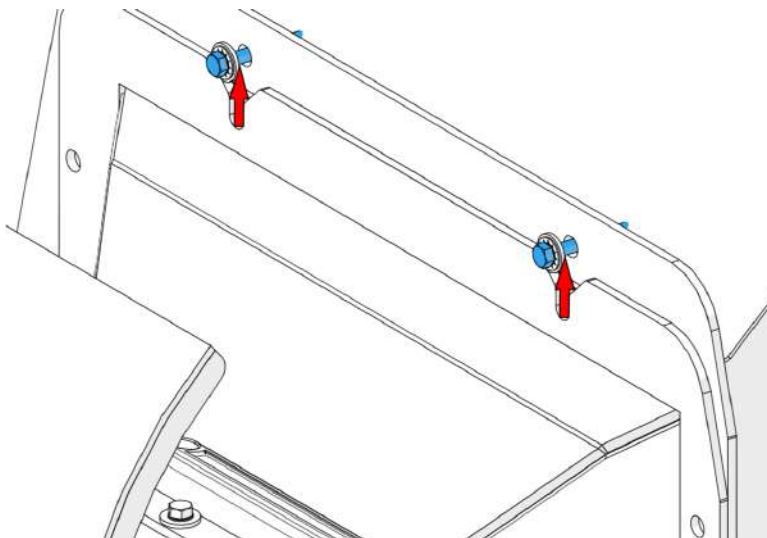


Figure 46 - Lifting hopper

8. The hopper is now removed from the machine, slowly and carefully place the hopper in somewhere safe.

4.10 INSTALLING THE HOPPER



DANGER

The hopper weight is approximately 130kgs, **DO NOT** attempt to install the hopper alone. Refer to your risk assessment.



DANGER

DO NOT attempt to install the hopper while on uneven or soft ground. Doing so may lead to falling or tripping while handling the hopper.

To install the hopper, follow the procedure below:

1. Turn off the engine.
 - ▶ Refer to "Shutting down the machine" on page 74
2. Remove the key from the ignition and store it in a safe place.
3. Partially screw bolts into the top holes of the hopper.
4. Carefully lower the hopper in to place by inserting the bolts located along the top of the hopper into their corresponding slots located on the hopper fixing plate.

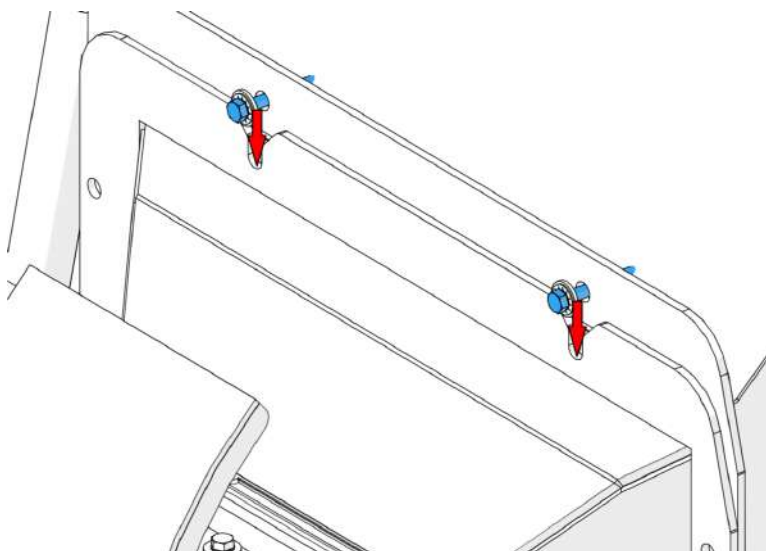


Figure 47 - Install hopper

5. Once the hopper is in place, torque the bolts to **86Nm**.

6. Reconnect the hopper tray plug.

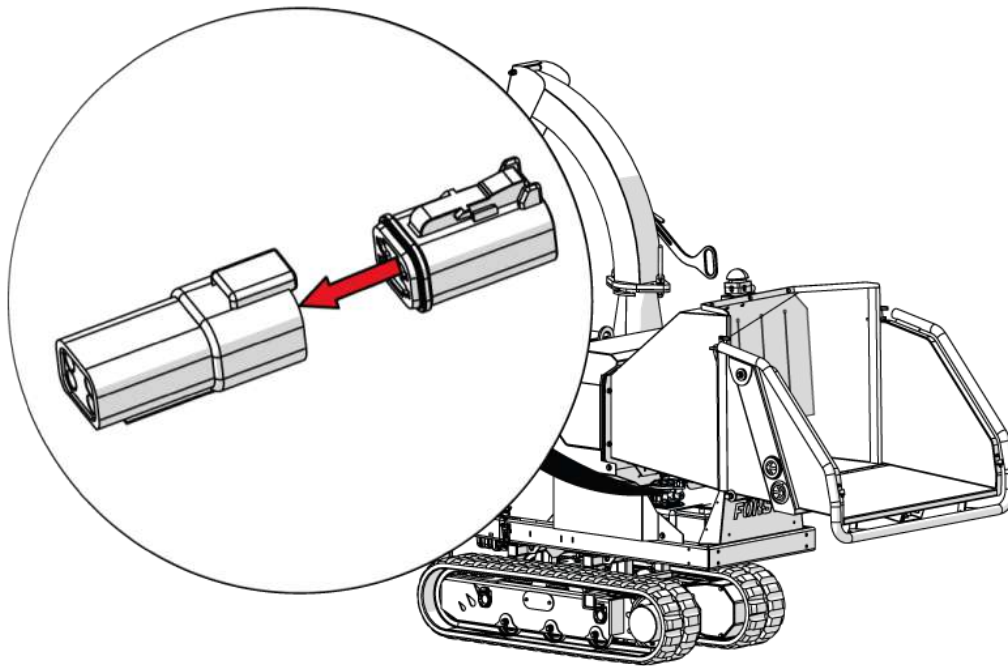


Figure 48 - Connect plug

7. Lower the hopper tray.
 - ▶ Refer to "Positioning the machine for use" on page 63
8. Using a suitable tool replace the nuts and bolts on the underside, either side of the hopper, and between the hopper support and hopper. Torque the bolts to **86Nm**.

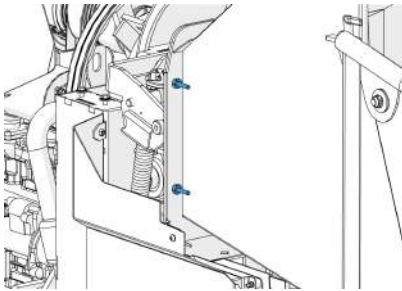


Figure 49 - Hopper bolts left side

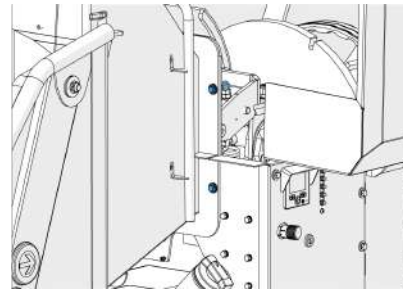


Figure 50 - Hopper bolts right side

9. Close the chipping chamber cover.
10. Close the bonnet.

4.11 SAFE SLOPE OPERATION



DANGER

If operating on a slope or uneven surface the machine may tip over and cause serious injury, crushing or death.



WARNING

Ground conditions can effect the values shown in this section dramatically. Use extra caution when operating the machine on wet or damp ground.

Operating safely on a slope depends to many factors including:

- Even or rough conditions
- Potential for ground giving way causing machine to unexpectedly tilt forward, backwards or sideways
- Proximity of ditches, ruts, stumps, or other obstacles and sudden changes in inclines
- Speed
- Turning
- Braking performance
- Operator skill

It is important for the operator to be aware of these conditions and adjust the operation of the machine accordingly.

Maximum Chipper Operating Angle:

The maximum engine angle must never be exceeded.

Maximum engine lubrication angle is 15°.

CHAPTER 5: MAINTENANCE

In this chapter:

| | |
|--|-----|
| 5.1 Routine maintenance | 85 |
| 5.2 Daily checks | 87 |
| 5.3 Weekly maintenance checks | 89 |
| 5.4 Aftertreatment System | 91 |
| 5.4.1 Diesel particulate filter (DPF) | 91 |
| 5.4.2 DPF regeneration | 91 |
| 5.4.3 DPF regeneration methods | 92 |
| 5.4.4 DPF regeneration lamp and switch | 92 |
| 5.4.5 Regeneration mode during operation (passive and active regeneration) | 93 |
| 5.4.6 Manual regeneration mode (forced regeneration) | 93 |
| 5.4.7 Conditions for forced regeneration | 93 |
| 5.4.8 Removal | 93 |
| 5.4.9 Removing ash and cleaning the DPF | 94 |
| 5.5 Routine cleaning | 95 |
| 5.5.1 Pressure washing | 95 |
| 5.6 Opening the bonnet | 96 |
| 5.7 Opening the chipping chamber cover | 97 |
| 5.8 Removing the side panel | 99 |
| 5.9 Changing the blades | 101 |
| 5.10 About blade sharpening | 105 |
| 5.11 Turning or replacing the main anvil | 107 |
| 5.12 Adjusting the main belt tension | 110 |
| 5.13 Hydraulic oil filter | 113 |
| 5.14 Changing the hydraulic filter | 114 |
| 5.15 Draining the hydraulic oil | 115 |
| 5.16 Battery | 116 |
| 5.16.1 First aid | 116 |
| 5.16.2 Going into long term storage | 116 |
| 5.16.3 Replacing the battery | 117 |
| 5.16.4 Charging the battery | 118 |

| | |
|--|-----|
| 5.16.5 Jump starting the battery | 119 |
| 5.17 Oils, fluids and lubricants | 120 |
| 5.18 Fastener tightening torques | 121 |
| 5.19 Tools and accessories | 122 |
| 5.20 Service schedule | 123 |

5.1 ROUTINE MAINTENANCE



WARNING

Make sure the key is removed from the ignition before commencing any service or maintenance on the machine.



WARNING

Exercise extreme care when checking for leaks. Hot liquid may cause scalding.



WARNING

Exercise extreme care to avoid injury when removing and replacing blades and anvils. The flywheel can turn creating crush and cutting points in and around the chipping chamber.



WARNING

Beware of hydraulic oil leaks, they can cause serious injury while the engine is running and the system is under pressure. A leak can easily inject high pressure oil deep into flesh and blood stream requiring immediate medical attention. **Do not check for leaks while the engine is running.** Hoses to the feed roller hydraulic motors are the most likely to become damaged as they are constantly moving during use. If hoses are replaced, all seals must be replaced at the same time.



WARNING

Damaged hydraulic hoses can cause fatal accidents. Inspect the hoses regularly. Do not use the machine if a hose or hose fitting is damaged.



WARNING

Fluid Under Pressure.

Fine jets of fluid at high pressure can penetrate the skin. Keep face and hands well clear of fluid under pressure and wear protective glasses and gloves. **Turn off the engine before checking for leaks.** If fluid penetrates your skin, get medical help immediately.

NOTICE

When the machine is new, the hydraulic oil level may drop during initial use. Regularly check and top-up until the level settles. If a top up is required, thoroughly clean around filler cap before removing to help prevent debris falling into oil tank, top up as required and replace filler cap.

This page intentionally left blank

5.2 DAILY CHECKS

Perform the following checks before putting the unit into operational service and before each operational day.

Table 3 - Daily checks

| Item | Check | Further action | ✓ / X |
|------|--|--|--------------------------|
| 1 | Nuts, bolts and washers secure | Visual check of all nuts, bolts, and washers for security | <input type="checkbox"/> |
| 2 | Check the throttle | <ul style="list-style-type: none"> • Make sure the throttle can move freely and the throttle cable is taught. Adjust if required. • Tight enough to hold maximum RPM | <input type="checkbox"/> |
| 3 | Check the control lever | Make sure the levers move freely and are all clear of dirt and debris | <input type="checkbox"/> |
| 4 | Check the lighting cable and adapter | Undamaged | <input type="checkbox"/> |
| 5 | Check all fluid levels | <ul style="list-style-type: none"> • Engine oil • Coolant • Hydraulic oil | <input type="checkbox"/> |
| 6 | Check the radiator | Free from dirt and debris | <input type="checkbox"/> |
| 7 | Check the cooling fan | Free from dirt and debris | <input type="checkbox"/> |
| 8 | Proximity sensors are not damaged and work correctly | <ul style="list-style-type: none"> • Bonnet • Hopper tray • Stop bar | <input type="checkbox"/> |
| 9 | Discharge chute | <ul style="list-style-type: none"> • Chute clamps – function and security • Deflector handle – fitted and secure | <input type="checkbox"/> |
| 10 | Fuel tank | Fuel level and free from debris inside | <input type="checkbox"/> |
| 11 | Check the stop bar | <ul style="list-style-type: none"> • Free to operate • Feed rollers stop when pressed | <input type="checkbox"/> |
| 12 | Check the E-Stop (if fitted) | <ul style="list-style-type: none"> • Free to operate • Feed rollers or engine stop when pressed | <input type="checkbox"/> |
| 13 | Check the hopper tray buttons | <ul style="list-style-type: none"> • Free from damage • Function correctly <p>► For more information, refer to "Safety & function test" on page 66</p> | <input type="checkbox"/> |
| 14 | Feed roller function | Feed rollers operate backwards and forwards at maximum RPM | <input type="checkbox"/> |
| 15 | Check the hopper tray catches | Secure hopper tray | <input type="checkbox"/> |
| 16 | Check the battery | <ul style="list-style-type: none"> • Terminals secure • Clamp secure | <input type="checkbox"/> |

| Item | Check | Further action | ✓ / X |
|--|--------------------------|--|--------------------------|
| 17 | Check the bonnet catches | <ul style="list-style-type: none"> Secure Function correctly | <input type="checkbox"/> |
| 18 | Check for fluid leaks | Visual check for any fluid leaks | <input type="checkbox"/> |
| 19 | Check the lights | All lights working correctly and in good condition | <input type="checkbox"/> |
| 20 | Check the tracks | The tracks are in good working order | <input type="checkbox"/> |
| Additional comments: | | | |
| <p>Date of check:</p> <p>Individual (Print Name):</p> <p>Individual (Signature):</p> | | | |

For additional sheets go to www.forstglobal.com.

5.3 WEEKLY MAINTENANCE CHECKS

Perform the following checks every week, or after every 8 hours of use.

Table 4 - Weekly checks

| Item | Check | Further action | ✓ / X |
|------|--|--|--------------------------|
| 1 | Carry out all pre-use checks | ► Refer to "Daily checks" on page 87 | <input type="checkbox"/> |
| 2 | Grease the bearings Grease nipples in the grease manifold | Apply 2 pumps of grease per grease nipple. (If in a low ambient temperate, grease with engine running and feed rollers turning) | <input type="checkbox"/> |
| 3 | Check for any debris accumulated around the exhaust system | Remove if present | <input type="checkbox"/> |
| 4 | Check the main belt tension | Adjust if required | <input type="checkbox"/> |
| 5 | Check the blade condition | Replace if required | <input type="checkbox"/> |
| 6 | Check the anvils | Turn or replace if required ► Refer to "Turning or replacing the main anvil" on page 107 | <input type="checkbox"/> |
| 7 | Check the flywheel main bearings | <ul style="list-style-type: none"> • Good general condition • Free from damage | <input type="checkbox"/> |
| 8 | Check the pulleys and taper lock on the flywheel | <ul style="list-style-type: none"> • Undamaged | <input type="checkbox"/> |
| 9 | Check the top feed roller spring tension | Adjust if required | <input type="checkbox"/> |
| 10 | Check for any debris accumulated in the top feed roller assembly and around the assembly | Remove if present | <input type="checkbox"/> |
| 11 | Check the feed roller motor mounts | Secure and undamaged Tighten if required | <input type="checkbox"/> |
| 12 | Check the side panels | Behind panel is clear of debris - remove panel if required | <input type="checkbox"/> |
| 13 | Check the battery terminals | Tighten if loose | <input type="checkbox"/> |
| 14 | Visually check all electrical wiring | Cables and conduit secure and undamaged | <input type="checkbox"/> |
| 15 | Visually check all hydraulic components | <ul style="list-style-type: none"> • Hoses secure • All components free of leaks | <input type="checkbox"/> |
| 16 | Check the safety decals | Decals are fitted, legible and undamaged | <input type="checkbox"/> |

| Item | Check | Further action | ✓ / X |
|--|--|--|--------------------------|
| 17 | Check the track assembly | <ul style="list-style-type: none"> • Clean any synthetic oils or fuel on the tracks • Clean any salt (if used in a coastal environment) and salty air may corrode track components • Tracks are undamaged and in good working order | <input type="checkbox"/> |
| 18 | Make sure the service schedule is up to date | Is the machine due a service | <input type="checkbox"/> |
| Additional comments: | | | |
| <p>Date of check:</p> <p>Individual (Print Name):</p> <p>Individual (Signature):</p> | | | |

NOTICE

If any fault is found, contact FörstAssist immediately.

► Refer to "FörstAssist" on page 132

For additional sheets go to www.forstglobal.com.

5.4 AFTERTREATMENT SYSTEM

5.4.1 DIESEL PARTICULATE FILTER (DPF)

The DPF (Diesel Particulate Filter) system serves to prevent particulate matter (PM) in emissions from being discharged into the air and consists of a DPF body, one exhaust gas temperature sensors, and one differential pressure sensor. The DPF is composed of a porous wall capable of filtering out particulate matter. As exhaust gas pass through the DPF to the SCR system. Following this, PM collected from the DPF is eliminated using a suitable regeneration method.

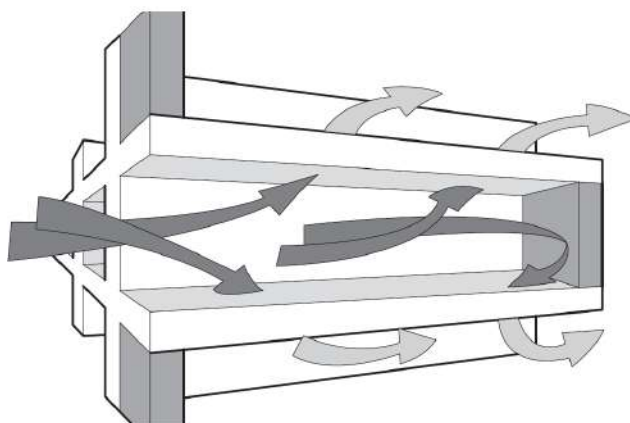


Figure 51 - DPF (Diesel particulate filter)

5.4.2 DPF REGENERATION

The DPF serves to filter out soot and ash, a contaminant found in the emissions of Diesel engines. An excessive build-up of soot in the DPF leads to issues such as a drop in engine power due to increased back pressure in the engine, making it crucial to perform regeneration in order to eliminate PM in the DPF. The ECU (Engine Control Unit) calculates the amount of exhaust smoke using the signal from the DPF differential sensor, the vehicle operating time, the vehicle fuel consumption and engine simulation data. Once this amount reaches a certain level, the ECU performs DPF regeneration.

Regeneration involves burning accumulated PM, it increases the temperature upstream of the DOC (Diesel Observation Catalyst) by means of adjustment to the engine throttle and near post injection, as well as raising the DPF temperature higher than the exhaust combustion temperature (580° or higher) to burn exhaust gas by means of far post injection. After DPF regeneration, only ash remains in the DPF.

5.4.3 DPF REGENERATION METHODS

Stage V engines are designed to perform passive regeneration of soot accumulated in the DPF even under normal exhaust conditions without needing to be initiated by the operator. The DPF regeneration modes are divided into the following four stages depending on soot build up in the DPF.

1. Soot level 80% or less: Normal operating conditions
2. Soot level 80-100%: Automatic regeneration during operation (Active Regeneration)
3. Soot level: 100-120% Regeneration initiated by the operator (Forced Regeneration)
4. Soot level 120% or higher: Call for service (DPF Regeneration lamp blinking, engine warning lamp on, drop in engine power)

5.4.4 DPF REGENERATION LAMP AND SWITCH

1. The HEST (High Exhaust System Temperature) Lamp notifies the operator when hot exhaust gas is being discharged from the engine during DPF regeneration. Be sure to keep the area around the exhaust manifold free of flammable materials.



Figure 52 - HEST lamp

2. The DPF Regeneration Lamp turns on either during regeneration or when regeneration is needed and turns off during active regeneration while operating if the soot level is less than 100%. The lamp appears as shown on the right when the operator disables regeneration.

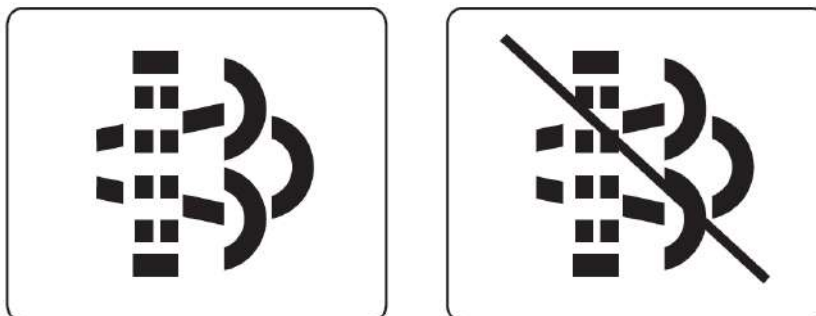


Figure 53 - DPF regeneration lamp

5.4.5 REGENERATION MODE DURING OPERATION (PASSIVE AND ACTIVE REGENERATION)

The regeneration mode is performed automatically by the ECU to regenerate the DPF when any of the following regeneration modes are met. During regeneration, the regeneration lamp and HEST lamp turn on to warn the operator of the hot exhaust gas. At this time, normal operation is possible, although with caution to safety. Once regeneration is complete after 20-30 minutes, the regeneration lamp and HEAT lamp turn off.

5.4.6 MANUAL REGENERATION MODE (FORCED REGENERATION)

This regeneration mode is performed by the operator while the vehicle is in operation. Forced regeneration (Active Regeneration) may not be performed under the following operating conditions, so the operator must perform manual regeneration according to the vehicle warnings as befits the circumstances.

- Working under a low load or driving at low speeds over short distances
- Frequent idling

5.4.7 CONDITIONS FOR FORCED REGENERATION

1. Coolant (engine oil) temperature of 40° or higher.
2. Engine rpm: idling
3. Bonnet down and secured
4. Hopper tray in the raised position and secured

5.4.8 REMOVAL

Remove the temperature sensor and differential pressure sensor installed in the DPF, perform a visual inspection upstream and downstream of the DPF to check for any damage or melting. Take care not to damage the DPF.

1. Inspect upstream and downstream of the DPF to check for any damage or melting on the DPF.
2. Check downstream of the DPF for soot. If any spot (black) is found during visual inspection and cannot be removed even after being wiped with a cloth or paper towel, there is a problem with the DPF. If this is the case contact FörstAssist immediately.

5.4.9 REMOVING ASH AND CLEANING THE DPF

During the regeneration soot in the DPF, ash accumulates in the DPF. Once a certain amount of ash accumulates, engine performance and fuel efficiency are affected due to a build up of back pressure from the exhaust system, so ash cleaning must be performed regularly to prevent any worsening of engine performance or fuel efficiency. The DPF part of the DPF assembly must be disassembled in order to clean out ash.

Although the interval varies depending on operating conditions, operating environment and type of engine oil used, ash cleaning is usually performed every 5000 hours of engine operating time under normal conditions.



CAUTION

1. Use only EN590 Ultra Low Sulphur Diesel
2. Use only CJ-4 or ACEA E9 engine oil

5.5 ROUTINE CLEANING

5.5.1 PRESSURE WASHING

**CAUTION**

The engine and other components could be damaged by high pressure washing systems. Special precautions must be taken if the machine is to be washed using a high pressure system.

NOTICE

Make sure that the alternator, starter motor, electrical control box and any other electrical components are shielded and not directly cleaned by the high pressure cleaning system. Do not aim the water jet directly at bearings, oil seals or the engine air induction and cooling system.

5.6 OPENING THE BONNET

To open the bonnet:

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Release the two bonnet catches.
4. Open the bonnet cover.

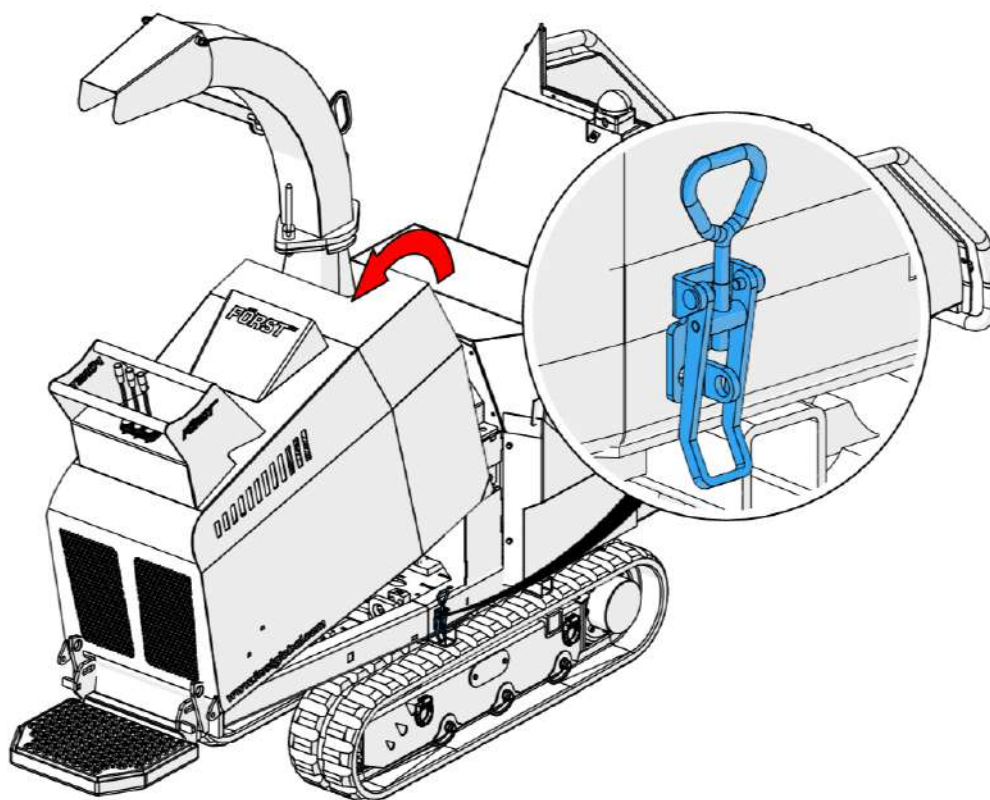


Figure 54 - Bonnet

5.7 OPENING THE CHIPPING CHAMBER COVER

To access the chipping chamber:

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Open the bonnet.
4. Rotate the discharge chute to point over the side of the machine.

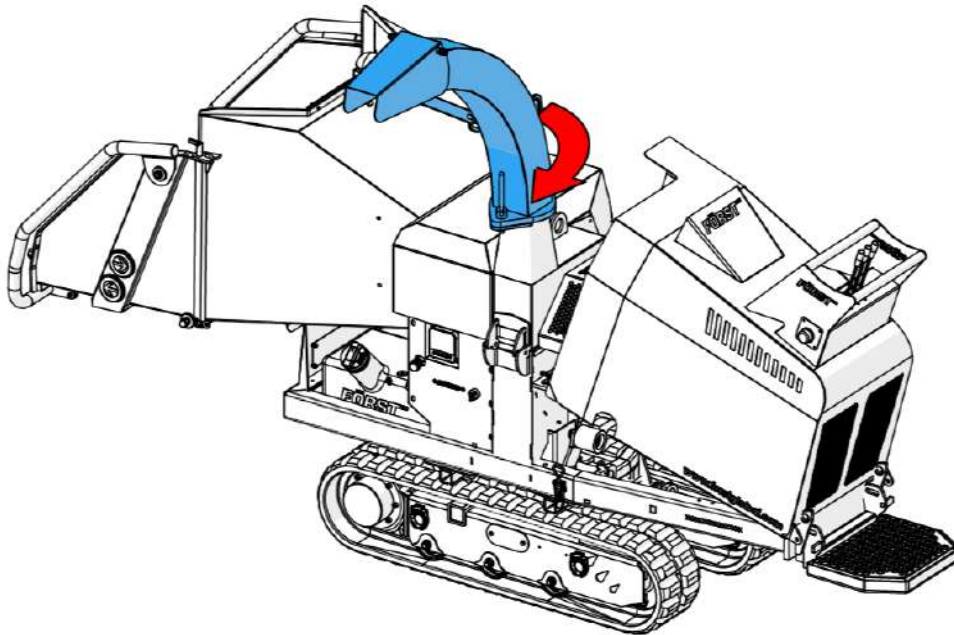


Figure 55 - Rotate the discharge chute

5. Remove the two bolts holding the chipping chamber cover closed (Figure 56).

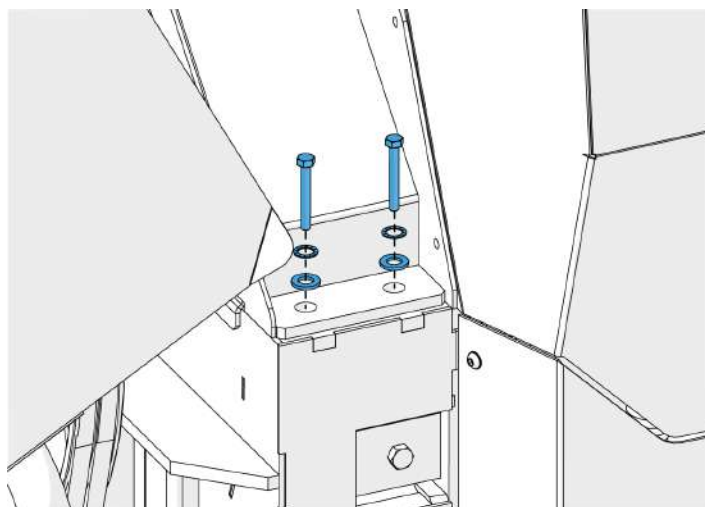


Figure 56 - Chipping chamber cover bolts

6. Using the discharge chute as a lever, carefully open the chipping chamber cover and let it come to rest on the hinge stops.

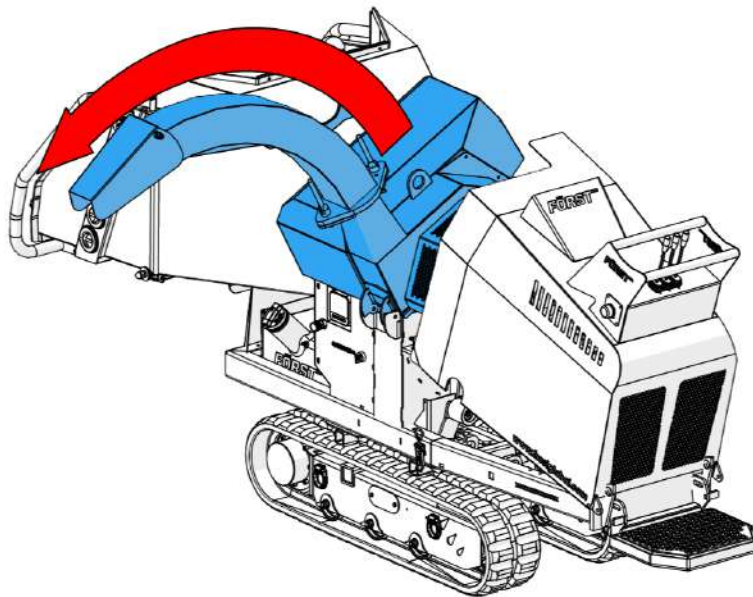


Figure 57 - Open chipping chamber cover

NOTICE

When closing the chipping chamber, carry out these tasks in reverse. When installing the two chipping chamber cover bolts, torque to **86Nm**.

5.8 REMOVING THE SIDE PANEL

Removing the side panel will give you access to the following:

- Battery
- Hydraulic oil filter
- Hydraulic oil tank
- Stone trap
- Fuses
- Spring

To remove the side panel:

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Remove the bolts securing the panel (2, Figure 58).
4. Remove the side panel (1, Figure 59).

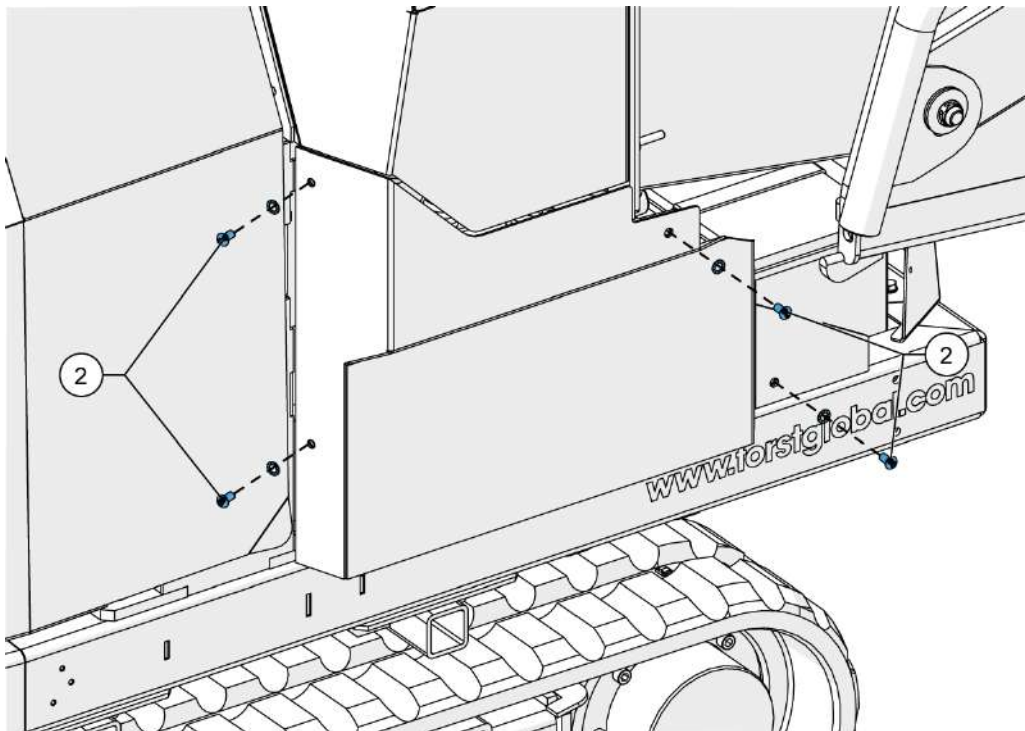


Figure 58 - Remove bolts

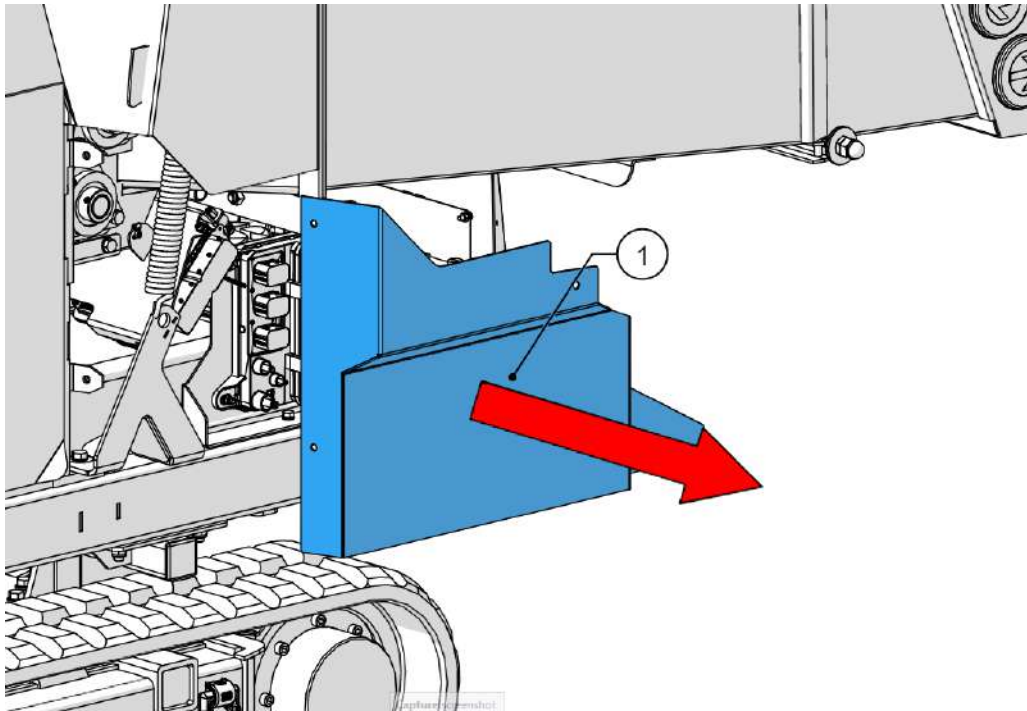


Figure 59 - Remove side panel

5.9 CHANGING THE BLADES



WARNING

The blades must not be used beyond the wear mark. Failure to comply with this could result in damaging the machine, injury, or loss of life.



WARNING

When changing the blades, be extremely careful of sharp edges.



WARNING

Rigger gloves must be worn whilst changing the blades. Hold the blades by the flat end.



WARNING

When moving the flywheel in any direction, position your hands correctly to avoid injury. Position your hands as shown below:

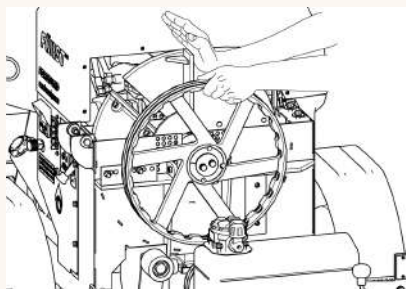


Figure 60 - Pushing the flywheel away from you

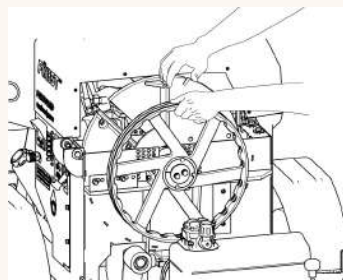


Figure 61 - Pulling the flywheel towards you



CAUTION

Failure to keep blades sharp will overload the engine and bearings which could result in a machine breakdown.

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Disconnect the battery leads.
4. Open the bonnet.

5. Open the chipping chamber cover.



Figure 62 - Flywheel locking tool

6. Turn the flywheel until it is in the locking position (Figure 63).
7. Insert the flywheel locking tool into the groove on the flywheel. The groove becomes visible once the wheel is in the correct position (Figure 63).
8. Insert the locking pin into the bolt hole on the locking tool.
9. Secure the flywheel locking tool in place using the M12 bolt.

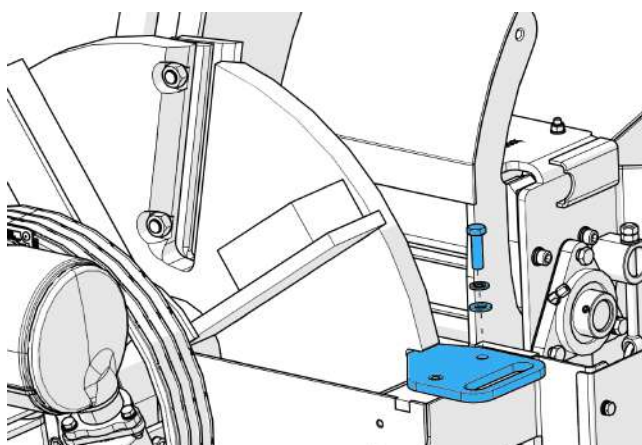


Figure 63 - Installing the flywheel locking tool

Removing the old blades:

1. Clean any debris from the knife bolts and nuts.
2. Use the 24mm socket from the tool pouch and a breaker bar to loosen the two blade bolt sets.
 - Leave the blade bolts in place until the blade is ready for removal.
 - When removing the two bolt sets, do not drop any nut, bolt, or washer into the chipping chamber.
3. Remove the lower blade bolt set.



CAUTION

New or resharpened blades are sharp, rigger gloves must be worn. During the next step hold the blade with one hand to make sure it does not fall.

4. Holding onto the blade, remove the upper blade bolt set.

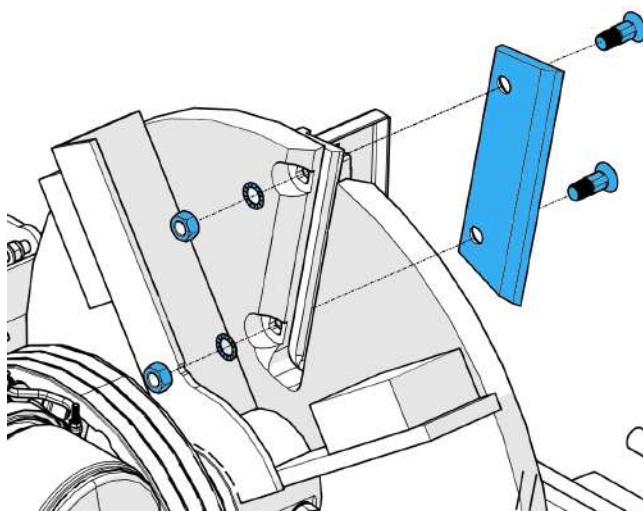


Figure 64 - Blade removal

Installing the replacement blades:



CAUTION

Use genuine Först blades and blade bolt sets only. Replace the blade bolt sets every time the blades removed.



CAUTION

When fitting a blade bolt set, NO lubricant or anti-seize compound is to be applied to the bolts. (310Nm is a dry torque).



CAUTION

The replacement blades must not have any debris underneath them when tightened, the smallest amount of debris behind the blade could result in blade failure causing damage to the machine.

5. Clean the blade bed thoroughly and remove any surface rust and debris.
6. Thoroughly clean and degrease the replacement blade.
7. Put the replacement blade against the blade bed.
8. Attach the blade using a new blade bolt set in the upper hole.
9. Fit the blade bolt set into the lower hole.
10. To locate the countersink of the bolt and blade, gently wiggle the blade when tightening the nut by hand.
11. Before you torque the blade bolt set, make sure that the back edge of the blade is tight against the flywheel blade bed heel.

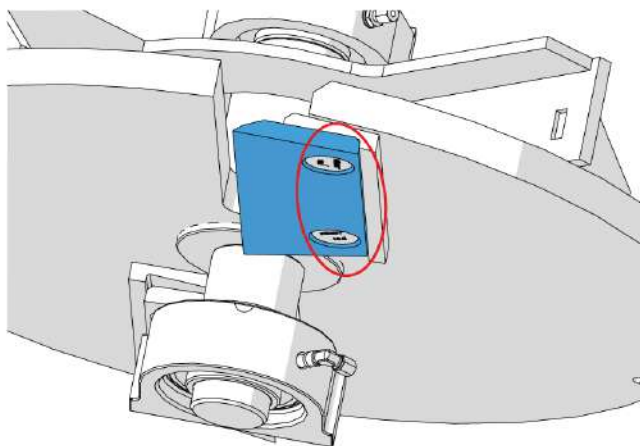


Figure 65 - Correct position of the back edge of the blade



CAUTION

Shims may be required to keep the gap between the blade and the anvil on the inner edge (closest to the flywheel shaft) at 1mm.

12. Torque the two blade bolt sets to **310Nm** with a calibrated torque wrench and 24mm socket.

NOTICE

You can only torque a blade bolt set once. Never re-use a blade bolt set once fitted to the flywheel and torqued to 310Nm.

13. Make sure the blade is fitted correctly.
14. Remove the flywheel locking tool.
15. Carefully turn the flywheel to the next blade position and repeat the process for the second blade.

NOTICE

If you need to carry out further work with the chipping chamber lid open, rotate the flywheel so that both blades are inside the chipping chamber.

16. When the work is complete, close the chipping chamber cover, install the two M12 bolts, and torque to 86Nm.
17. Connect the battery leads.

5.10 ABOUT BLADE SHARPENING

- After sharpening, reset the blade gap by using a blade shim.
 - Shims are available in the following thicknesses:

For optimum performance, keep the blades on the woodchipper sharp.



Only professionals can sharpen blades for the woodchipper.

Blade sharpening requirements

The minimum safe blade size is shown in Figure 66.


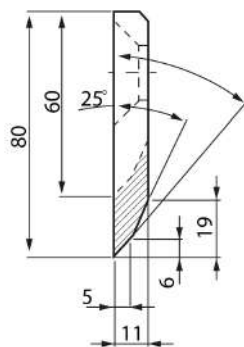


Figure 66 - Blade sharpening wear limit: 80mm to 60mm

Table 5 - Shim part numbers

| Size mm | Part Number |
|---------|--------------|
| 0.5 | 12-03-093.05 |
| 1 | 12-03-093.10 |
| 1.5 | 12-03-093.15 |

- Do not fit more than one shim under each blade.
- Set a gap of 1 mm from the inner blade tip to anvil after sharpening.
To do so, place an appropriate shim under the blade.
- The outer blade tip is automatically set, as the anvil is set at an angle to the blade.
- With a 1 mm gap at the inner blade tip, the outer blade tip should be 3 mm from the anvil.

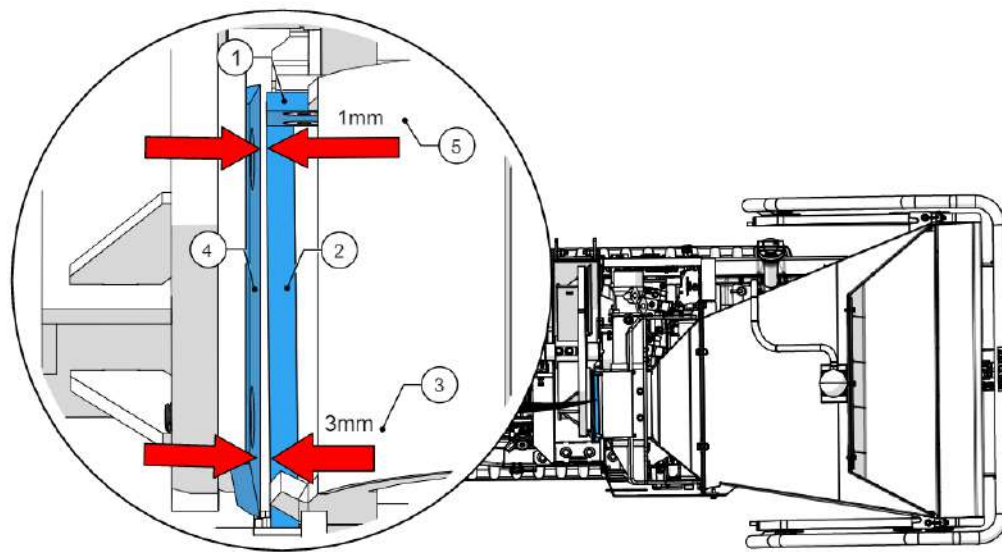

- | | |
|---------------------|--------------------|
| 1 Side Anvil | 4 Flywheel Blade |
| 2 Anvil | 5 Inside Blade Gap |
| 3 Outside Blade Gap | |

Figure 67 - Blade gaps

When changing the blades, make sure each blade bolt set is replaced every time the blades are changed. Make sure each blade bolt set is torqued up to 310Nm.



CAUTION

When fitting a blade bolt set, NO lubricant or anti-seize compound is to be applied to the bolts. (310Nm is a dry torque).

5.11 TURNING OR REPLACING THE MAIN ANVIL

If an anvil is worn or damaged, turn or replace it with a new one.

💡 You can turn an anvil 180° to use it a second time.

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Open the bonnet and chipping chamber cover to improve access and visibility.
4. Locate the anvil clamp (1, Figure 68).
5. Remove the M12 clamp bolt, spring washer, and plain washer.
6. Remove the anvil clamp.

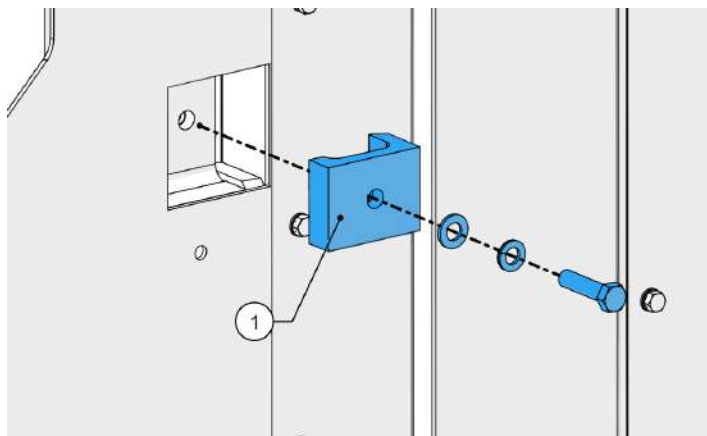


Figure 68 - Anvil clamp position

7. Clear any debris to gain access to the end of the anvil.
8. Insert a suitable slide hammer into the M8 hole (2, Figure 69).

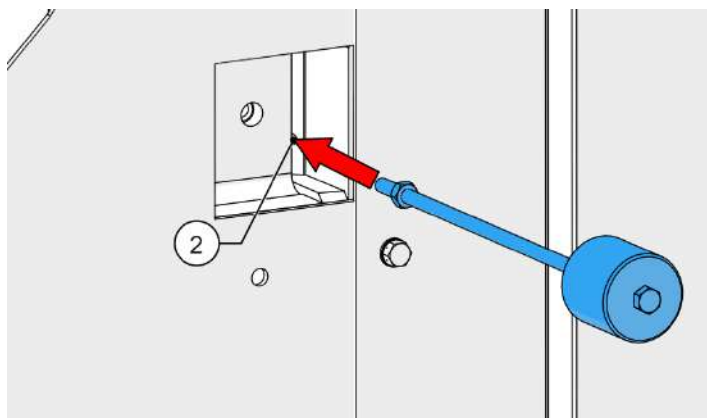


Figure 69 - Slide hammer

9. Lubricate the anvil surface to make it easier to remove.

10. Using the slide hammer, extract the anvil (3, Figure 70) through the side of the chamber.

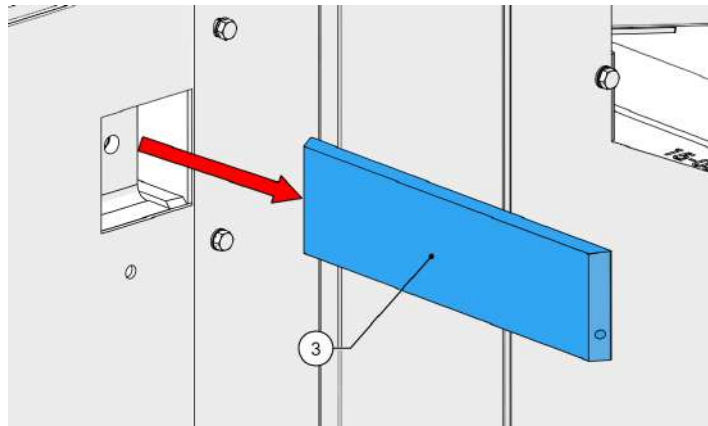


Figure 70 - Anvil removed

11. Check the anvil seats inside the chamber for damage or wear.
12. Make sure the anvil seats are free from dirt and debris before inserting anvil (4, Figure 71).

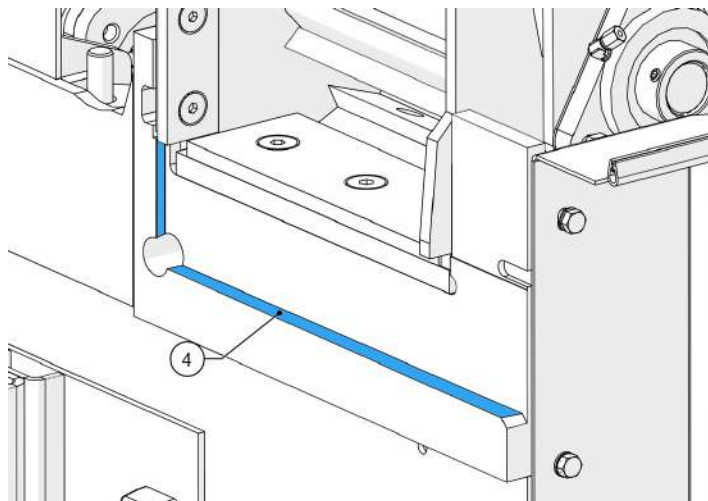


Figure 71 - Anvil seat

13. Make sure you:
 - a. Clean all surfaces of the anvil.
 - b. Inspect the anvil for any damage that would prevent further use.
 - c. If using the same anvil turn it 180° from its previous position.

14. Insert the anvil through the side of the chamber, making sure that the anvil stays tight to the bed plate (5, Figure 72).

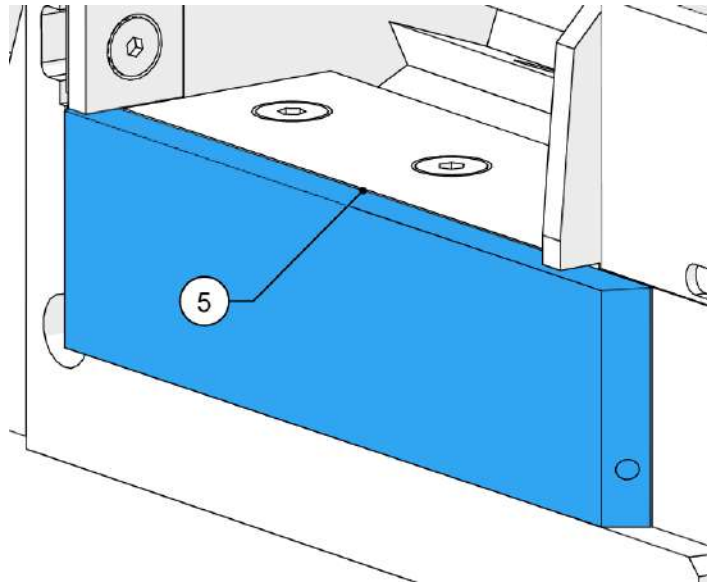


Figure 72 - Anvil tight to the bedplate

15. Push the anvil along the lower seat.
16. Push the anvil into the seat under the side anvil (6, Figure 73).

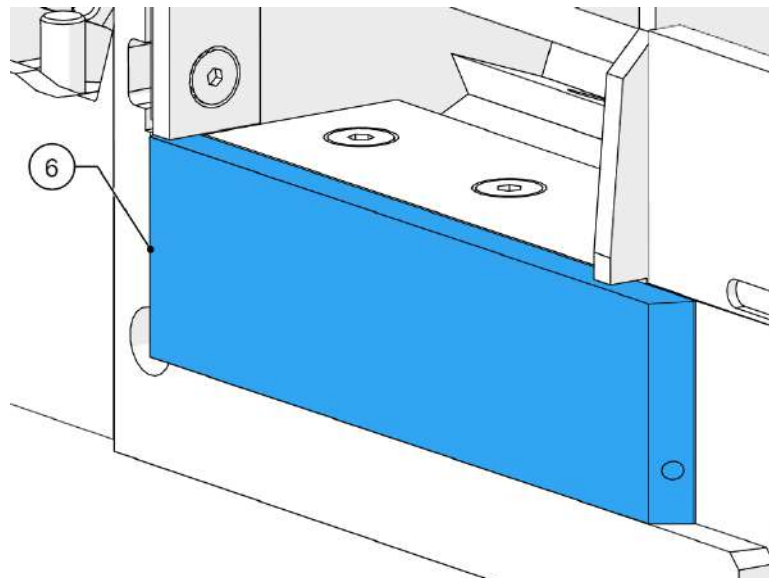


Figure 73 - Anvil in vertical seat

17. Inspect the M12 bolt and washers.
If there are signs of damage or wear, replace them.
18. Attach the anvil clamp and the securing bolt.
19. Torque the M12 clamp bolt to 86Nm.
20. Make sure the anvil is fitted correctly.
21. Close the chipping chamber cover and bonnet.

5.12 ADJUSTING THE MAIN BELT TENSION

The flywheel V belts must be checked for tension and condition. If any belt shows sign of wear, surface damage, shredding, excessive glazing, or have been stretched to their limit, they must be replaced.

Multiple belt drives must have all belt drives replaced at the same time. Belts that are too loose will cause poor cutting performance, excessive belt and pulley wear.

To check the main belt tension and adjust it if required, do the following:

1. Stop the engine.
 - ▶ Refer to "Shutting down the machine" on page 74
2. Remove the ignition key and put it in a safe place.
3. Open the bonnet.
4. Locate the main belt tensioner (1, Figure 74).

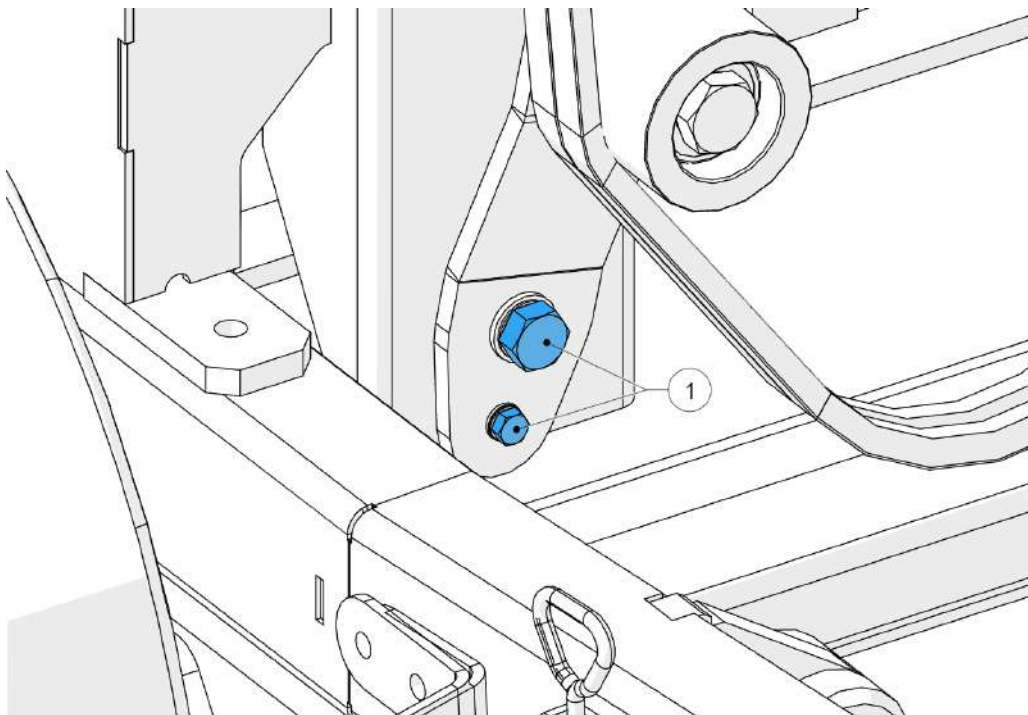


Figure 74 - Main belt tensioner

5. For the main belts, check the belt tension. The deflection should be the width of one belt.

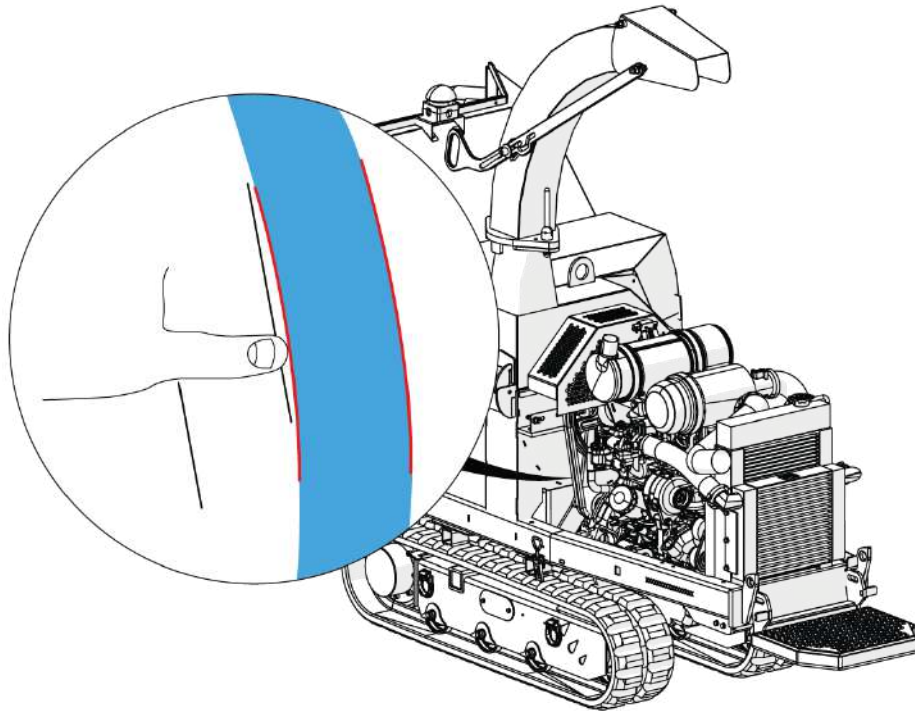


Figure 75 - Correct main belt tension

6. To adjust the tension:
 - a. Using a suitable tool, loosen the main tension belt.
 - b. With the bolts loosened, use a suitable tool to move the belt tensioner. Pressing against the belt will increase the tension and moving away from the belt reduces the tension.

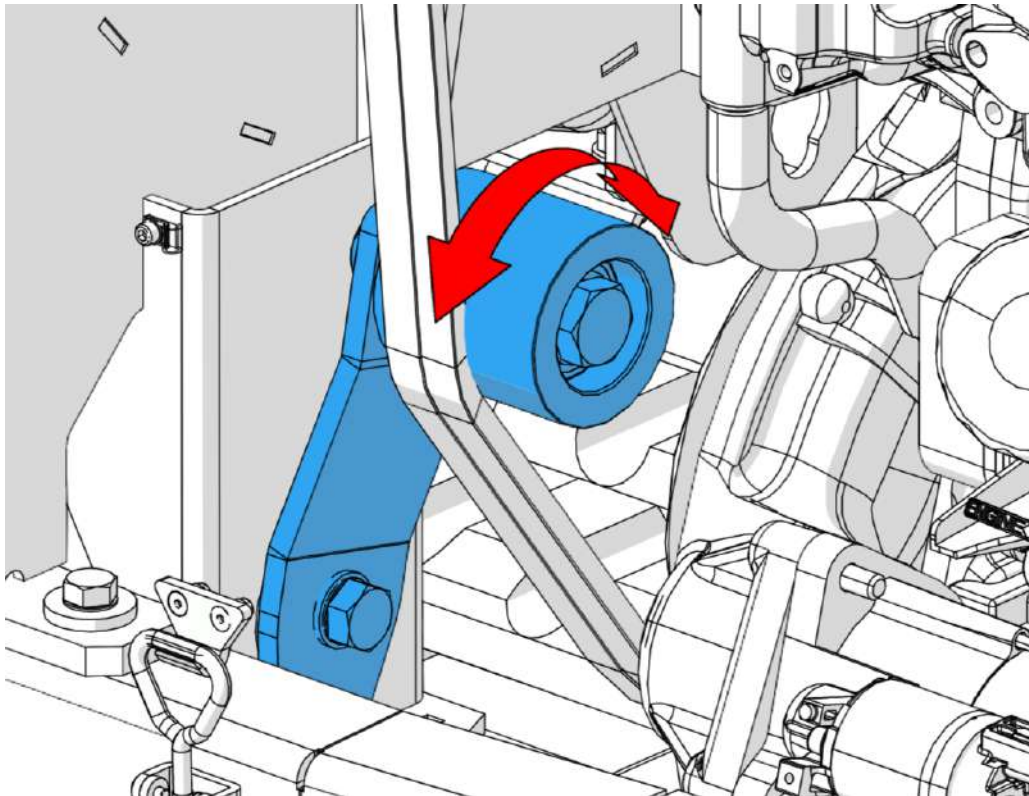


Figure 76 - Adjust tension

7. Once the tension has been adjusted, close the bonnet.
8. Start the engine.
 - ▶ *Refer to "Starting the Machine" on page 70*
9. Allow the engine to idle for 30 seconds.
10. Turn the engine off and remove the key from the ignition switch.
11. Open the bonnet.
12. Check the main belt tension.
If the tension is incorrect, adjust the tension again.

5.13 HYDRAULIC OIL FILTER



CAUTION

Use suitable protective gloves to prevent fluid contact with skin.



CAUTION

Use approved local authority environmental procedures when disposing of fluids and filters.

Use protective plastic gloves to keep oil off skin, dispose of oil and filter in an environmentally responsible manner.

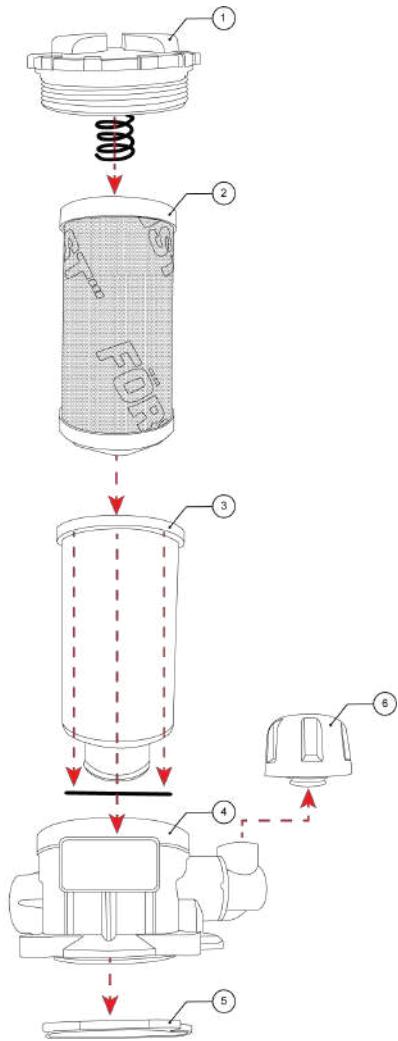


Figure 77 - Hydraulic oil filter

| Item | Description | Qty | Item | Description | Qty |
|------|----------------|-----|------|-------------|-----|
| 1 | Filter cap | 1 | 5 | Housing | 1 |
| 2 | Filter Element | 1 | 6 | Gasket | 1 |
| 3 | Filter bowl | 1 | 7 | Breather | 1 |
| 4 | O-ring | 1 | | | |

5.14 CHANGING THE HYDRAULIC FILTER



CAUTION

Use suitable protective gloves to prevent fluid contact with skin.



CAUTION

Use approved local authority environmental procedures when disposing of fluids and filters.

1. Stop the engine.
2. Remove the key from the ignition and store it in a safe place.
3. Remove the side panel and locate the hydraulic filter housing.
4. Using a suitable tool, unscrew and remove the cap from the hydraulic filter housing.
5. Locate the lifting tab on top of the hydraulic filter and gently lift the tab by a small amount.
This allows the oil on top of the filter to leak back into the tank.



Figure 78 - Lifting tab

6. When the oil level has dropped, remove the filter and the filter bowl together.
7. Remove the filter from the filter bowl.
8. Dispose of the filter.
9. Clean the filter bowl.
10. If the level of hydraulic oil in the tank is low, add more oil.
11. Before refitting a new filter, apply a small amount of hydraulic oil to the filter O-ring.
12. Place the filter in the filter bowl.
13. Place the filter and the filter bowl into the filter housing.
14. Screw the cap onto the filter housing and torque to 30 Nm.
15. Clean the filter housing with a suitable degreaser.
16. Close the bonnet.
17. Start the engine of the woodchipper.
18. When the engine of the woodchipper is warm, stop it and check the hydraulic filter housing for leaks.

5.15 DRAINING THE HYDRAULIC OIL



CAUTION

Use suitable protective gloves to avoid contact with skin.



CAUTION

Use suitable protective eye wear to protect eyes from contact with oil.



CAUTION

Use approved local authority environmental procedures when disposing of fluids.

You may need to drain the hydraulic oil from the machine if:

- A leak has been detected on the machine
 - The machine needs servicing
 - The machine needs maintenance
1. Stop the engine.
 2. Remove the ignition key and keep in a safe place.
 3. Remove the side panel.
 4. Remove the hydraulic filter filler cap.
 5. Remove the filter element from the filter bowl.
 6. Using a suitable tool capable of sucking oil, insert the tool into the hydraulic oil filter and suck the old oil out of the tank.
 7. Dispose of the old oil safely and correctly.

5.16 BATTERY

Before using and charging batteries, read the following safety information:



WARNING

Battery acid is highly corrosive. Always wear eye protection when handling a battery. Do not tilt battery as acid could escape from vents.



WARNING

Keep children away from acid and batteries.



WARNING

When charged, battery emits highly explosive hydrogen gas. Do not allow fires, sparks, naked flames or smoking near the battery. Also avoid electrostatic discharges and electrical sparks when dealing with cables and electrical equipment.



CAUTION

Avoid short-circuiting the battery terminals.

Do not short-circuit from the positive terminal to any metal machine part. Take care not to short-circuit the battery due to loose metal parts and tools.

NOTICE

Dispose of old batteries at an authorised collection point. Never dispose of batteries in household waste.

5.16.1 FIRST AID

- If acid is splashed into eyes, immediately rinse with clean water for several minutes and consult a doctor.
- If acid is swallowed, consult a doctor immediately.

5.16.2 GOING INTO LONG TERM STORAGE

Charge the battery and store it in one of the following locations:

- Remove from machine and store in a cool, frost-free place
- On the vehicle, with the negative terminal disconnected
- Check the battery charge at regular intervals. If the battery charge is low, charge the battery.

5.16.3 REPLACING THE BATTERY

You can replace an old battery with a new one.

1. Stop the engine.
2. Remove the key from the ignition and keep in a safe place.
3. Remove the panel covering the battery.
4. Remove any debris from around the battery.
5. Remove the negative lead at the battery (1, Figure 79), then the positive lead (2, Figure 79).

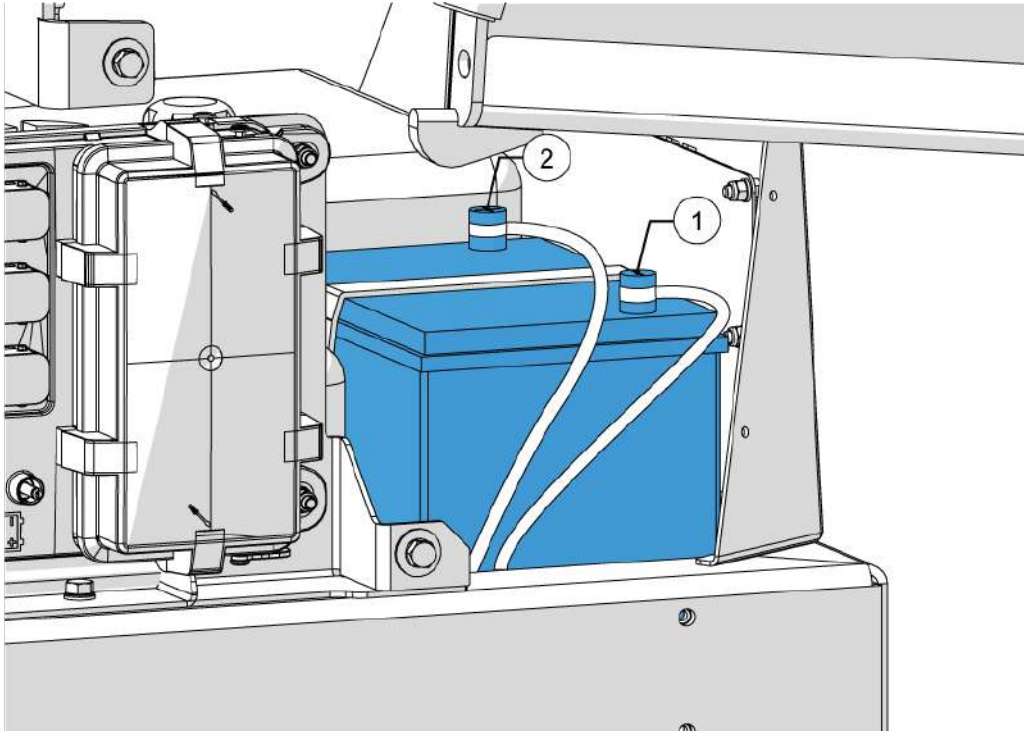


Figure 79 - Battery terminals

6. Loosen battery clamp screw and remove clamps.
7. Remove the battery.
8. Clean the battery tray.
9. Install the new battery.
10. Tighten battery clamp screw.
11. Connect the positive lead to the battery (2, Figure 79), then the negative lead (1, Figure 79).
12. Install the panel covering the battery.

5.16.4 CHARGING THE BATTERY

If the woodchipper has a flat battery, charge the battery.

NOTICE

When charging the battery, take the following into consideration:

- Ensure good ventilation
- Use suitable direct current mains chargers only
- The charging current should be 10% of the battery Ah power rating
- Use a charger with a constant charging voltage of 14.4V
- If the acid temperature rises above 38°C, stop charging

To charge the battery:

1. Replace the battery as described in Refer to "Replacing the battery" on page 117.
2. Remove the battery from the woodchipper.
3. Connect the battery's positive terminal to the charger output positive.
4. Connect the battery's negative terminal to the charger output negative.
5. Switch on the charger.
The battery is fully charged when the charging voltage or acid specific gravity has stopped rising for two hours.
6. When charging is complete, switch off the charger, then disconnect the battery.
7. Install the battery.

5.16.5 JUMP STARTING THE BATTERY


If the woodchipper has a flat battery, you can use a support vehicle to jump start the battery.



CAUTION

When attaching jump leads to a battery, make sure that only the lead ends make contact with the battery terminals.

1. Stop the engine.
 2. Remove the key from the ignition and keep in a safe place.
 3. Remove the panel covering the battery.
 4. Attach the red jump lead to the positive battery terminal on both the woodchipper and the support vehicle.
 5. Attach the black jump lead to a good earth on the woodchipper and the negative battery terminal on the support vehicle.
 6. Start the engine.
 7. After the engine of the woodchipper starts, disconnect the black jump lead.
 8. Disconnect the red jump lead.
 9. Install the panel covering the battery.
- If the battery is still flat, contact a repair agent.

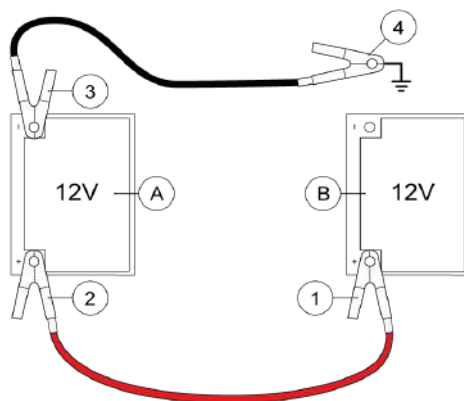

- | | |
|----------------------------|----------------------------|
| A Support vehicle battery | B Machine battery |
| 1 Positive machine | 3 Negative support vehicle |
| 2 Positive support vehicle | 4 Earth |

Figure 80 - Jump start

5.17 OILS, FLUIDS AND LUBRICANTS

Table 6 - Oils, fluids and lubricants

| Oils, Fluids, and Lubricants | | |
|------------------------------|-------------------------------|------------------------------------|
| Item | Assembly | Product |
| 1 | Engine oil | HD SAE 10w40 (API CJ-4 or ACEA E9) |
| 2 | Coolant | Mono-Ethylene glycol 50/50 mix |
| 3 | Hydraulic oil | ISO 46 (VG 46) |
| 4 | Fuel | Diesel EN590 |
| 5 | General greasing ¹ | Lithium EP1 General Purpose |
| 6 | General oil lubrication | |

Please consult your engine operator's manual for oil quantities relating to your engine type.

¹The greasing points can be found on the control panel. Please do not over grease, 2 x pumps per grease nipple should be sufficient.

5.18 FASTENER TIGHTENING TORQUES

All machine fastener torques should be regularly checked in accordance with the table below. In particular, those for the flywheel blades, flywheel bearings, axle assembly, hitch, road wheels and engine mounts.


 

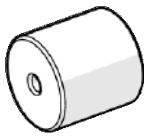

Table 7 - Torque settings

| Tightening Torques for class 8.8 and 10.9 fasteners | | | | |
|---|---------------------|---------------------|---------------------|---------------------|
| | Class 8.8 | | Class 10.9 | |
| Thread Size (mm) | Nominal Torque (Nm) | Max/Min Torque (Nm) | Nominal Torque (Nm) | Max/Min Torque (Nm) |
| M6 | 10 | 9.5/10.4 | 14.5 | 14/15.3 |
| M8 | 25 | 23.1/25.3 | 35 | 34/37.2 |
| M10 | 49 | 46/51 | 72 | 68/75 |
| M12 | 86 | 80/87 | 125 | 117/128 |
| M16 | 210 | 194/214 | 310 | |
| M20 | 410 | 392/431 | 610 | 558/615 |
| M24 | 710 | 675/743 | 1050 | 961/1059 |

5.19 TOOLS AND ACCESSORIES

The following is a list of tools and accessories supplied with the machine.

Table 8 - Tools and accessories

| Item | Part Number | Quantity | Item Description | Reference |
|------|-------------|----------|---|-------------------------------------|
| 1 | 12-19-124 | 1 | Lifting Tool - Top Feed Roller  | Removing blockages |
| 2 | 29-19-023 | 1 | Flywheel Locking Tool  | Changing the blades |
| 3 | 12-02-061 | 1 | Blade bolt socket  | Changing the blades |
| 4 | 98-98-096 | 1 | 13/17 mm combination spanner | |
| 5 | 98-98-097 | 1 | 19/24 mm combination spanner | |
| 6 | | 1 | Flywheel block (not supplied if locking lock is issued) | |
| 7 | 12-02-060 | 1 | Slide hammer weight  | Turning or replacing the main anvil |
| | 12-99-009 | | Bolt (M8 x 300)  | |
| 8 | N/A | 2 | Machine key | |

5.20 SERVICE SCHEDULE

The service schedule must be carried out by a competent person.

NOTICE

Remember to carry out the Först standard inspection at every service.

Table 9 - Service schedule

| Hours of operation | Tasks | Requirements and part numbers |
|--------------------|--|--------------------------------|
| 50 | Replace the hydraulic oil filter element | 12-24-054 |
| | Top up the hydraulic oil, if required | VG ISO 46 |
| | Check all the engine components are serviceable after break-in period (50 hours) | |
| | Machine check over | |
| 250 | Replace outer air filter | 50-99-003 |
| | Drain the water from fuel filter | |
| | Check the cooling fan tension-indicator arrow | |
| | Check the engine wiring | |
| | Check the coolant hoses and clamps | |
| | Check and carry out forced regeneration if required | |
| | Replace the bottom feed roller inner bush | 12-01-052 |
| | Grease the bearings | Lithium EP1 General Purpose |
| | Machine check over | |
| 500 | All 250 hours tasks | |
| | Replace the inner air filter | 50-99-004 |
| | Drain and replace the engine oil | 10w40 (API CJ-4 or ACEA E9) |
| | Replace the engine oil filter | 50-99-001 |
| | Replace the fuel filter | 50-99-002 |
| | Replace the hydraulic oil filter element | 12-24-028 |
| | Check the coolant Specific Gravity (SG) (-25 C or lower) | |
| | Machine check over | |
| 750 | All 250 hours task | |
| 1000 | All 500 hour tasks | |
| | Replace the cooling fan belt | |
| | Drain and replace the coolant | Mono-Ethylene glycol 50/50 mix |
| | Drain and replace the hydraulic oil | ISO 46 (VG 46) |
| | Replace the hydraulic filter element | 12-24-028 |
| | Replace the flywheel belts | 12-10-184 |

This page intentionally left blank

CHAPTER 6: TROUBLESHOOTING

In this chapter:

| | |
|--|-----|
| 6.1 The engine doesn't crank | 126 |
| 6.2 The engine cranks but doesn't fire | 126 |
| 6.3 The screen is blank | 127 |
| 6.4 The feed rollers are not turning | 127 |
| 6.5 The woodchipper suddenly stops running | 129 |
| 6.6 The woodchipper is struggling to chip wood | 129 |
| 6.7 Hydraulic oil is leaking | 130 |

6.1 THE ENGINE DOESN'T CRANK

| Possible cause | Check | Corrective action |
|-----------------|--|--|
| Battery | Check battery terminals | Tighten if loose |
| | Check battery is charged | Charge if flat |
| | Check red and black battery cables at the engine connection | Tighten if loose |
| | Check battery condition | Replace if damaged |
| Bonnet sensor | Check condition | Replace if damaged |
| | Check if Bonnet is lit up on the display screen when the bonnet is down | Replace sensor or tighten connector plug |
| | Check sensor gap | Adjust to approx. 3-4 mm |
| | Check plug security | Tighten if loose |
| Blown fuse | Check fuse for controller | Replace if blown Check fuse security |
| Flywheel seized | Check flywheel and chamber for blockages | Clear blockages |
| Ignition switch | Check plug and wiring | Refit or replace |
| Starter motor | Check wiring and connections | Refit or replace |

6.2 THE ENGINE CRANKS BUT DOESN'T FIRE

| Possible cause | Check | Corrective action |
|---------------------------------|---|------------------------------|
| Fuel is not flowing | Check fuel level | Top up if empty |
| | Check fuel tank for debris | Remove any debris |
| | Check the fuel filter for debris | Replace filter |
| | Check fuel lines for damage or kinks | Replace or remove kinks |
| | Check banjo bolt for blockage | Clear blockage |
| | Check fuel cap vent | Clean vent or replace cap |
| Poor quality fuel or wrong fuel | Check fuel | Drain and refill fuel system |
| Air in the fuel system | Check for loose fuel line clips or damaged hoses | Tighten or replace |
| Water in the fuel system | Drain water from the system | |
| Battery | Check battery terminals | Tighten if loose |
| | Check battery is charged | Charge if flat |
| | Check red and black battery cables at the engine connection | Tighten if loose |

| Possible cause | Check | Corrective action |
|----------------------------|--------------------------|--------------------|
| | Check battery condition | Replace if damaged |
| Ignition switch is damaged | Check plug and wiring | Refit or repair |
| Debris in chamber | Check chamber for debris | Remove any debris |

6.3 THE SCREEN IS BLANK


| Possible cause | Check | Corrective action |
|--|---|---|
| Loose CAN cable (communication cable between screen and controller) | Check both ends of cable for security | Tighten if loose |
| Blown fuses | Check fuses | Replace if blown Check fuse security |
| Battery | Check battery terminals | Tighten if loose |
| | Check battery is charged | Charge if flat |
| | Check red and black battery cables at the engine connection | Tighten if loose |
| | Check battery condition | Replace if damaged |

6.4 THE FEED ROLLERS ARE NOT TURNING

| Possible cause | Check | Corrective action |
|---|--|---|
| Lack of hydraulic oil | Check hydraulic oil level | Top up if required |
| Loose belts | Check belt tension | Tension correctly |
| Low RPM | Check throttle | Ensure throttle is in the max position. |
| Damaged shaft or coupling at feed rollers | Check feed roller shaft and coupling | If faulty, contact repair agent |
| Speed sensor | Check sensor for damage | Replace if damaged |
| | When the ignition is on and there is metal in front of the sensor, the orange indicator light is ON | |
| | Check sensor gap | Adjust to approx. 3 to 4 mm |
| | Check plug security | Refit or replace as required |
| Valve block solenoid plugs | Check for function, security and condition | Refit or repair |

| Possible cause | Check | Corrective action |
|---------------------------------------|--|--|
| Flow control valve | Check valve is free to rotate | Set the dial to 5 |
| E-stop button depressed | Check E-stop button | Reset E-stop button |
| Faulty stop bar or hopper tray sensor | Check stop bar sensor Check hopper tray sensor Perform a function check. When the ignition is on and there is metal in front of the sensor, the orange indicator light is <u>OFF</u> | Replace sensor if damaged or not working |

6.5 THE WOODCHIPPER SUDDENLY STOPS RUNNING

| Possible cause | Check | Corrective action |
|----------------------|---|--|
| Loss of oil pressure | Check oil level | Top up if required |
| | Check oil pressure switch | Replace if damaged or faulty |
| Overheated | Check cooling fan and belt | Replace if damaged |
| | Check fan guard for blockages | Clear blockages |
| | Check coolant level | Top up if required |
| |  WARNING Pressurised system. Hot coolant. Wait until the radiator is cool, then loosen the cap slowly to relieve pressure. | |
| Flywheel seized | Check flywheel and chamber for blockages | Clear blockages |
| Bonnet catches | Check condition and security | Refit or replace |
| Bonnet sensor | Check condition | Replace if damaged |
| | Check if Bonnet is lit up on the display screen when the bonnet is down | Replace sensor or tighten connector plug |
| | Check sensor gap | Adjust to approx. 3 to 4mm |
| Fuel not flowing | Check fuel level | Top up if empty |
| | Check fuel tank for debris | Remove any debris |
| | Check in-line fuel filter for debris | Replace filter |
| | Check fuel lines for damage or kinks | Replace or remove kinks |
| | Check banjo bolt for blockage | Clear blockage |
| | Check fuel cap vent | Clean vent or replace cap |
| Electrical issue | Check battery and connections | Replace, charge or tighten |
| | Check ignition switch | Refit plug |
| | Check wiring and connections | Replace, tighten or refit |
| | Check fuses | Replace if blown |

6.6 THE WOODCHIPPER IS STRUGGLING TO CHIP WOOD


| Possible cause | Check | Corrective action |
|-------------------|-------------------|---|
| Lack of fuel | Check fuel system | Clean or refill fuel system as required |
| Lack of air | Check air filter | Clean or replace as required |
| Poor quality fuel | Check fuel | Drain and refill fuel system with a better quality fuel |

| Possible cause | Check | Corrective action |
|------------------------------|-----------------------|--------------------|
| No stress occurring too soon | Check main belts | Tension correctly |
| Low RPM | Check throttle | Adjust as required |
| Blade condition | Check blade sharpness | Replace if dull |

6.7 HYDRAULIC OIL IS LEAKING

| Possible cause | Check | Corrective action |
|---------------------------------|---------------------------|----------------------------|
| Hydraulic oil level is too high | Check hydraulic oil level | Drain to correct level |
| Loose hydraulic fitting | Locate leaking fitting | Tighten or replace fitting |

HYDRAULICS SCHEMATIC

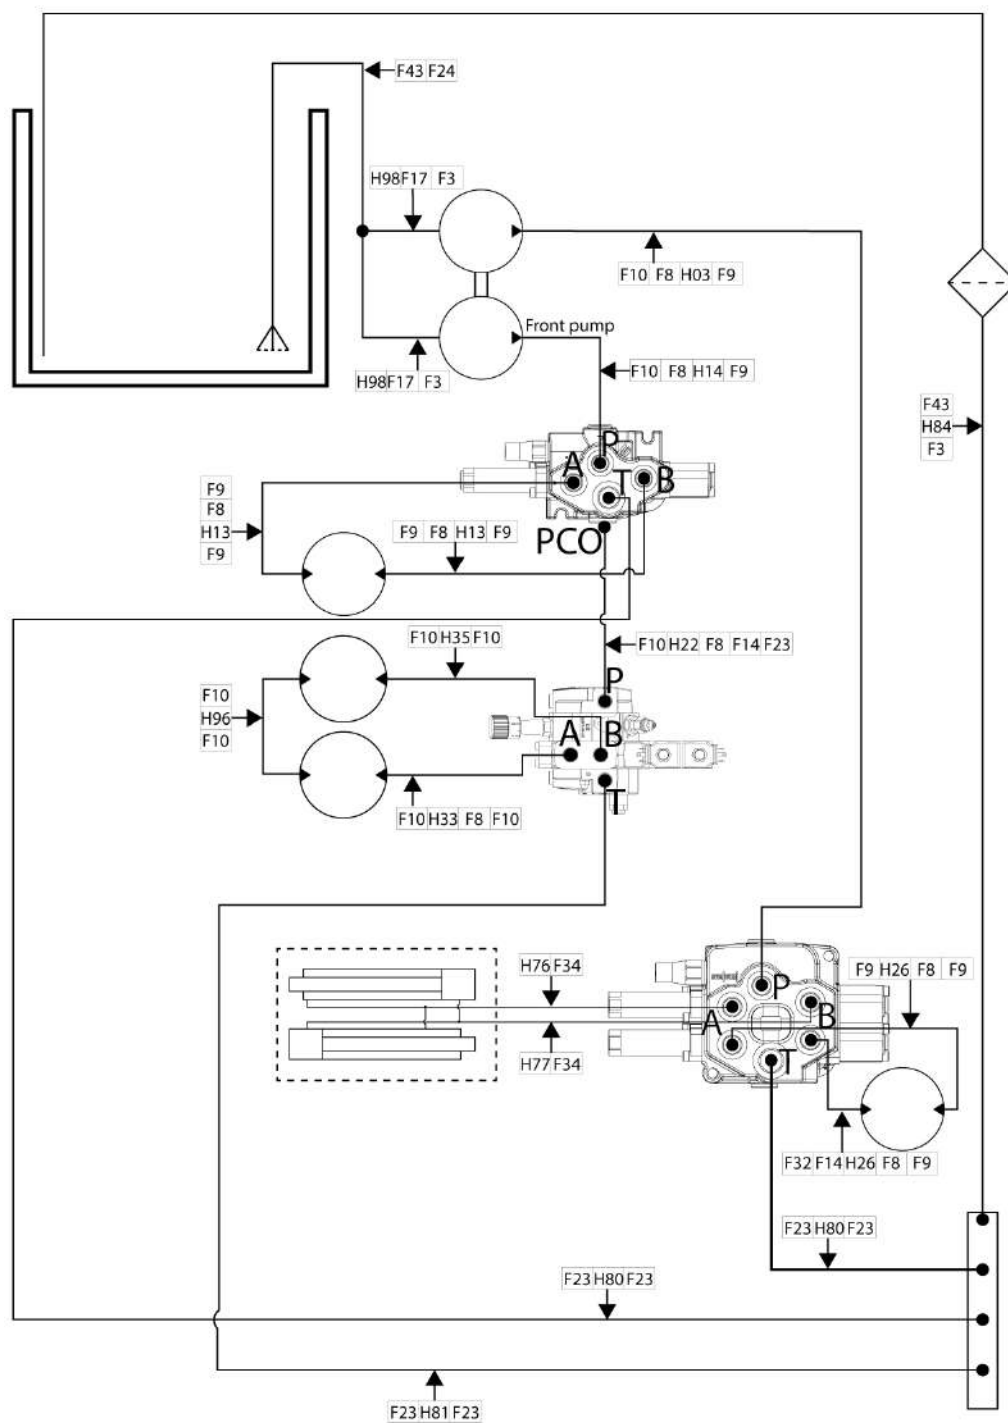

FÖRSTASSIST

***FÖRST*ASSIST**

Please contact FörstAssist if you have any enquiries or if you require any assistance.



service@forstglobal.com



+44 (0) 1264 721792

WARRANTY

WARRANTY STATEMENT

1. Redwood Global Ltd guarantee all Först equipment supplied by them against any defect in manufacture and assembly – this guarantee is for a period of 3 years commencing on the date of sale to the first end user.
2. The guarantee will not apply to a failure where normal use has exhausted the life of a component.
3. Engine units are covered independently by their respective manufacturer's warranties.
4. Redwood Global Ltd's liability under this guarantee is limited to repair at Redwood Global Ltd's premises, selected Först dealer or authorised Först Service Partner.
5. No liability will be accepted for consequential lost/stolen equipment or damage of any kind.
6. The owner is responsible to make sure the chipper is operated at all times in accordance with the user manual.
7. The Redwood Global Ltd guarantee will be invalidated if any of the following points apply:
 - Failure to use genuine Först parts
 - Failure to perform routine servicing and maintenance
 - Failed parts or assembly have been interfered with
 - Chipper has been modified without written approval from Redwood Global Ltd
 - Chipper has been used to perform tasks contrary to those stated in the Redwood Global Ltd User Manual
 - Exclusions to the above warranty terms are – fair wear and tear on fuses and bulbs, tyres and brakes, lubrications, filters, blades, anvils, feed rollers, and paintwork.
 - Where an extended warranty has been given this will be stated on the original chipper invoice and will be subject to further conditions as stated in our supplementary warranty terms.

WARRANTY CLAIMS

To obtain warranty service please contact Redwood Global Ltd for the nearest approved Först Dealer. Your nearest dealer can be obtained from Redwood Global Ltd at the address on the front of the User Manual. In the event of a failure Redwood Global Ltd must be notified within 7 working days.

CERTIFICATION

Refer to declaration certificates issued on receipt of your machine.

[illegible]

This page intentionally left blank

INDEX

A

About blade sharpening 105
Active Engine Codes 36
Adjusting 110
Aftertreatment System 91
Alarm Splash Screen 39
Autointelligence system 26

B

Battery 116
Blockages 75
Button Functions 31

C

Certification 134
Changing the blades 101
Changing the hydraulic filter 114
Charging the battery 118
Chipping chamber 25
Control panel 28
Control Screen 30
Conventions in this document 16
Copyright 3

D

Daily checks 87
Decals 50
Description of the user 13
Disclaimer 3
Draining 115
During storage 59

E

Emergency Stop buttons 29

Engine compartment 23
engine cranks but doesn't fire 126
Exterior components 21

F

Fastener Tightening Torques 121
Feed roller controls 27
feed rollers are not turning 127
Feed speed adjustment 69
FörstAssist 132
Forward and backwards buttons 27

G

General safety 48
Green and orange hopper buttons 66

H

Historic engine codes 37
Home screen 33
Hydraulic Oil Filter 113
Hydraulic oil is leaking 130
Hydraulics schematic 131

I

Ignition switch 40
Index 137
Installing the hopper 80
Intended use 18

J

Jump starting the battery 119

L

Left-hand and right-hand side 14
Loading machine onto a trailer 54

M

Machine Information 35
Machine lifting 55

Manual regeneration mode (forced
regeneration) 93

Manufacturer's Statutory Plate 41

N

Navigation 32

Noise test information 49

O

Obtaining documentation and
information 16

Oils, fluids and lubricants 120

Opening 97

Opening the Bonnet 96

Operating the machine 72

P

Positioning the machine for use 63

Preparation for use 62

Preparing the machine for storage 59

Pressure Washing 95

Purpose of these instructions 15

Put into storage 59

R

Red stop bar 27

Removing the discharge chute 56

Removing the hopper 78

Removing the side panel 99

Routine 85, 95

S

Safe slope operation 82

Safe working 44

Safety & function test 66

screen is blank 127

Sensors and DPF 34

Service record 135

Service schedule 123

Settings 38

Shutting down the machine 74

Starting the Machine 70

Storage 59

T

Take out of storage 60

Technical data 19

The engine doesn't crank 126

The woodchipper is struggling to chip
wood 129

The woodchipper suddenly stops
running 129

Tools and accessories 122

Trademarks 3

Turning 107

U

Unloading machine 54

W

Warranty 133

Warranty Claims 133

Warranty Statement 133

Weekly maintenance checks 89



Redwood Global Ltd
Unit 86, Livingstone Road,
Walworth Business Park,
Andover, SP10 5NS

www.forstglobal.com
sales@ForstGlobal.com



Scan for www.forstglobal.com